

BYSTRO

EN

Built-In Combi-Microwave Oven / Installation and User Manual

Thank you for choosing this product.

This Installation and User Manual contains important safety information and instructions on the operation and maintenance of your appliance. Please take the time to read this User Manual before using your appliance and keep this book for future reference.



BYS-CMWP28SSBI





2
YEAR
WARRANTY

Dear Customer,

Thank you for choosing Our product. We would like you to be satisfied with our product, which has been produced in our highly qualified, technological and modern facilities.

You can use your oven with pleasure and confidence for many years by performing required maintenance and showing necessary care. Read the whole manual. Retain the manual during use of the product. If you hand the product over to someone else, give them the manual as well.

⚠ This Operating Manual maybe prepared for multiple models. Some of the features mentioned may not be available in your product.

Symbol	Meaning
	Important Information
	Warning - Caution
	Risk of Electric Shock
	Risk of Fire

1 - Safety Instructions	4
Warnings for Microwave ovens.....	5
Install the oven in the counter.....	9
2 - Installation	9
Power Requirements.....	11
3 - Use and operation	12
Control Panel.....	13
Keypad.....	13
Warnings for Dishware.....	15
Cooking Mode Tables.....	22
Cleaning and Maintenance.....	32
4 - Maintenance and cleaning	32
Solving operational problems.....	33
5 - Troubleshooting	33
Solving Traditional Baking Problems.....	34
6 - Technical Specifications	36

Dear Customer,
We would like to thank you and congratulate you on your choice.
This new product has been carefully designed and built using top quality materials, and meticulously tested to ensure that it meets all your culinary requirements.

Please read and observe these simple instructions, which will enable you to achieve excellent results from the very first time you use it. This state-of-the-art appliance comes to you with our very best wishes.

This product is designed for domestic use. The manufacturer declines all responsibility for personal injury or property damage deriving from incorrect installation or improper, erroneous or unsuitable use.

The appliance must not be used by people (including children) with physical, sensorial or mental impairments, or by people without the necessary experience or knowledge, unless they are supervised or instructed in the use of the appliance by a person responsible for their safety.

Children must be supervised to ensure that they do not play with the appliance. Do not place aluminium foil, pots or similar objects in contact with the base inside the oven for cooking. The heating action of the lower heating element causes overheating of the lower part of the oven causing damage and serious consequences (risk of fire) even to the counter under the oven.

The appliance gets very hot during use.

Warning

Don't touch the heating elements inside the oven.

Attention

- If the door or the gasket seals of the door are damaged, the oven may not be used until it repaired by a qualified service technician;
- It is dangerous for anyone other than a service technician to perform any maintenance or repairs that involve the removal of any cover that protects against exposure to microwaves;
- Liquids or other foods must not be heated in airtight containers because they could explode;
- Children may not use the oven without supervision until they have been adequately instructed in its safe use and understand the dangers of using it incorrectly;
- Only use utensils that are appropriate for microwave ovens;
- When heating food in plastic or paper containers, check the oven frequently because of the risks of fire;
- If you see smoke coming out, turn off the appliance or remove its plug and keep the door closed to extinguish any flames;
- Heating beverages in the microwave oven can cause a delayed boil-over, so be careful when handling the container;
- The contents of baby bottles and baby food in jars must be mixed or shaken

and their temperature must be checked before feeding to avoid scalding;

- Eggs in the shell and whole hardboiled eggs must not be heated in microwave ovens because they could explode even after the end of heating in the microwave;
- A detailed explanation for cleaning the gasket seals of the doors of the cavity and adjacent parts;
- The oven must be cleaned periodically and all food residues must be removed;
- Failure to keep the oven clean could cause deterioration of the surfaces that could reduce the life of the appliance and cause dangerous conditions;
- Do not use rough abrasives or sharp metal scrapers to clean the glass door of the oven because they could scratch the surface and cause the glass to shatter.
- Do not use steam cleaners to clean the appliance.

Warning

The full width rectangular wire rack and pan are intended for use with conventional cooking modes only.

Do not use these accessories with any of the microwave functions. Doing so will cause arcing and will damage the interior of your appliance and will create a risk of fire.

The only included accessory that maybe used with microwave functions is the round metal wire stand.

Warnings for Microwave ovens

- Heating beverages in the microwave oven can cause a delayed boil-over, so be careful when handling the container;
- The contents of baby bottles and baby food in jars must be mixed or shaken and their temperature must be checked before feeding to avoid scalding;
- Eggs in the shell and whole hardboiled eggs must not be heated in microwave ovens because they could explode even after the end of heating in the microwave;
- A detailed explanation for cleaning the gasket seals of the doors of the cavity and adjacent parts;
- The oven must be cleaned periodically and all food residues must be removed;
- Failure to keep the oven clean could cause deterioration of the surfaces that could reduce the life of the appliance and cause dangerous conditions;
- Do not use rough abrasives or sharp metal scrapers to clean the glass door of the oven because they could scratch the surface and cause the glass to shatter.
- Do not use steam cleaners to clean the appliance.

Food Preparation

Danger of fire!

- Only use the microwave function for the preparation of food to be eaten.
- Any other uses can be dangerous or cause damage.

- For example, heated slippers or pillows filled with grain or cereals can catch fire even after several hours.

Pots and Pans

⚠ Danger of Injury!

- Porcelain and ceramic crockery can have small holes in the handles and cover.
- There can be cavities hidden behind these holes.
- If water gets into these cavities, the crockery could break.
- Do not use crockery that is unsuitable for microwave ovens.

⚠ Danger of Burns!

- The heat of the food can heat the dish. Always use a pot holder to remove dishes and accessories from the cooking chamber.

Microwave power and duration

⚠ Danger of fire!

- Never set values that are too high for the microwave power or the cooking time. The food could catch fire and damage the appliance. Follow the rules in these instructions.

Packaging

⚠ Danger of fire!

- Never heat food in thermal packaging.
- Food in containers made of plastic,

paper or other inflammable materials must be watched constantly.


⚠ Danger of burns!

- Air-tight packaging can explode. Follow the instructions shown on the package. Always use a pot holder to remove dishes.

Beverages

⚠ Danger of Burns!

- When heating liquids, boiling can be delayed. This means that the boiling temperature has been reached without forming the typical little steam bubbles. Even a slight knock can cause the sudden overflow of liquid or sprays.
- When heating liquids, always put a spoon in the container to avoid delayed boiling.

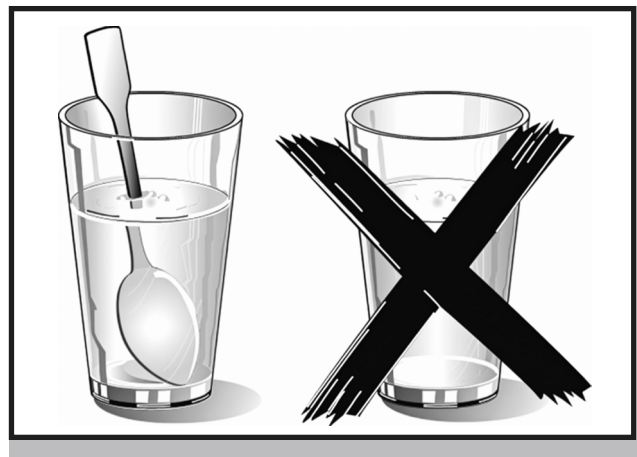

⚠ Danger of explosion!

- Never heat beverages or other types of food in covered containers.
- Never heat alcoholic beverages excessively.

Food for newborns

Danger of burns!

- Never heat baby foods in a covered container.
- Always remove the cover or nipple.
- When finished heating, always carefully shake or mix so that the heat is evenly distributed.
- Test the temperature before giving the food to the baby.

Foods with skin or peel

Danger of burns!

- Never cook eggs in the shell. Never heat hard-boiled eggs because they could explode even after the microwave is turned off. This also goes for molluscs and crustaceans.
- In the case of fried eggs, first pierce the yolk.
- In the case of foods with a hard peel or skin like apples, tomatoes, potatoes or sausage, the peel or skin could explode.
- Pierce the peel or skin before cooking.

Drying foods

Danger of fire!

- Never dry food in the microwave.

Foods with low water content

Danger of fire!

- Never defrost or heat foods with low water content, like bread, for too long or at an excessive power.

Oil

Danger of fire!

- Never defrost or heat foods with low water content, like bread, for too long or at an excessive power.

Causes of damage

Juice leaking from fruit

When preparing sweets containing very juicy fruit, do not overfill the baking dish. Fruit juices that overflow the baking dish can leave indelible stains.

Technical breakdown

Never use enameled baking dishes in the microwave because it could cause a technical breakdown.

Cooling with the door of the appliance open

The cooking chamber must only be cooled with the door closed. Check that nothing is stuck on the door of the appliance. Even if the door is only ajar, nearby cabinets can be damaged over time.

Very dirty gasket seal

If the gasket seal is very dirty, the door of the appliance does not close correctly during operation. The surfaces of nearby cabinets can be damaged.

Always keep the gasket seal clean.

Using the door of the appliance as a support surface

Do not rest or lean on the open door of the appliance and do not put dishware or accessories on it.

Using the microwave without food in the chamber


Only turn on the microwave after you have put the food in the cooking chamber. Without food inside, the appliance can become overloaded. The only exception allowed are brief tests of dishware (in this regard, see the warnings about pots and pans).

Moist foods

Do not leave moist foods in the cooking chamber for extended periods of time.


Important

The oven's identification plate is even accessible when the appliance is installed. This identification plate, which is visible when you open the door, shows all the information you will need when requesting replacement parts for the appliance.

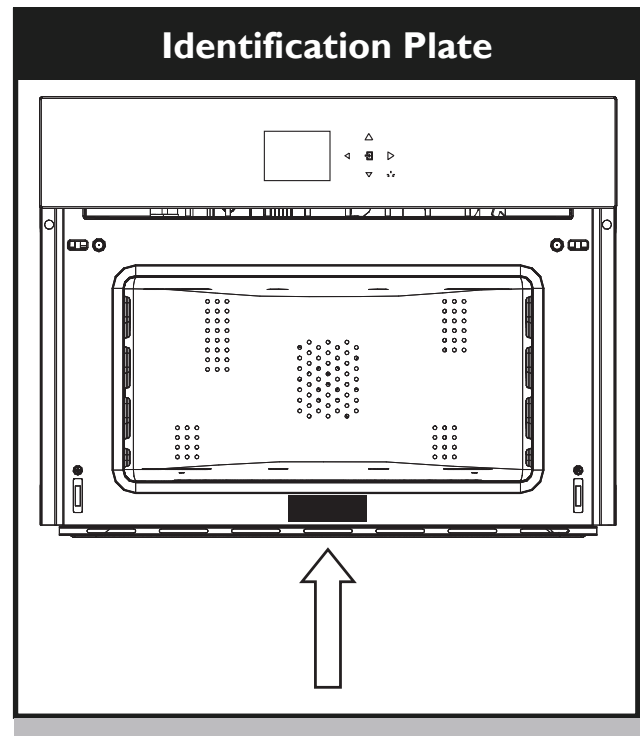

Install the oven in the counter

- The oven must be installed under a cook top, in a column, or combined with the relative food-warmer drawer.
- The dimensions of the space must be those shown in figure.
- The cabinet material must be able to withstand the heat.
- The oven must be centred within the walls of the cabinet and fixed with the screws and bushings that are provided.

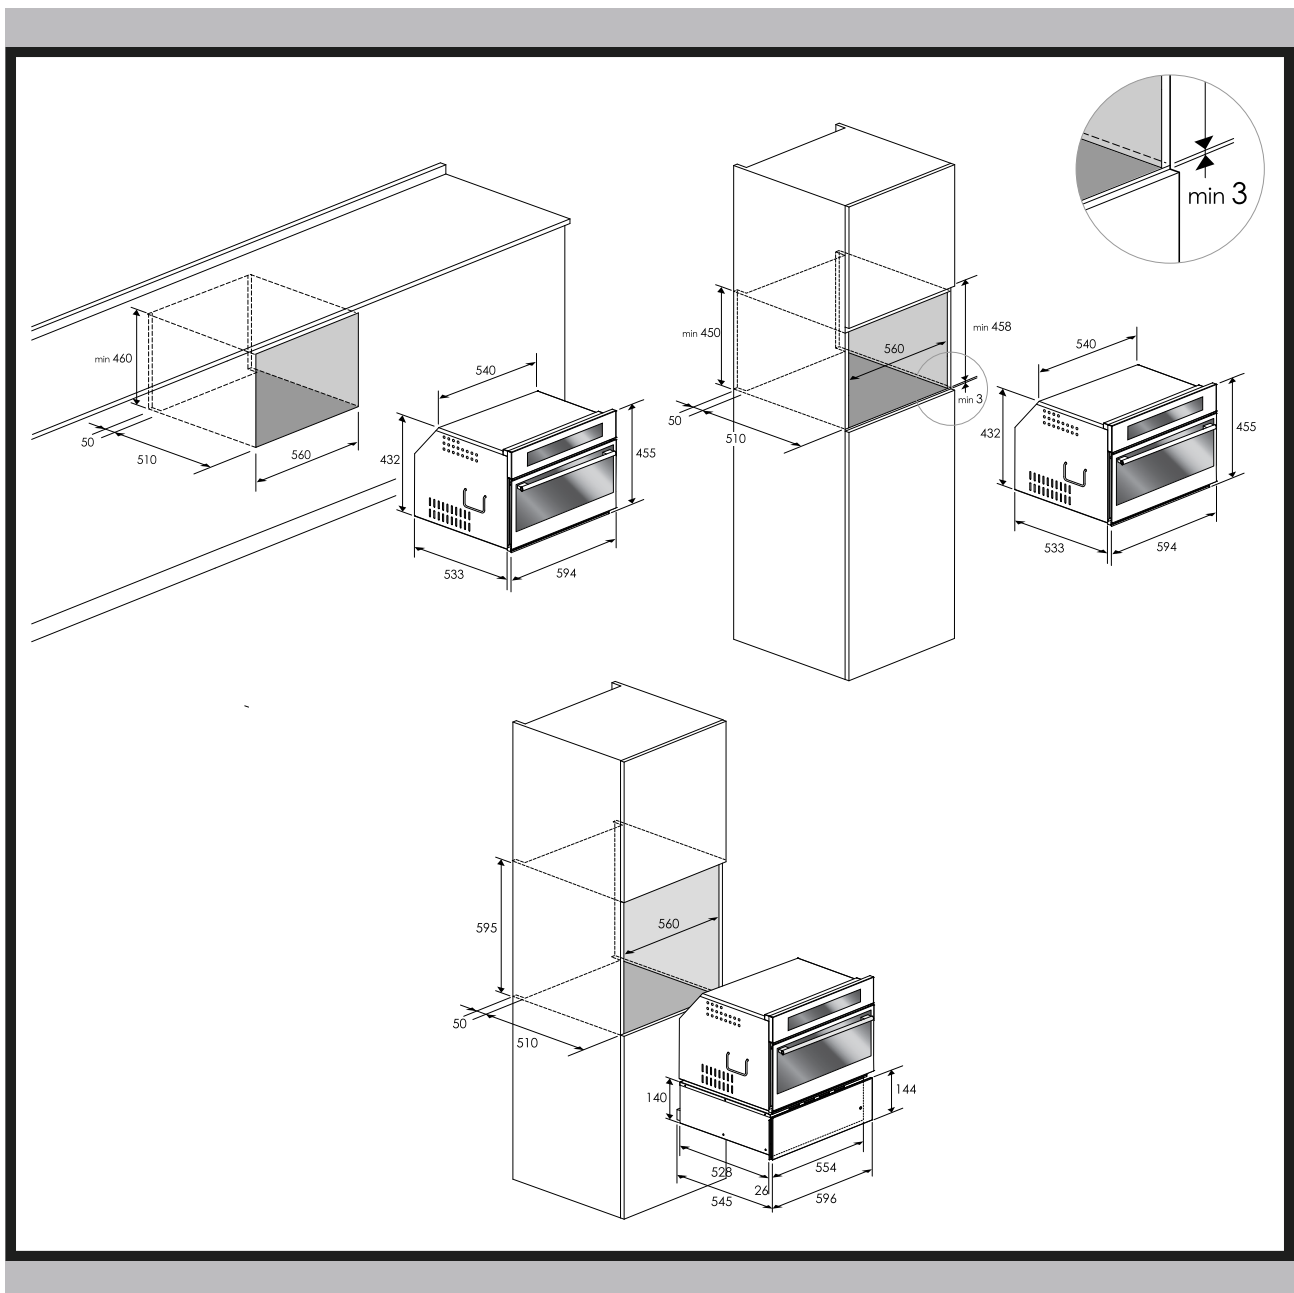



Electrical Hook-up

Before making the electrical hook-up, make sure that:

- The characteristics of the electrical system satisfy what is shown on the serial number plate applied to the front of the oven;
- The electrical system has an effect earth connection conforming to standards and current law.

The earth connection is required by law.

The cable must not, at any point, reach a temperature greater than 50 °C above the ambient temperature.

This oven must be connected to the supply by a supply cord fitted with an appropriately rated plug that is compatible with the socket-outlet fitted to the final sub-circuit in the fixed wiring that is intended to supply this oven.

If a fixed appliance does not have a power cord and plug, or another device that ensures disconnection from the mains, with an opening distance of the contacts that allows complete disconnection under the conditions of excessive voltage category III, such disconnection devices must be provided in the power supply mains conforming to the installation rules.

The omnipolar socket or switch must be easy to reach when the appliance is installed.




Note:

The manufacturer declines all liability if the usual accident prevention standards and the above instructions are not followed.

Cable Types and Minimal Diameters

	SASO
H05RR-F 3x1,5 mm ²	H05RR-F 3x2,5 mm ²
H05VV-F 3x1,5 mm ²	H05VV-F 3x2,5 mm ²
H05RN-F 3x1,5 mm ²	H05RN-F 3x2,5 mm ²
H05V2V2-F 3x1,5 mm ²	H05V2V2-F 3x2,5 mm ²

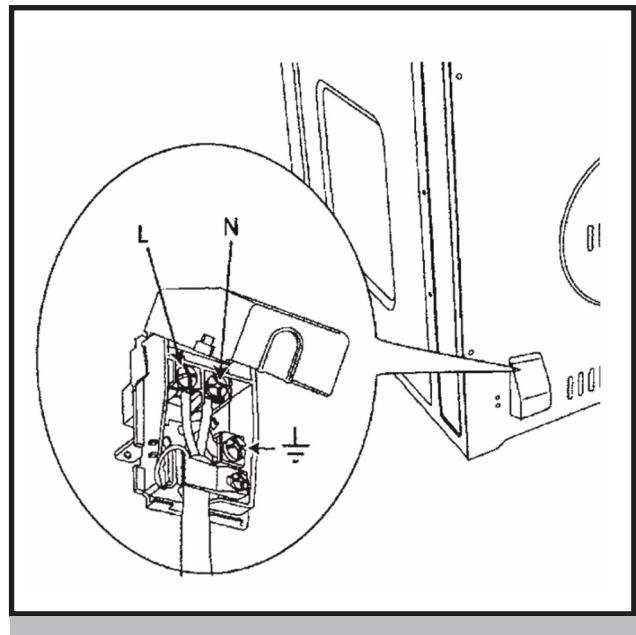

Power Requirements

Max Power Consumption	3200 W
Microwave Power	900 W
Grill	1500 W
Hot Air	1500 W
Microwave Frequency	2450 MHz

First Use

The oven should be thoroughly cleaned with soap and water and carefully rinsed.

Heat the oven for about 30 minutes at the maximum temperature; this eliminates all the residual manufacturing oils that could cause unpleasant odours during cooking. Use the circular plus fan function without accessories in the oven. Before using the accessories for the first time, clean them carefully with a very hot alkaline washing solution and a soft cloth.

Assembling and disassembling the flat grill

To remove the flat grill, pull the grill towards you until it stops and then lift, by pulling upwards, until it comes completely out.

To put the flat grill back in, insert it at a 45-degree angle and then position it horizontally and push it all the way in to the end of the grill track.


If the flat grill has a drip-pan (tray), to remove it, lift slightly and slide it towards you. To reinsert it, slide it back until it is correctly seated.



Important

As a safety precaution, before cleaning the oven, always disconnect the plug from the outlet or remove the appliance's power cord. In addition, avoid using acid or alkaline substances such as lemon, vinegar, salt, tomatoes, etc.). Avoid using products containing chlorine, acids or abrasives, especially for cleaning the painted walls.

Control Panel

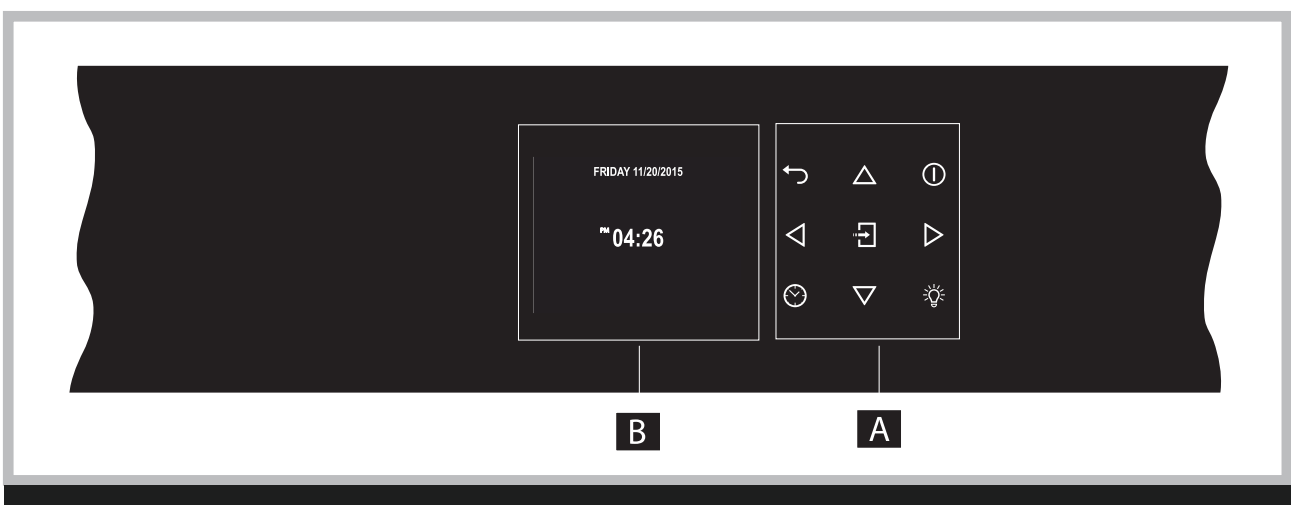







Your appliance could vary slightly compared to the illustrations below.

A - Keypad; **B** - Display Screen

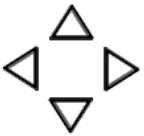Keypad

To operate the key, press gently. The keypad will not work if more than one key is pressed at the same time.

	Movement arrows
	Return to previous display page. Keep pressed to return to Home page

	Switches the oven on and off.
	Confirms the settings and starts cooking operations. When pressed during a cooking operation, the function is placed in pause. Press again to restart.
	To set the timer. Enter the functions menu during cooking.
	Switches the inner oven light on and off.

General Oven Information

Before using your oven for the first time remove all packing and foreign materials from the oven(s). Any material of this sort left inside may melt or burn when the appliance is used.

Error Codes

This code appears in the event of the electronic control indicating a fault. When the error appears, the current function is blocked. If the type of error is related to a safety function, the oven becomes unusable and every time a start attempt is made, the same error appears (in which case call in the aftersales service), while if the error relates to a minor fault, after being restarted the oven can be used for the functions that do not involve the faulty part (e.g., a heating element).

Beeps

Confirms that the command has been received after a key has been pressed. It also indicates that a time function has been completed (e.g. Timer or Timed Cooking). During the execution of a recipe, an acoustic signal warns the user that the oven is waiting for operation by the user (e.g., insert the dish or turn it over). Beeps also signal an oven fault.

Default Settings

The cooking modes automatically select a suitable temperature when the cooking mode is selected, these can be changed when a different one is needed.

F Failure number codes

These codes are displayed when the electronic control detects a problem in the oven or in the electronics.

The error code is recorded in the Error Log in the Setup menu.

This error can be communicated to the service technician so he/she can understand the possible cause of the problem in advance.

Preheat



Whenever a cooking mode is set and the oven is heating, the preheating starts, during this period, the instantaneous temperature is displayed together with the thermometer icon. As soon as the 100% is reached, the control sounds an "end of preheat" tone and the current temperature value disappears.

Timer

Warning

The oven's identification plate is even accessible when the appliance is installed. This identification plate, which is visible when you open the door, shows all the information you will need when requesting replacement parts for the appliance.

① **NOTE:** Pressing the OFF button does not reset or stop the timer.

1. Press the button  and set the desired time using the arrows and confirm with the button . To switch the selection

between hours and minutes use the arrows.

2. The time can be set from 1 minute to 12 hours and 59 minutes and, when set, the remaining time is always visible in the bottom status bar until the time expires or is reset.
3. To change or cancel the time set, you must reset the timer by pressing and holding the button for a few seconds.
4. Timer format is usually HR:MIN, switching into MIN:SEC during the last minute.
5. When the time expires, the display shows 00:00 and the buzzer will sound for one minute or until the button is pressed.

General Oven Tips

Preheating the Oven

- Selecting a higher temperature does not shorten the preheat time.
- Preheating is necessary for good results when baking cakes, cookies, pastry and breads.
- Preheating will help to sear roasts and seal in meat juices.
- Place oven racks in their proper position before preheating.
- During preheating, the selected cooking temperature is always displayed.
- A beep will confirm that the oven is preheated and the “detected temperature” will turn off.

Operational Suggestions

- Do not set pans on the open oven door.

- Use the interior oven lights to view the food through the oven door window rather than opening the door frequently.

Operation with microwaves

The microwaves are transformed into heat inside foods. The microwave oven can be used by itself or in combination with other types of heating. This section contains information about the dishware and instructions for setting the microwave oven.

Warnings for Dishware

Suitable dishware

You can use heat-resistant dishware made of glass, glass ceramic, porcelain, ceramic or refractory plastics. These materials are permeable to microwaves.

It is also possible to use normal plates. In this way, it won't be necessary to transfer the food.

Dishware with gold or silver decorations can only be used if the manufacture guarantees that they can be used in microwave ovens.

Remember that, when using the oven in microwave mode, the dish must be placed on the rotating plate.

When using the oven in combination mode, it is preferable to place the dish to be cooked on the low, round grill, supported so that it is centred on the rotating plate.

Unsuitable dishware

Metal dishware cannot be used.

Metal is not permeable to microwaves. Food in metal containers will remain cold.

Warning! Metal components, such as

spoons in glasses, must stay at least 2 cm from the walls of the oven and the inside of the door. In fact, sparks could seriously damage the inside of the glass door.

Warning! The flat grill must be removed when using the microwave and combined modes. Use it only with traditional oven functions.

Testing dishware

Never turn on the microwave oven before you have put in the food.

The only exception allowed is testing dishware.

If you are unsure if your dishware can be used in the microwave oven, we recommend performing the following test: place the empty pot in the appliance for ½ - 1 minute at the maximum power. Check the temperature. The pot must be cold or slightly warm. If it is hot or there are sparks, the pot is not suitable.

Oven Condensation and Temperature

It is normal for a certain amount of moisture to evaporate from the food during any cooking process. The amount depends on the moisture content of the food. The moisture may condense on any surface cooler than the inside of the oven, such as the control panel.

Your new oven has an electronic temperature sensor that allows maintaining an accurate temperature.

High Altitude Baking

When cooking at high altitude, recipes and cooking time will vary from the standard.

Instructions for initial switch-on


Once the oven has been connected to the power supply for the first time, the control automatically prepares for setting a number of user settings, which remain stored in case of any subsequent switch-on.

NOTE: Both at the first and subsequent connections to the power supply, the door lock mechanism performs a calibration run – in this phase, always keep the door closed.



- Language
- Temperature & Weight
- Time
- Date

Refer to the USER SETTING paragraph for setting instructions.

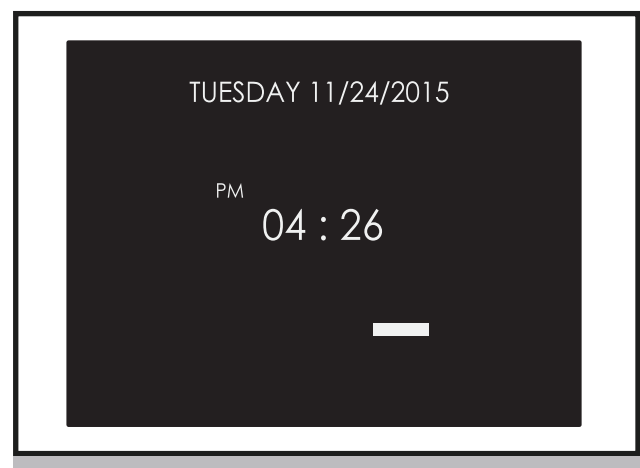


After making the user settings, the control moves automatically to the “Standby” display page.









User Settings

With the oven on, select the icon  and confirm with the  key to enter the SETTINGS menu. This menu permits personalizing the settings of your oven. To make access, no active cooking or any set time functions must be in progress.

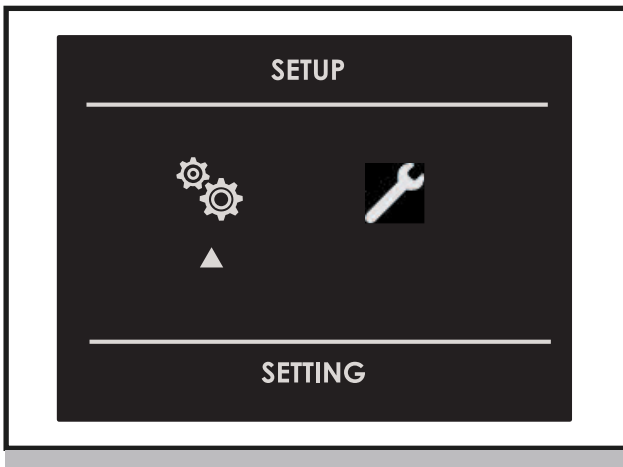


① NOTE: The Setting menu can never be set if any time function is already set: first delete all the active time functions.


1. Press the keys   to select the sub menu and confirm by means of the  key.








2. Use this menu to change the following settings: Press the keys   or   to select the setting or change a sub menu from among the six available ones and confirm by means of the  key.

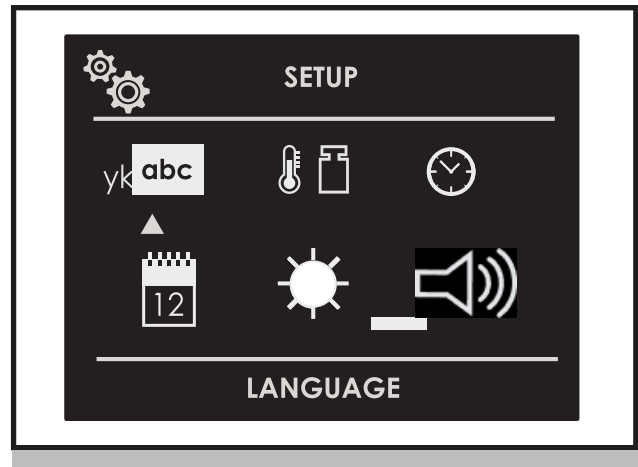Language







Press the arrow key   to select a language from among those available, and confirm with the  key.






Temperature & Weight

Press the arrow key   and   to select one of the two temperature options “°C/°F” or weight options Kg/lb and confirm with the  key.



Time



Press the arrow key   to select the time format between the options “12h AM/ PM or 24h” and confirm with the  key. Subsequently, set the time using the arrows   and confirm with the  key.

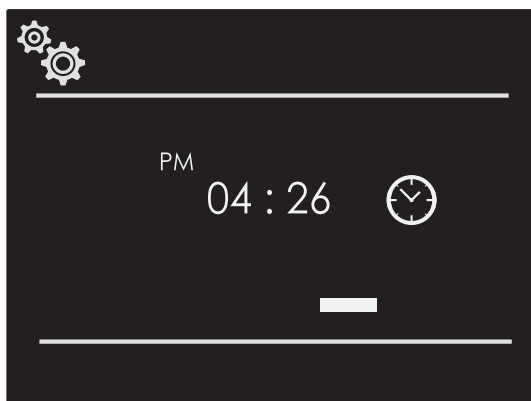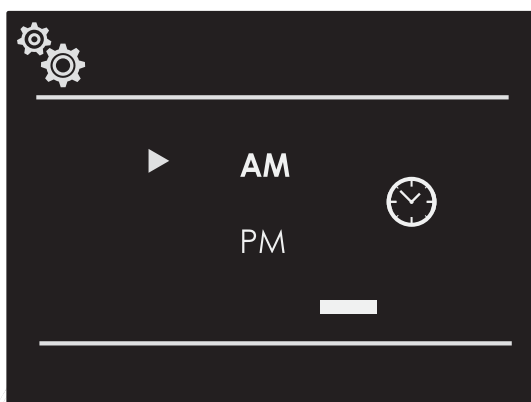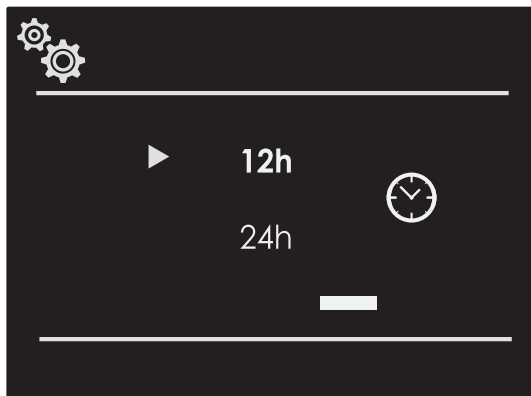Refer to the images in the next page




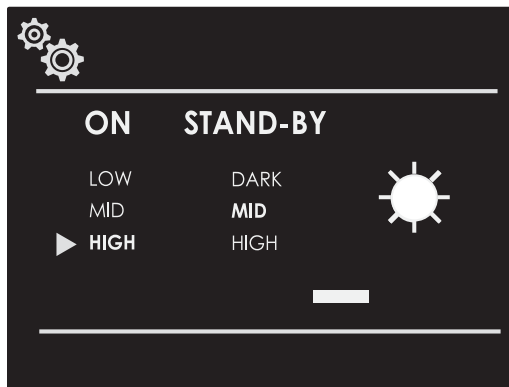
Date

Press the arrow key to select the date format from among the options “D.M.Y. – Y.M.D. – M.D.Y.” and confirm with the  key. Subsequently set the value using the arrows and confirm with the  key.

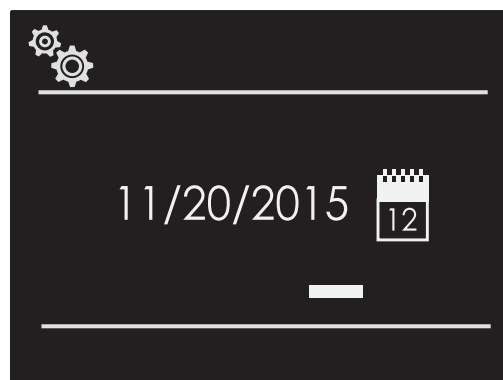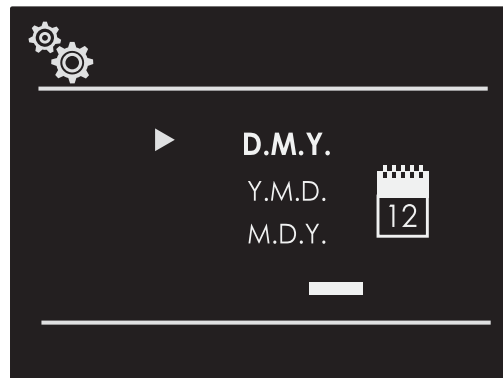


Brightness




Press the arrow key to choose which luminosity setting to change between ON or STANDBY, then by means of the arrows select the required degree of luminosity and confirm with the  key.




Volume


Press the arrow to select the desired volume level and confirm by pressing the  key.




- Use this menu to change the following settings: Press the   keys to select the item to be set or to be displayed from among the three available ones and confirm with the  key.

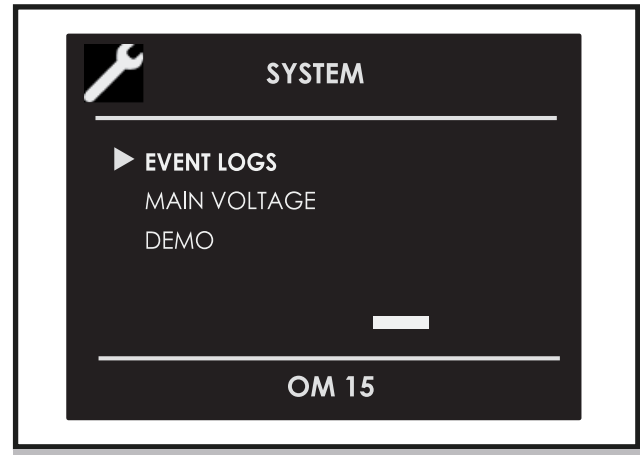

System Settings

With the oven on, select the icon and confirm with the  key to enter the SETTINGS menu. This menu permits setting a number of parameters or special functions. It also permits accessing the error events list.


- Press the   keys to select the sub

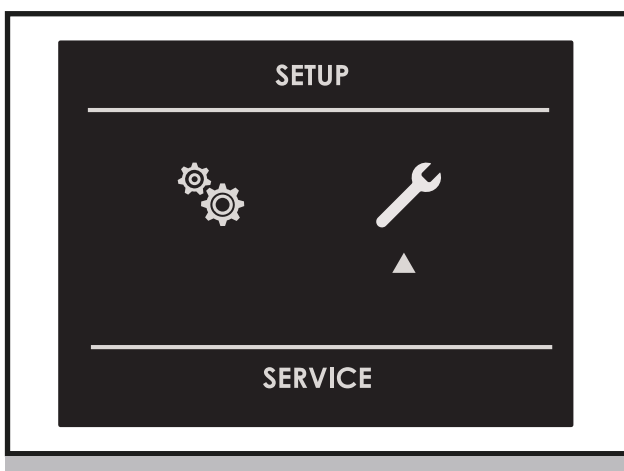

menu and confirm with the  key.

Event Log

The menu permits checking any recorded errors. These codes can be notified to the after-sales service.

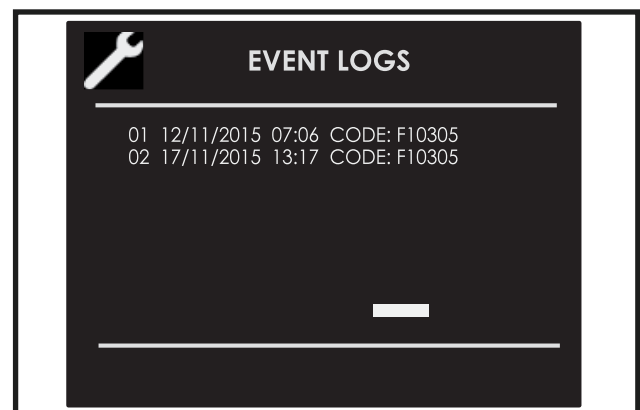



Demo


The purpose of this function is to set the DEMO mode, which makes the oven useless for cooking but automatically performs a demonstration of functions.


- Press the   keys to select the item ON.


2. Confirm with the  key.

3. Press the  key.

After about 30 seconds, the oven starts to operate in this mode. To temporarily stop the DEMO function, simply keep any key pressed for a few seconds until the oven switches to standby. To start it again, press the  key.

To disable the function, enter the DEMO display page and set OFF. Confirm using the  key.


 NOTE: Once set, the function remains enabled even if the oven is disconnected from the power mains.

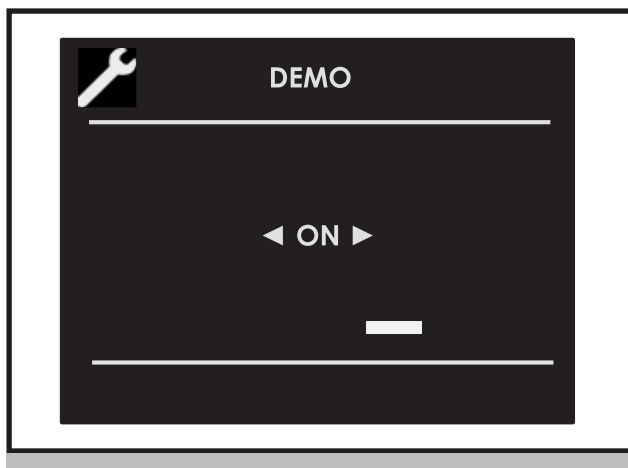











Starting your Oven

Switching the oven on and off

Important







- The  key does not stop the function.
- After switching off the oven, the cooling fan could continue to operate until the inner parts of the oven have cooled down.




 





Press  to switch the oven on and press again to switch it off. The oven returns to standby mode.

Multifunction Oven	
Traditional Cooking	
Icon	Cooking Mode
	TRUE CONVECTION (FAN HEAT)
	RING & GRILL (FAN HEAT & GRILL)
	CONVECTION BROIL (TURBO GRILL & BASE HEAT)
	BROIL (ECO GRILL)
Modern Cooking	
	DEFROST BY TIME
	DEFROST BY WEIGHT
	MICROWAVE COOKING
	MICROWAVE AND GRILL
	MICROWAVE AND RING (MICROWAVE AND FAN HEAT)

Thermal Oven






Traditional Cooking

Icon	Cooking Mode
	BROIL (ECO GRILL)
Modern Cooking	
	DEFROST BY TIME
	DEFROST BY WEIGHT
	MICROWAVE COOKING
	MICROWAVE AND GRILL
	MICROWAVE AND RING (MICROWAVE AND FAN HEAT)

1. Select the icon  and press the key . Select the appropriate cooking mode according to the food to be cooked using the arrows   and confirm with the key .
2. On this display page, it is still possible to change the cooking mode by using the   keys.
3. If the proposed temperature is correct, confirm with the  key to start cooking, otherwise, if the  key is not pressed within 10 seconds, the oven switches to automatic mode and the cooking mode icon becomes animated.

Traditional Cooking






Changing the cooking mode

1. During untimed cooking, a cooking pause can be set by pressing the  key. All the settings of the suspended cooking operation remain stored and can be reactivated by pressing the same key again.
2. To change the cooking mode while the oven is working, press the  key and then the  key. At this point, another cooking mode can be selected from among those available in the group by means of the arrows  .

Changing temperature



Important

- At the end of a function, the display screen shows the residual compartment heat temperature from the standby page.

1. From the cooking mode preview display page, the temperature can be changed by means of the arrows   subsequently confirming by means of the  key.
2. Once cooking has started, the temperature can in any case be changed, at any time, by means of the arrows  .



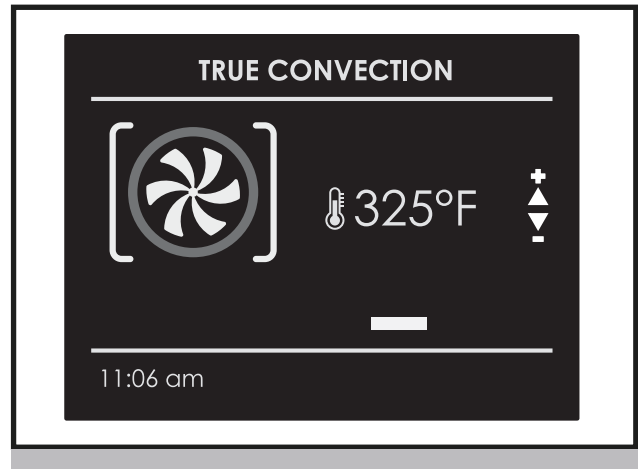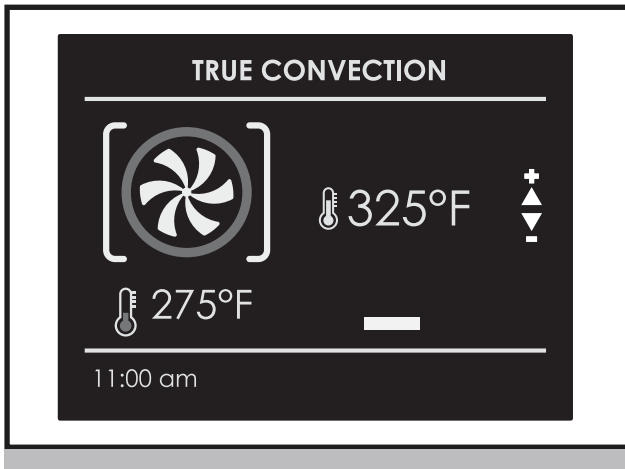

Pre-heating Phase

While the oven is in pre-heating phase, the instantaneous temperature is displayed underneath the cooking mode icon.



Just as soon as the set temperature is reached, an acoustic signal is heard and the instantaneous temperature indication disappears.

Cooking Mode Tables

Traditional Cooking				
Cooking Mode	Icon	Temperature		
		Min.	Preset	Max.
TRUE CONVECTION (FAN HEAT)		50° C	165° C	230° C
RING & GRILL (FAN HEAT & GRILL)		50° C	210° C	230° C
CONVECTION BROIL (TURBO GRILL & BASE HEAT)		50° C	165° C	230° C
BROIL (ECO GRILL)		50° C	230° C	230° C

Microwave Cooking											
Cooking Mode	ICON	SET	WEIGHT			WATT			TEMPERATURE		
			Min.	Pre-set	Max.	Min.	Pre-set	Max.	Min.	Pre-set	Max.
DEFROST BY TIME							150 W				
DEFROST BY WEIGHT		Bread	100 g	500 g	600 g		150 W				
		Vegetable	100 g	500 g	1000 g		150 W				
		Meat	100 g	500 g	1500 g		150 W				
		Fish	100 g	500 g	800g		150 W				
MICRO-WAVE COOKING						150 W	900 W	900 W			
MICRO-WAVE AND GRILL		150W					150W			200° C	
		300W					300W				
		450W					450W				
MICRO-WAVE AND RING MICRO-WAVE AND FAN HEAT)		150W					150W		50° C	100° C	200° C
		300W					300W				
		450W					450W				

Time Oven Mode Operation

Be sure that the time-of-day clock is displaying the correct time. The timed mode turns off the oven at the end of the cook time

Caution









- Never leave food in the oven for more than one hour before and after cooking. This could deteriorate the properties of the food itself.

NOTE: The maximum cooking time that can be set is 12 h.


Cook Time

Use the “Cook Time” function to operate the oven for a determinate period of time. The oven starts immediately and switches off automatically once the time has expired.



To Set a Timed Mode

1. Select the cooking mode and temperature.
2. There are two ways to set the function.
 - Select  to set the duration and press .
 - Select  to set the stop time and press .
3. After selecting one of the two above options, set the time by means of the arrows   and confirm with the  key.
4. After pressing the  key, cooking starts and the time cooking information is shown on the display page.
 - Cooking mode
 - Temperature

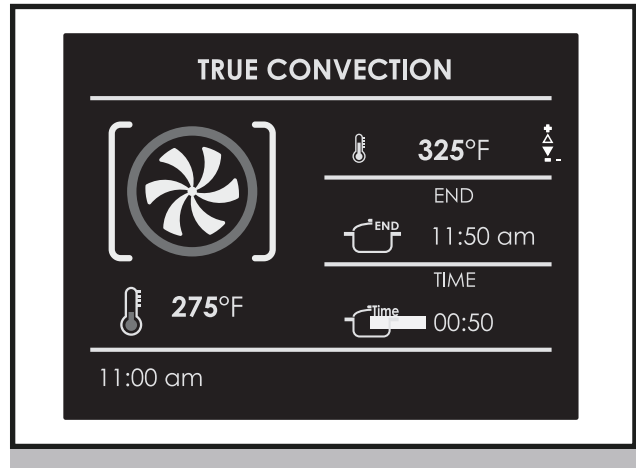- Cooking time
- End of cooking time









5. After cooking, the oven switches off and an acoustic signal warns that cooking has terminated.

To change the cooking time when the oven is already operating, simply press the  time key and enter the new cooking time before pressing the  key again.

Stop Time


Use the “Stop Time” function to delay the start of timed cooking. Enter the cooking stop time and the oven will automatically calculate the start time. The oven switches on and off automatically.

To Delay the Start of a Timed Mode

1. First of all set the required timed cooking as indicated in the “COOK TIME” paragraph.
2. Select  to set the stop time and press .
3. Set the cooking stop time by means the arrows   and confirm by means of the  key.
4. After pressing the  key, the function

positions in standby and the postponed cooking details are shown on the screen.

- Cooking mode
- Temperature
- Cooking stop time
- Cooking start time

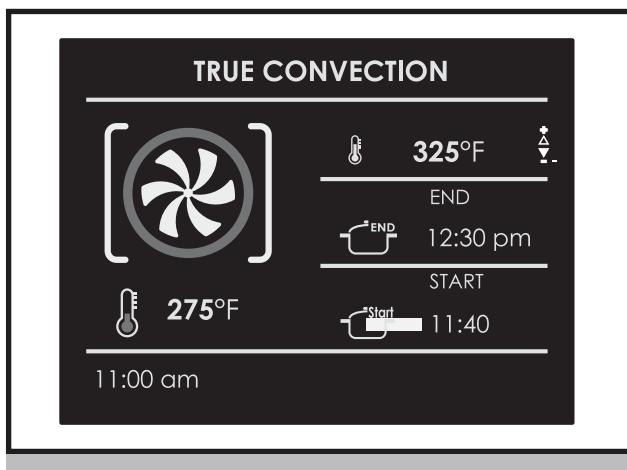

After cooking, the oven switches off and an acoustic signal warns that cooking has terminated.

To change the cooking time and stop time when the oven is already operating, simply press the key and enter the new cooking time or cooking stop time and press the key again.

Microwave Cooking

Be sure that the time-of-day clock is displaying the correct time. The timed mode turns off the oven at the end of the cook time.


The function can be paused at any time using the key , when it is pressed again la funzione riparte.

! Attention

- Microwave functions will not start until the door has been closed. If the door is opened while the oven is on, the oven will go into pause mode and the message “DOOR OPEN” will appear on the display.
- To restart the function, the door needs to be closed.

Timed Thawing Function

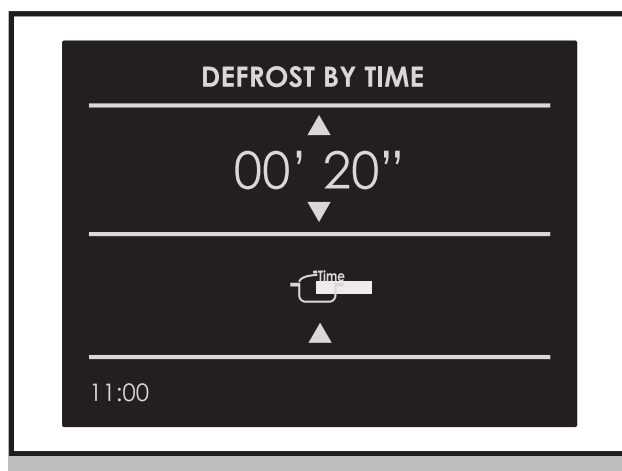

Select the timed thawing icon using the arrows and press the key , then set the thawing time using the arrows and . To start the function press the key .








Once the function has been started, a countdown will be shown on the display. The time can be changed at any time using the arrows and .

When thawing is complete, the message “DEFROSTING FINISHED” will appear on the display.



Weight Thawing Function



Select the weight thawing icon  using the arrows and press the key .



Select the type of meal using the arrows  and , then set the weight using the arrows  and , finally start thawing using the key .

Following are types of meals and relative weights that can be set:


Meal	Min Weight (g)	Max Weight (g)
 Bread Pizza Pasta Dishes	100	600
 Vegetables	100	1000


	Meat	100	1500
	Seafood	100	800


The thawing time is calculated completely automatically and without needing to set any time parameters, based on the set type of meal and weight.


When thawing is complete, the message DEFROSTING FINISHED will appear on the display.

Microwave Function


 
Select the Microwave function icon using the arrows and press the key .


If you wish to start the function immediately with a preset time of 30 sec and a preset output of 900W, press the key .

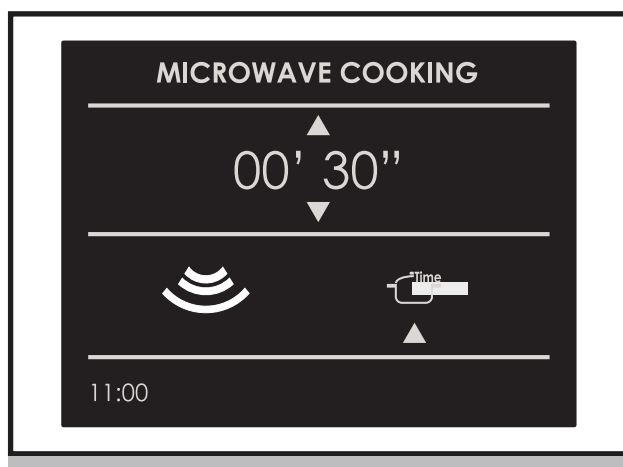

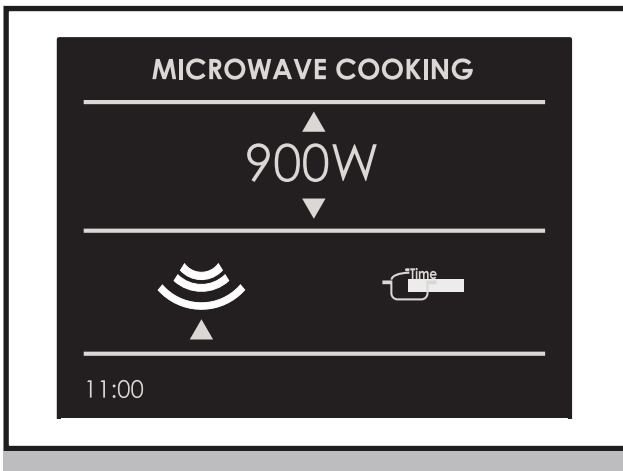

If you wish to personalise the time and output, open the sub-menu managed as follows:



- **TIME:** Select the icon  and use the keys Δ and ∇ to personalise the time.
- **MICROWAVE OUTPUT:** Select the icon  and use the keys Δ and ∇ to select the microwave output setting from the 6 possible levels, 150W - 300W - 450W - 600W - 750W - 900W.


Once the new parameters have been set, press the key  to start cooking.


Once cooking has started, a countdown will be shown on the display. The time can be changed at any time using the arrows Δ and ∇ .

At the end of cooking, the message “END COOKING” will appear on the display.


Microwave+Grill Function


Select the Microwave+Grill function icon  using the arrows and press the key , then set the thawing time using the arrows Δ and ∇ .

If you wish to start the function immediately with the preset time and a preset output of 300W, press the key .

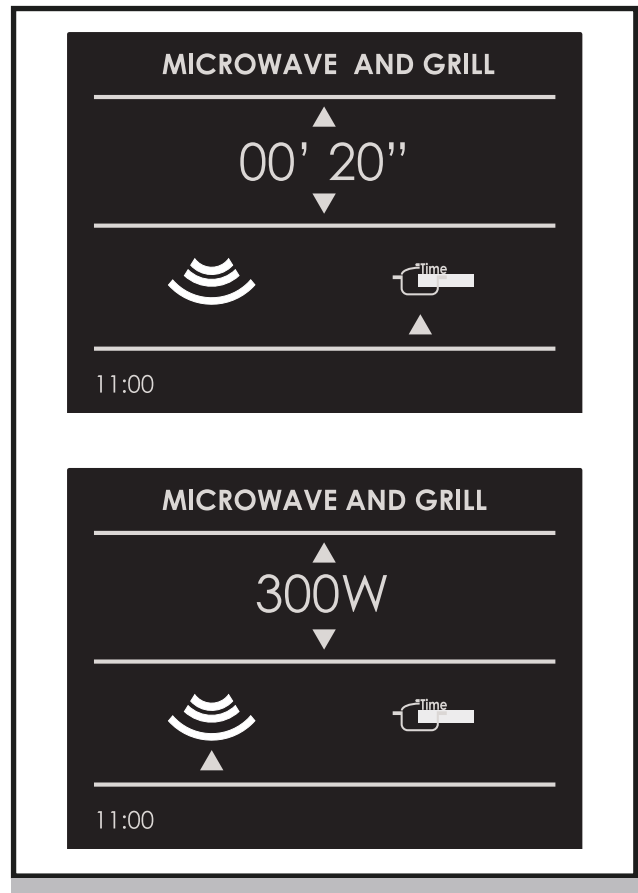

If you wish to personalise the output, open the sub-menu managed as follows:





- **MICROWAVE OUTPUT:** Select the icon  and use the keys Δ and ∇ to select the microwave output setting from the 3 possible levels, 150W - 300W - 450W.


Once the new parameter has been set, press the key  to start cooking.




Once cooking has started, a countdown will be shown on the display. The time can be changed at any time using the arrows Δ and ∇ .

At the end of cooking, the message “END COOKING” will appear on the display.


 
 



Microwave + Ring Function


Select the Microwave+Ring function icon  using the arrows and press the key , then set the thawing time using the arrows  and .

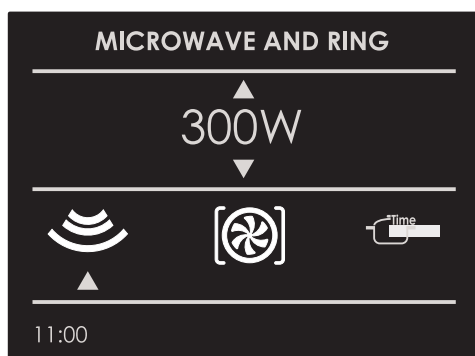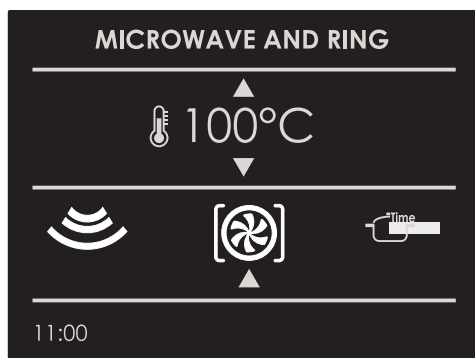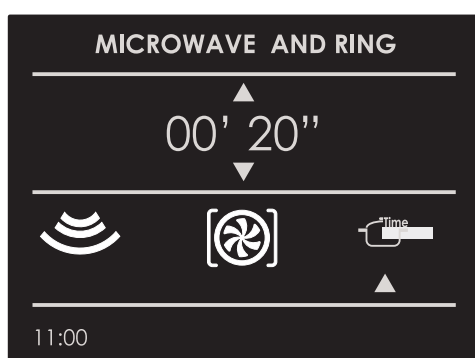

If you wish to start the function immediately with the preset time and a preset temperature of 100°C, with a preset microwave output of 300W, press the key .



If you wish to personalise the temperature and output, open the sub-menu managed as follows:






- **TEMPERATURE:** Select the icon  and use the keys  and  to personalise the temperature between 50°C and 200°C.
- **MICROWAVE OUTPUT:** Select the icon  and use the keys  and  to select the microwave output setting from the 3 possible levels, 150W - 300W - 450W.

Once the new parameters have been set, press the key  to start cooking.






Once cooking has started, a countdown will be shown on the display. The time can be changed at any time using the arrows  and .

At the end of cooking, the message “END COOKING” will appear on the display.


 



Changing Watts Power

Press the icon  and press the key . Select the microwave icon and change the power wattage by means the arrows   and confirm with the key .



Changing Time

Press the icon  and press the key . Select the time icon and change the time value by means the arrows   and confirm with the key .

Changing Temperature







(only available for microwave and ring) Press the icon  and press the key . Select the cooking mode icon and change the setting temperature by means the arrows   and confirm with the key .

Changing Time















 


(only available for defrost by weight) Press the icon  and change the weight by means the arrows Δ ∇ and confirm with the key .


Recipes

The Recipe function of your oven gives you the chance to cook food without having to set the oven manually every time. By selecting a "SET" recipe, the cooking mode, the temperature and the time are automatically set according to the recipe selected from the menu.

Set Recipes				
Recipe List	Type of Food	Food condition	Recipes List	Information displayed
PRESET OR PERSONAL		FRESH	BREAD PIZZA FIRST	"TYPE OF ACCESSORY LEVEL POSITION FOOD WEIGHT COOKING TIME PREHEAT REQUIRED (YES/NO)"
		FROZEN		
		WHOLE	MEAT	
		IN PIECES		
		WHOLE	POULTRY	
		IN PIECES		
		WHOLE	FISH	
		IN PIECES		
		-	VEGETABLES	
		-		
		-	PIES	
		-		



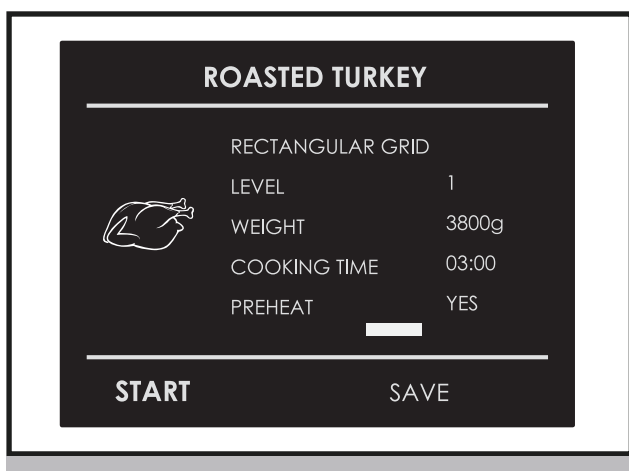


Select an already-set recipe:

1. Switch the oven, select the icon  and press the button .
2. Using the arrows   select the list between "PRESET" or "PERSONAL" and confirm by means of the  key.
3. Choose the type of food to be cooked using the arrows   and the arrows   and confirm by means of the  key.
4. Using the arrows   choose between "FRESH" or "FROZEN" or in other cases between "WHOLE" or "IN PEICES" and confirm with the  key.
5. Select the required recipe by means of the arrows   and confirm using the  key.
6. When the recipe is selected, the following display page appears on the screen:
7. To start the recipe, confirm with the  key. During a recipe, a number of acoustic and visual messages will ask you to perform the following operations. Simply follow the instructions on the screen.
8. Upon termination, the oven switches off and an acoustic and visual signal warns that the recipe has terminated.






Saving a personalized recipe:


Once a recipe has been selected, the "Time" and "Weight" setting can be changed and the recipe can be saved among the "PERSONAL" ones.

1. Once a recipe has been selected, press the key  and confirm by means of the  key.
2. To change the weight, enter the desired weight by means of the arrows   and confirm by means of the  key



3. The oven switches automatically to the cooking time. To change this time, use the arrows   and confirm again by means of the  key.





- At this point, the recipe can be saved in the list of “PERSONAL” recipes by selecting “SAVE” and confirming by means of the  key.



- Note:** If the time and weight values are changed and not saved straight away, at the end of the recipe, a message appears which asks whether you want to save it.


- To start the recipe press the  key.

Cancelling a already-set recipe:

- To eliminate a recipe from the list of personalized recipes, select the recipe.
- Press the key  and select the choice and confirm with the  key.



Using Oven Lights

A single light key activates the lights. Touch  to turn lights on or off .

Oven lights turn on automatically when the door is opened.

When an oven is in use, oven lights turn on automatically when a mode is started.

Oven lights will turn off automatically when the oven mode is cancelled.

- NOTE:** Once switched on, the lights go off automatically after 3 minutes. To switch them back on, press the key or open the door.

Cleaning and Maintenance

- ① Before starting to perform maintenance and cleaning, disconnect the appliance from the electrical outlet against the risk of electric shock.
- ⚠ Before performing maintenance, make sure that the appliance is disconnected
- ① You can extend the lifetime of the appliance by performing regular maintenance and cleaning. You can remove the door, the glass and the racks for cleaning.

Solving operational problems

The malfunctions mentioned here are the situations that may occur usually. You can solve these problems easily without interfering with the product yourself.

- ① If the problem cannot be solved despite the instructions, call the dealer or the Authorized Service where you have bought the appliance from. In this case, never try to repair the appliance on your own.

Oven Problem	Problem Solving Steps
Other F__ Error appears in the display window.	"Remove power and turn it back on again after a few seconds. If condition persists, note the code number (in the EVENT LOG list) and contact service."
The oven display stays OFF	"Turn off power at the main power supply (fuse or breaker box). Turn breaker back on. If condition persists, call an authorized service."
Cooling fan continues to run after oven is turned off	"The fan turns off automatically when the electronic components have cooled sufficiently."
Oven is not heating	"Check the circuit breaker or fuse box to your house. Make sure there is proper electrical power to the oven. Make sure the oven temperature has been selected."
Oven is not cooking evenly	Refer to cooking charts for recommended rack position. Always recipe reduce temperature by 25°F (15°C) when baking with Convection Bake mode.
Clock and timer are not working properly	"Make sure there is proper electrical power to the oven. See the Clock sections on pages 10 and 13."

Oven Problem	Problem Solving Steps
Excessive moisture	"Convection modes will eliminate any moisture in oven (this is one of the advantages of convection)."

Solving Traditional Baking Problems

With either Bake or Convection Bake, poor results can occur for many reasons other than a malfunction of the oven. Check the chart below for causes of the most common problems. Since the size, shape and material of baking utensils directly affect the baking results, the best solution may be to replace old baking utensils that have darkened and warped with age and use.

Baking Problem	Cause
Food browns unevenly	Oven not preheated Aluminum foil on oven rack or oven bottom Baking utensil too large for recipe Pans touching each other or oven walls
Food too brown on bottom	Oven not preheated Using glass, dull or darkened metal pans Using glass, dull or darkened metal pans Incorrect Rack Position Pans touching each other or oven walls
Food is dry or has shrunk excessively	Oven temperature too low Oven not preheated Oven door opened frequently Tightly sealed with aluminum foil Pan size too small
Food is baking or roasting too slowly	Oven temperature too low Oven not preheated Oven door opened frequently Tightly sealed with aluminum foil Pan size too small

Baking Problem	Cause
Pie crusts do not brown on bottom or have soggy crust	Baking time not long enough Using shiny steel pans Incorrect rack position Oven temperature is too low
Cakes pale, flat and may not be done inside	Oven temperature too low Incorrect baking time Cake tested too soon Oven door opened too often Pan size may be too large
Cakes high in middle with crack on top	Baking temperature too high Baking time too long Pans touching each other or oven walls Incorrect rack position Pan size too small
Pie crust edges too brown	Oven temperature too high Edges of crust too thin

Technical Specifications

Voltage/Frequency	220-240 V 50 Hz
Product dimensions (height/ width/depth)	594*533*455 mm
Capacity	28 L
Max Power consumption	3200 W
Control Type	Touch Control
Display/Timer	Electronic Timer
Door type	Safe-Touch Door
Cooking Functions	9
Control Type	Touch Control
Max Cooking Temperature	230°C
Power Levels	3
Installation Type	Built-In
Net Weight (KG)	37.25 kgs

