

 
BYSTRO

EN

Sorrento Freestanding BBQ with Woody Lift System /Installation and User Manual

Thank you for choosing this product.

This Installation and User Manual contains important safety information and instructions on the operation and maintenance of your appliance. Please take the time to read this User Manual before using your appliance and keep this book for future reference.

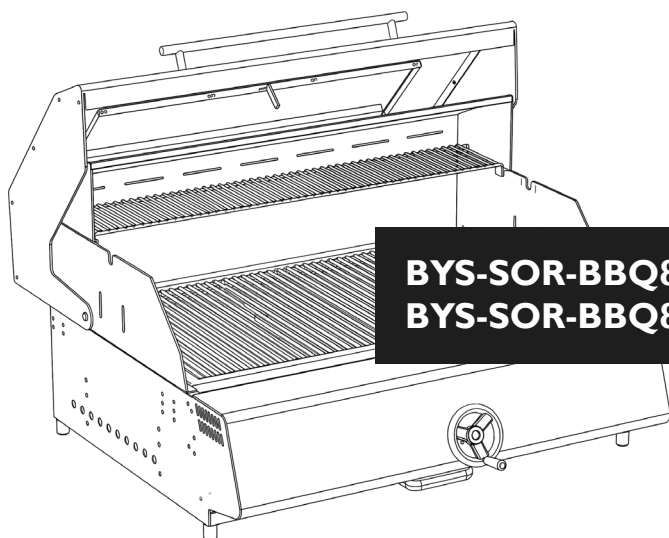

BYS-SOR-BBQ8 | CHR-SS
BYS-SOR-BBQ8 | CHR-MB

2
YEAR
WARRANTY

Dear Customer,

Thank you for choosing our product. We would like you to be satisfied with our product, which has been produced in our highly qualified, technological and modern facilities.

You can use your BBQ with pleasure and confidence for many years by performing required maintenance and showing necessary care. Read the whole manual. Retain the manual during use of the product. If you hand the product over to someone else, give them the manual as well.

⚠ This Operating Manual maybe prepared for multiple models. Some of the features mentioned may not be available in your product.

Symbol	Meaning
	Important Information
	Warning - Caution
	Risk of Electric Shock
	Risk of Fire
	Indicates risk of burns from touching hot parts of the machine
	Indicates the obligation for the operator to wear gloves

1 - Safety Instructions	4
During Use	4
Power Requirements	5
2 - Installation	6
Lighting and using the barbecue	7
3 - Use and operation	7
4 - Maintenance and cleaning	8
5 - Troubleshooting	9

- This product has been designed and built in compliance with current safety regulations and by choosing top-quality materials, such as AISI 430 stainless steel, which, thanks to their peculiarities, maintain the product's properties unchanged over time.
- Reading this manual will help you get the most out of your barbecue, during installation, use, and maintenance. Please keep it safe for future reference.



Attention

We recommend reading this manual before assembly and use.

For your safety, it is essential that you carefully follow the instructions in this manual, which should be kept carefully for future reference.

This barbecue is for domestic use only and must not be used as a support surface or worktop.



Child Safety

This appliance is intended for use by adults only. Keep children away during use due to the risk of burns (the barbecue reaches high temperatures, including the external walls and the cooking plates).

Once cooled, there is still a risk of pots, plates or pans falling, so do not

Let children play near the appliance even when it is not in use.



Caution

Do not leave the barbecue unattended while it is in operation or cooking food.

During Use



- Some perimeter walls in addition to the cooking plates also reach high temperatures during operation.
- Do not place or store flammable liquids, combustible materials or objects that can melt (such as cling film, plastic or aluminium foil) on or near the appliance.
- Use protective gloves while working.
- If you use other appliances nearby, make sure that the electrical cables do not come into contact with the hot surfaces of the appliance, as they could be damaged and there is a risk of electrocution.
- Before lighting, make sure the BBQ is placed on a stable, level surface to avoid compromising its stability and the correct slopes for draining cooking fat.
- Wait for it to cool completely after use before cleaning and storing it to avoid any possible damage burn hazards.
- After each use, remove any oil or grease residue from the plates and collection tray they could catch fire due to heat the next time they are used.
- The Barbecue is designed exclusively for cooking food placed on the supplied plates (including the optional ones that can be purchased separately, see list of original accessories).
- Any other improper use or use with non-original accessories voids the warranty

and the manufacturer's liability.

- Keep away from atmospheric agents.
- Any repair or extraordinary maintenance must be carried out exclusively by authorized technical personnel, who must use only original spare parts.
- Repairs performed by inexperienced personnel may cause malfunctions or damage to property or persons. If necessary, contact the retailer where the appliance was purchased.
- Use only a mild detergent specifically designed for stainless steel.
- Abrasive products and steel wool can scratch the surface. Always clean following the grain direction of the material.
- Handle components with a Total Black finish with care. The Total Black finish, similar to the glass, can chip if subjected to impacts. Stainless steel parts tend to discolor when heated, taking on a golden-brown or burnished hue. This is normal and does not affect the performance of the BBQ.

Disposal of packaging and product:

- After installation, the packaging can be disposed of with normal household waste, taking care to separate the materials according to current waste separation regulations.
- To dispose of this product, please take it to the appropriate collection point in your country to ensure proper recycling of all mechanical and electrical parts without causing harm to the environment.

Assembly and installation must be carried out by a qualified and competent technician in compliance with current legislation.

 
- Remove all packaging and check that there is no damage due to transport. Otherwise, contact the dealer before proceeding with assembly.
- Do not modify any of the appliance's components. Any alteration to the specifications could be dangerous.
- Do not let connecting cables come into contact with or become trapped under the appliance.
- The manufacturer declines all responsibility in case of failure to comply with the safety instructions given in this manual.

Safety Distances for Installation


- To ensure safe and efficient use, all our built-in Fry Tops and Barbecues, whether fully built-in or semi-built-in, must be installed maintaining a minimum distance of 2 cm from wall units, furniture, walls or other surrounding

elements and must not come into contact with combustible materials.

- Failure to respect this distance may result in:
 - Equipment overheating during use.
 - Incorrect ventilation, resulting in reduced performance and possible malfunctions.
 - Heat transfer to adjacent materials, with risk of structural damage or potential injury to people.
 - Fire
- Respecting this technical clearance is essential to ensure correct heat dissipation and safe operation of the product.
- The manufacturer declines all responsibility for material or physical damage resulting from failure to comply with the above instructions.
- Furthermore, it reserves the right NOT to be liable under the warranty if the fry top or barbecue is installed by unauthorized personnel or by unrecognized external installers.

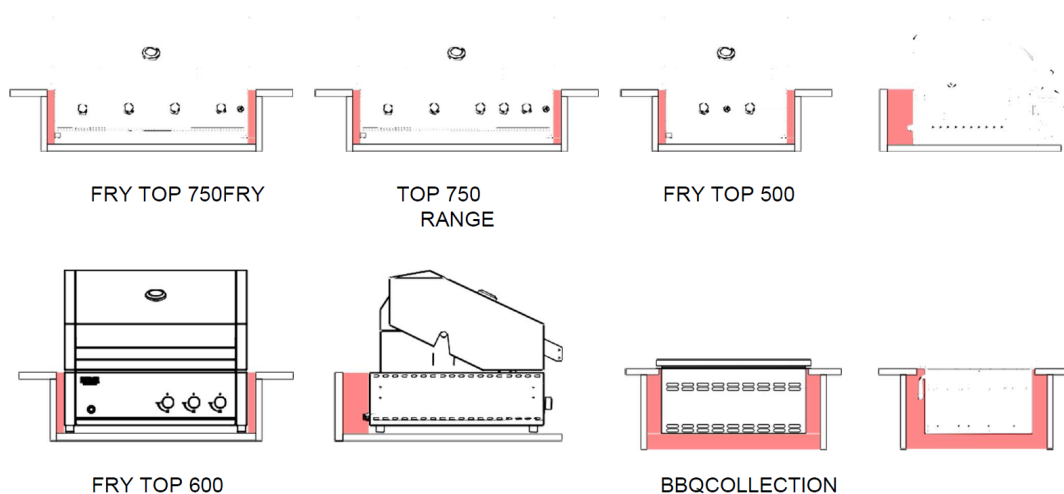

Dimensions

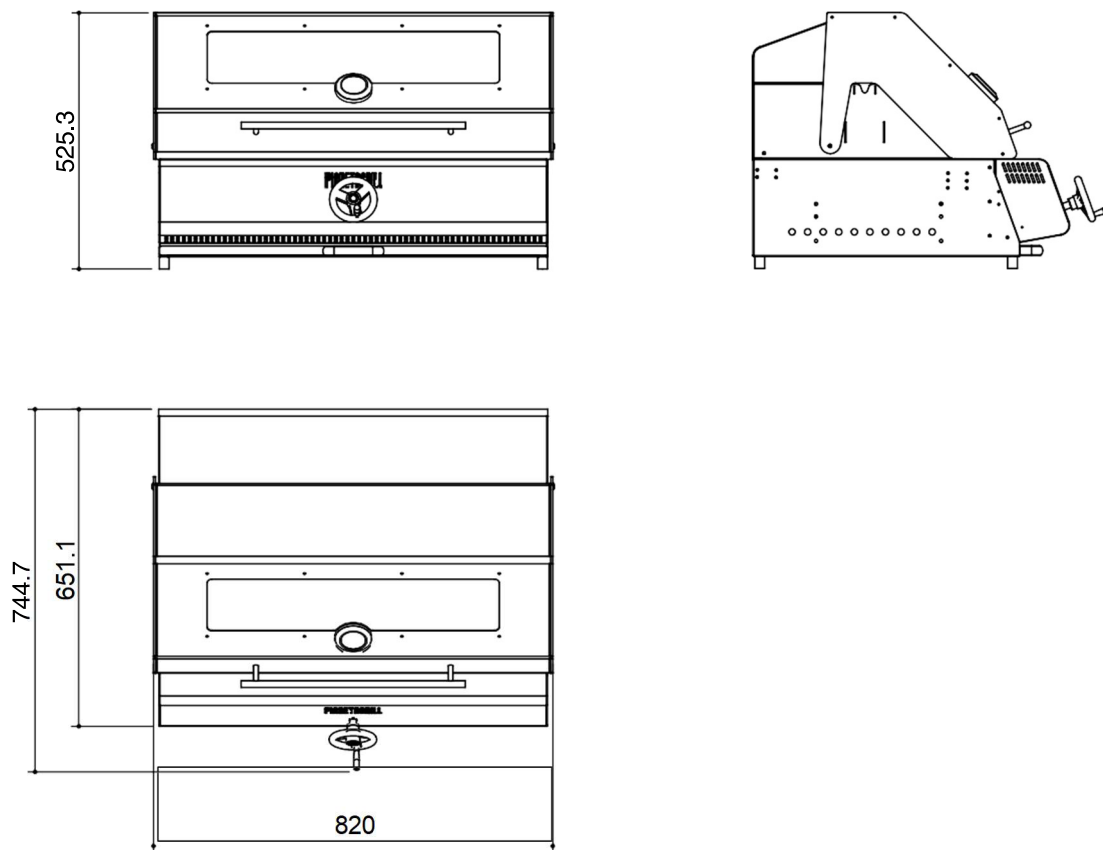 

Power Requirements

- The appliance works with any type of charcoal or embers.

Attention

For installation, it is necessary to comply with the laws, provisions, directives and standards in force in the country of use (safety regulations, regular and compliant recycling, etc.)

Lighting and using the barbecue

Remove the cooking grate, prepare the coals in a brazier, once ready arrange them evenly on the grate.

 
Replace the cooking grate.



Warning

The appliance can reach high temperatures in the areas near the cooking plate.

Barbeque Components


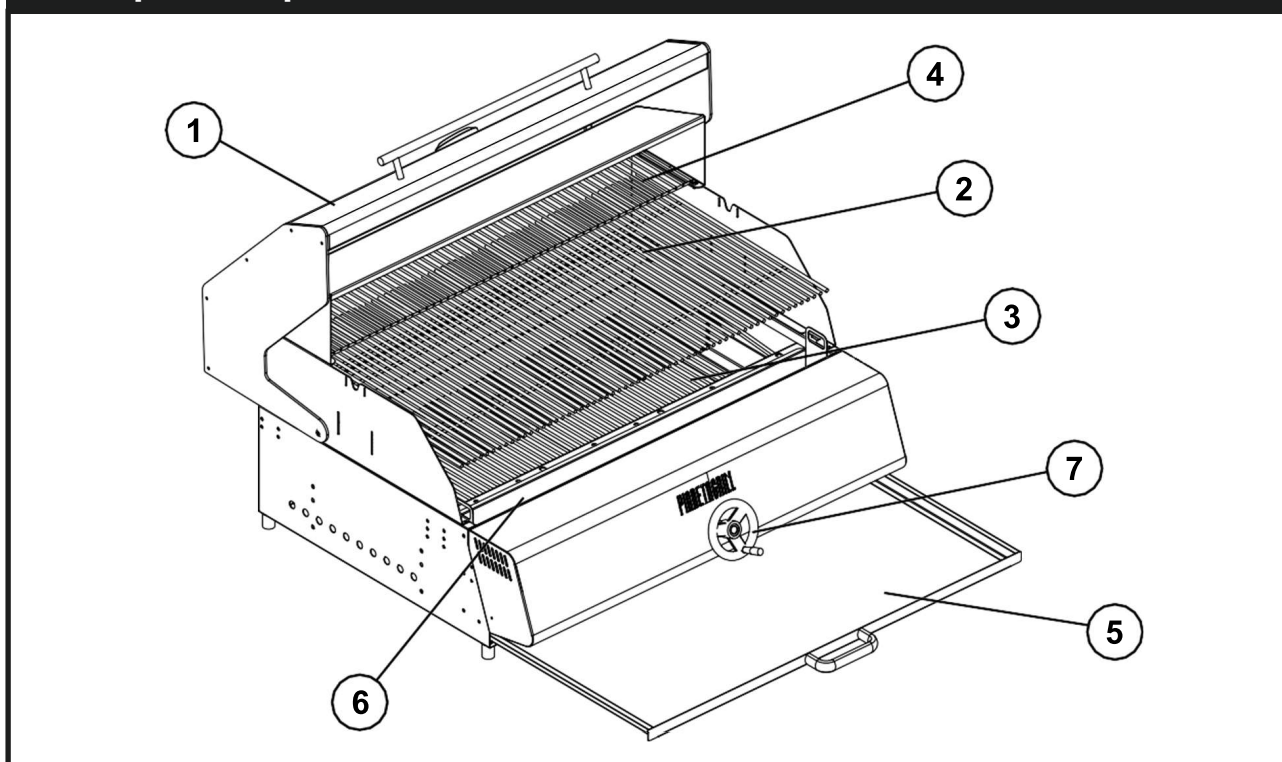


1	Hinged lid	Optional
2	Cooking grid	Standard
3	Adjustable ember grill	Standard
4	Raised grill	Standard
5	Grease/ash collection drawer	Standard
6	Gas collection drawer	Standard
7	Ember grill adjustment crank	Standard

① The machine does not require any assembly, it arrives fully assembled and tested.

Spare parts and accessories

  Standard/optional spare parts and accessories:

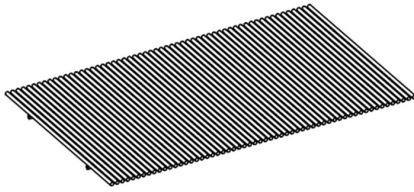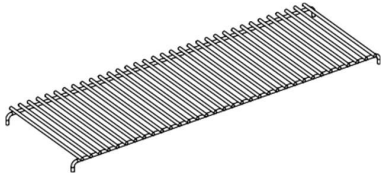	Ø 8mm AISI 304 stainless steel rod plate	Measures: 375x450 smooth 750x450 smooth
	Raised grill Ideal for heating or keeping black hot foods during cooking	The grid is only applicable to the Steel Glass lid cover.
	Analogue lid thermometer	

Important

- All cleaning and maintenance operations must be carried out when the barbecue is cold.
- Also wear protective gloves to avoid scratches or abrasions from the sheet metal.
- Abrasive cleaning products and sharp objects will damage the appliance.
- For safety reasons, cleaning the equipment with steam or high-pressure cleaners is prohibited.

Cleaning

- Do not use aggressive products such as those containing ammonia.
- After use, remove the cooking grate and the grease/ash drawer and remove any ember residue in the ember grate.
- To make cleaning easier, remove the grill grate (see image below).
- To remove the grease/ash collection drawer, adjust the ember grill to medium height. Then use water and a liquid detergent to remove any grease and ash residue from the plates and the grease/ash drawer. Also remove any detergent residue.

