

CLEANING

Please note: Before cleaning the steamer, the appliance must be disconnected from the power supply.

Any deposits, starch or adhesive residues on the heating plate can be removed with a damp cloth or a non-abrasive liquid cleaning agent. Do not scratch the plate with steel wool or metal tools. The plastic parts can be cleaned with a damp cloth and then wiped dry with a dry cloth.

DISPOSAL

At the end of its service life, this product must be returned to a collection point for recycling electrical and electronic equipment.



**Extensive maintenance that requires access to the internal parts of the appliance should only be carried out by a specialized service center!
Failure to comply with the manufacturer's instructions will invalidate the right to warranty repairs!**