

**AXENT**  
SWITZERLAND



AXENT.ONE / AXENT.ONE<sup>PLUS</sup>

**CLEANING** MAINTENANCE

Article No. E80.0500.0001.9

Article No. E80.0510.0001.9

## CERAMICS

Use for daily cleaning of ceramic surfaces with a clean cloth, warm water and a mild liquid detergent. Wipe the surface where possible, dry with a soft cloth. The use of abrasives, solvents, microfibre cloths and abrasive sponges are not recommended because they can damage the surface. Use a bathroom cleaner to remove stubborn dirt.

Use a mild soap solution to clean the seat and please take care that the seat and hinges are not left damp. Dry off any residual water or cleaning agent with a soft cloth. Avoid contact of the seat and hinges with abrasive, corrosive or chlorine-based cleaners, as these may cause damage or lead to flash rust.

## CLEANING TOILET SEAT



### Removing the WC seat/cover unit


- Fold up the seat and cover.
- Pull the seat with cover vertically 90° upwards out of the holder.

### Cleaning the WC seat and cover

- Clean the WC seat with a damp cloth.
- Use a soft sponge for stubborn dirt and then wipe dry.



There are electronics in the seat, so do not immerse or rinse in water! Make sure that the hinges do not remain damp, wipe dry.

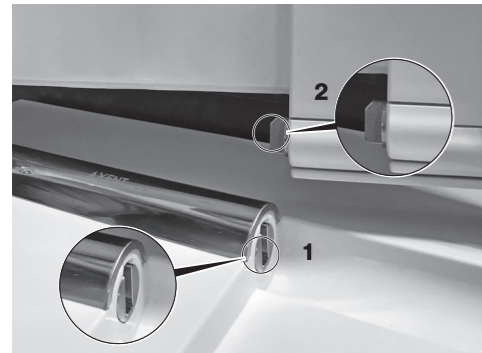

### Cleaning hinges

1. clean and dry the hinges on the cover with a damp cloth.
2. clean bolts on WC seat with a damp cloth and dry.



### Fitting the WC seat/cover unit

1. insert the WC seat with cover vertically from above  
The left hinge pin from the seat must first be pushed into the left side of the seat support.
2. while pushing in the right hinge pin on the seat, let the WC seat slide down completely.
3. the pressed hinge pin audibly engages in the holder.



[youtube | Disassembly / assembly WC seat cover](#)

## CLEANING THE SHOWER ROD

Service functions can be carried out via the multi-function rotary knob.



### Level 2 activation

- Keep the rotary knob pressed (5 sec) until the „ambient light“ flashes slowly.
- Release the knob.
- Press the rotary knob again (5 sec.) until „Ambient light“ flashes quickly.



### Extending the shower rod

- Turn the knob clockwise.



If no adjustment is made within 3 minutes, the shower rod is automatically retracted.



The shower rod extends.

- Clean the Inox shower rod with a soft cloth, sponge or brush.

### Resetting the shower rod

- Turn the knob clockwise again.

The shower rod returns to its original position.




[youtube | Cleaning / Decalcifying](#)

## DECALCIFYING SHOWER ROD AND WATER-BEARING PARTS




Prepare a container with 200 ml liquid descaler (preferably Durgol).

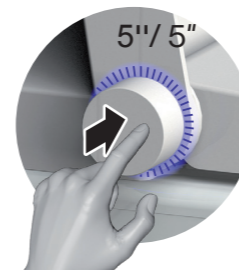

### Activation level 2

- Keep the rotary knob pressed (5 sec) until the „ambient light“ flashes slowly.
- Release the knob.
- Press the rotary knob again (5 sec.) until „Ambient light“ flashes quickly.

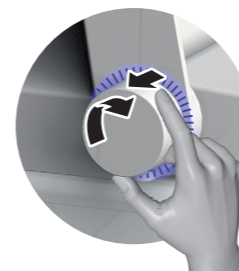

### Extending the shower rod / emptying the water system

- Pull out the knob and turn it clockwise.

The water system is completely emptied and the shower rod extends without shower function.



- Immerse the shower rod in a container
- Allow the descaling liquid to soak up completely.

The shower rod retracts and the liquid descaler circulates in the water-bearing parts. The liquid descaler is automatically ejected. The entire water system is rinsed 3 times with fresh water. The night light flashes slowly during the entire process.

**This process takes about 3 minutes and cannot be interrupted.**

## REMOTE CONTROL

---

The AXENT.ONE<sup>Plus</sup> model has a remote control.

### Cleaning the remote control

Wipe the remote control with a slightly moistened, lint-free cloth with a small amount of detergent.

### Charging the battery

Please charge the remote control for at least 24 hours before the first use.

If less than 15% power remains, the AXENT logo on the remote control will flash,

- This means that the battery must be charged.
- To do this, connect the original charging cable supplied to the charging connector on the remote control.
- The indicator light shows the battery power.
- If all 5 LEDs light up, the remote control is fully charged.



## CLEANING RECOMMENDATION

---

### Cleaning interval

### Cleaning extent

Regularly

- Wipe water drops dry with a soft, lint-free cloth

Weekly /  
per month

- Remove the toilet seat and lid and clean them separately
- Clean hinges on toilet seat and cover with a moistened cloth
- Thoroughly wipe all surfaces and corners with a damp, lint-free cloth and a mild, liquid cleaning agent
- Check the spray nozzle for signs of scaling

Quarterly

- Work out the decalcification program

A current version of this document and additional documents can be downloaded via [www.axentbath.ch](http://www.axentbath.ch)

**AXENT International AG**

[info@axentbath.ch](mailto:info@axentbath.ch)  
[www.axentbath.ch](http://www.axentbath.ch)