# MAINS CABLE CONNECTIONS AS **FOLLOWS:**

- > Red or Brown wire to Live terminal marked "L".
- > Black or Blue to Neutral terminal marked "N".
- > Green or Yellow and Green to Earth terminal marked " (\_\_\_)" or to the green screw marked " $\bigoplus$  '.



> Bare grounding earth wires should be sleeved with green and yellow tubing. Colours of live and neutral wires depend on voltage of supply service and requirements of Building and Electrical Code having jurisdiction.

Service Tool included Security hex driver 4mm (5/32" pin-hex will work if tool is lost).

# RECOMMENDED MOUNTING HEIGHTS (MM)

From top edge of dryer aperture to finished floor level

> Men 1165 > Women 1090 990 - 1090 > Children

# CAPACITY

|                        | Length<br>Min-Max | Width<br>(mm) | Quantity |
|------------------------|-------------------|---------------|----------|
| C Fold paper towels    | 225-250           | 90-100        | 200      |
| Interleave paper towel | 215-250           | 80-100        | 300      |

### Waste Bin Capacity

• 10 litres

# **OPERATION**

#### Paper Towel Dispenser

> To refill, open door with key provided. Place paper towels between guides.

### Hand Dryer:

- > Shake excess water from hands
- > To activate dryer place hands in dryer bowl and repeatedly turn hands over until dry. Heater has built in safety thermal cut off. Sensor has I second inactivity cut off.

#### Waste Bin:

> The bin can be accessed by opening door with key provided

#### Emptying of bin:

> Open door, slide bin forward and remove from guide rails, fit suitable bin liner. Push bin back over slide rails into back box void and shut door.

## CARE AND MAINTENANCE

Periodic cleaning of the unit is recommended to ensure optimum performance.

- > Clean door panel with glass cleaner and dry with a clean soft cloth.
- > To maintain finish of stainless steel parts use any industrial steel cleaner, polishing along the material grain with a clean soft cloth.
- > Internal cleaning; Disconnect the electrical supply.
- > Remove the two cover mounting screws
- > Remove the cover
- > Clean all dust/lint from the interior of the dryer.
- > Replace the cover. Do not over tighten the screws.
- > Never Use Corrosives such as bleach or other cleaning products containing hypochlorite;
- > Any form of acid solution or industrial cleaning solution; Bathroom cleaning products, developer liquids, concentrated disinfectants, strong alkalis or caustic soda;
- > Never Use Abrasives such as wire wool; scouring pads;
- > Caution Never use dirty or grit contaminated cleaning sponges or cloths

02.403 I User Manual www.dolphinsolutions.co.uk