

## MAINS CABLE CONNECTIONS AS FOLLOWS:

- › Red or Brown wire to Live terminal marked "L".
- › Black or Blue to Neutral terminal marked "N".
- › Green or Yellow and Green to Earth terminal marked "⏚" or to the green screw marked "⏚".
- › Bare grounding earth wires should be sleeved with green and yellow tubing. Colours of live and neutral wires depend on voltage of supply service and requirements of Building and Electrical Code having jurisdiction.

**Service Tool included** Security hex driver 4mm (5/32" pin-hex will work if tool is lost).

## RECOMMENDED MOUNTING HEIGHTS

From top edge of dryer aperture to finished floor level

› Men	1270
› Women	1195
› Children 4-7 years	890
› Children 8-10 years	990
› Children 11-13 years	1090
› Children 14-16 years	1195
› Handicapped	1015

## OPERATION

- › Shake excess water from hands
- › To activate dryer place hands in dryer bowl and repeatedly turn hands over until dry. Heater has built in safety thermal cut off. Sensor has 1 second inactivity cut off.

## CARE AND MAINTENANCE

**Periodic cleaning of the unit is recommended to ensure optimum performance.**

- › Clean with soap and warm water; dry with a clean soft cloth.
- › To maintain finish of stainless steel parts use any industrial steel cleaner; polishing along the material grain with a clean soft cloth.
- › Internal cleaning; **Disconnect the electrical supply.**
- › Remove the two cover mounting screws
- › Remove the cover
- › Clean all dust/lint from the interior of the dryer.
- › Replace the cover. Do not over tighten the screws.
  
- › **Never Use Corrosives - such as bleach or other cleaning products containing hypochlorite;**
- › **Any form of acid solution or industrial cleaning solution; Bathroom cleaning products, developer liquids, concentrated disinfectants, strong alkalis or caustic soda;**
- › **Never Use Abrasives – such as wire wool; scouring pads;**
- › **Caution – Never use dirty or grit contaminated cleaning sponges or cloths**