

# AQUAECO

WASHROOM AND PLUMBING SOLUTIONS

---

## Installation Guide



**AQE-MLI-254-XX**  
M-LINE TOUCHLESS SOAP DISPENSER


A member of SANIPEXGROUP




## Specifications:

Model No.	AQE-MLI-254-XX
Material	Brass
Sensing range	15±3cm
Activation time	0.5-1s
Power supply	AC:220V DC:1.5V 4pcs
Viscosity Soap	100-3500cp(mpA·s)
volume Bottle	≤2mL/times(four gear)
capacity	1.6-2L
Ambient temp.	Normal temperature

## Installation:

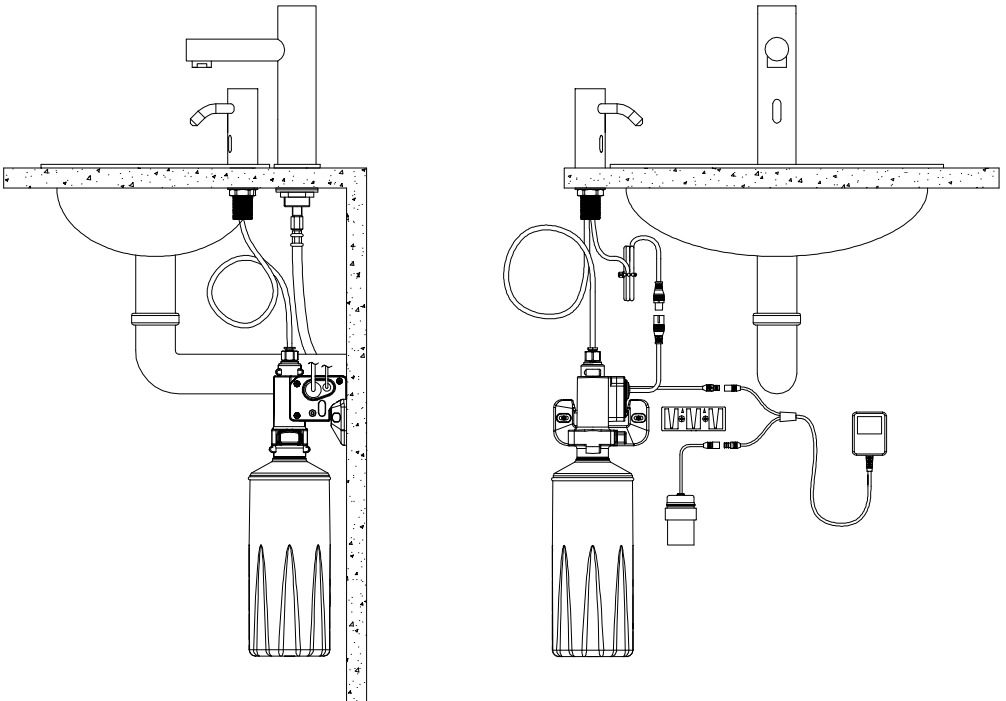


# Roughing in:

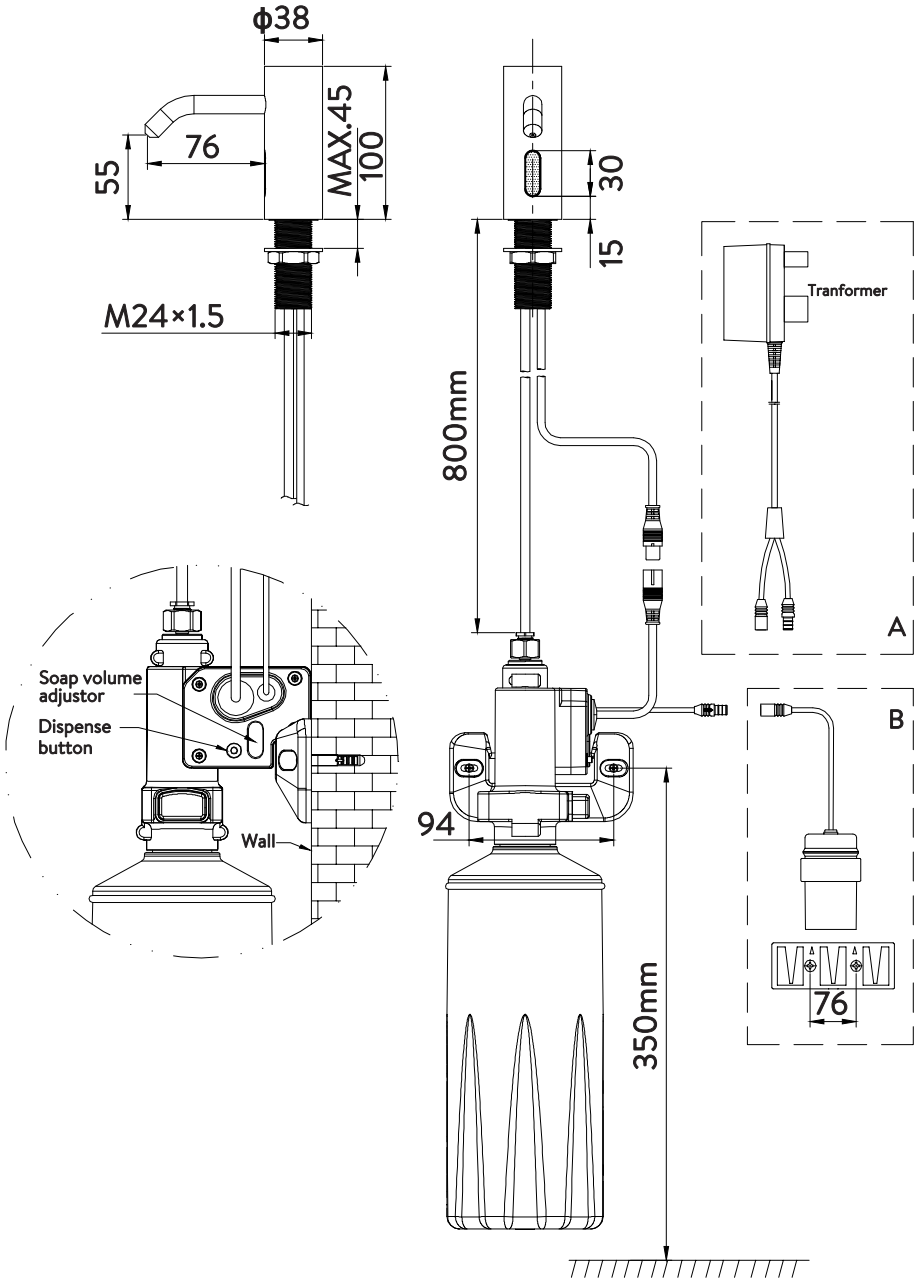

## Installation steps:

- 1, Fill liquid soap into bottle capacity.
- 2, Press and hold the dispense button on the control box, release till the soap is dispensed.
- 3, Start the system by passing your hand in the sensor range, soap will dispense automatically.

**Note:** It has four soap dispense volume adjustment: 1: Low volume  
2, Normal volume  
3, Medium volume  
4, High volume

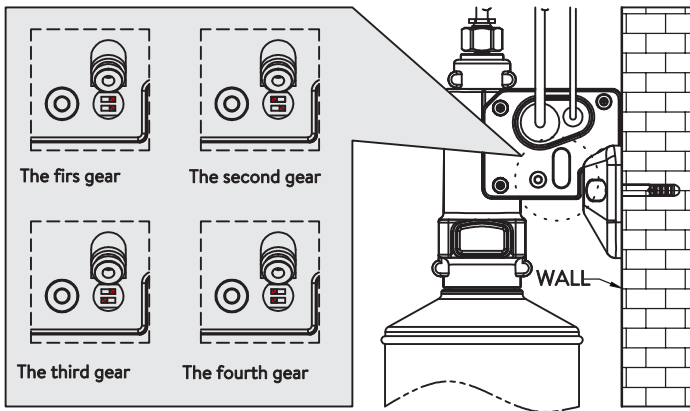

### Caution:

- 1, Ensure soap is free of particles, and filling cup is clean.
- 2, Clean soap tank with water periodically.
- 3, Refill soap when soap level is approximately 20mm.
- 4, Replace batteries when red light in sensor window blinks.
- 5, Use soft and moist cloth to clean, avoid spraying water directly at the system.





