

# GYMKHANA

## SAFETY PRECAUTIONS WARNINGS:

- The purpose of the umbrella is to provide shade from the sun.
- When adjusting the umbrella, make sure no person(s) or any item(s) are close to the umbrella. This is important in preventing any injury or damage to anyone or anything.
- NEVER LEAVE UNATTENDED, up, or use in windy conditions/gust or storms.
- It is best to remove the upper half of the umbrella from the base in off season.
- The manufacturer or retailer is not liable for any loss, or damage of the product, or other items due to the failure of not removing the umbrella from the umbrella base during windy-stormy conditions.

## CARE AND MAINTENANCE:

- To ensure your GYMKHANA product performs and gives many years of use, please follow these recommendations carefully, as any damages resulting from poor maintenances are not covered under the warranty.
- Most products can be cleaned with warm water, a mild soap and a clean, soft cloth. It is not required to use any abrasive cleaning pads, wire wool or micro-fibre cloths to clean the product.
- Avoid a vigorous cleaning action.
- Abrasive or strong cleaning products containing ammonia, bleaches, alcohol, dyes, acids (hydrochloric, formic, phosphorus, chlorine or acetic) will be detrimental to the product finish.



# GYMKHANA

