

 
BYSTRO

EN

Sorrento Built-In Electric BBQ / Installation and User Manual

Thank you for choosing this product.

This Installation and User Manual contains important safety information and instructions on the operation and maintenance of your appliance. Please take the time to read this User Manual before using your appliance and keep this book for future reference.

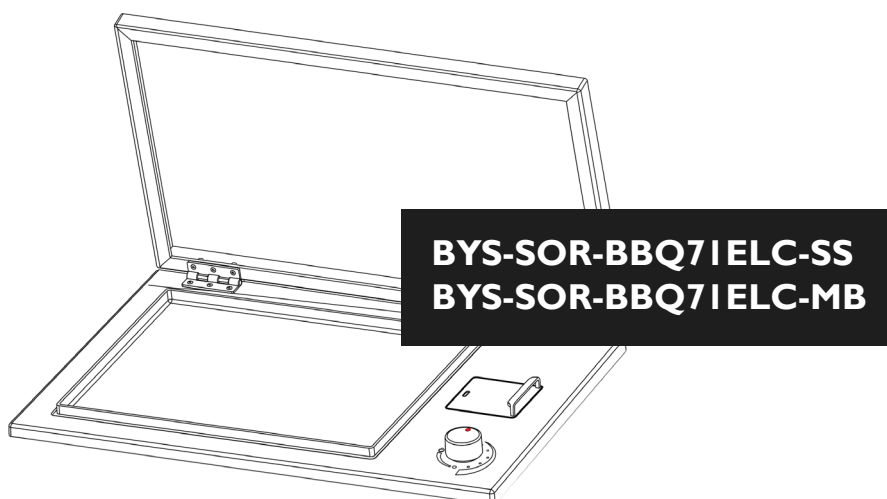

2
YEAR
WARRANTY

Dear Customer,

Thank you for choosing our product. We would like you to be satisfied with our product, which has been produced in our highly qualified, technological and modern facilities.

You can use your BBQ with pleasure and confidence for many years by performing required maintenance and showing necessary care. Read the whole manual. Retain the manual during use of the product. If you hand the product over to someone else, give them the manual as well.

⚠ This Operating Manual maybe prepared for multiple models. Some of the features mentioned may not be available in your product.

Symbol	Meaning
	Important Information
	Warning - Caution
	Risk of Electric Shock
	Risk of Fire
	Indicates risk of burns from touching hot parts of the machine
	Indicates the obligation for the operator to wear gloves

1 - Safety Instructions	4
During Use	4
2 - Installation	6
Power Requirements	6
Lighting and use of the barbecue	7
3 - Use and operation	7
4 - Maintenance and cleaning	9
Solving operational problems	10
5 - Troubleshooting	10

- It is recommended to read this manual before mounting and use.
- For your safety it is essential to strictly follow the instructions of this manual, which should be carefully guarded for any future consultations.
- This Barbecue can only be used for home use and should not be used as surface support or worktop.

**Attention**

We recommend reading this manual before assembly and use.

For your safety, it is essential that you carefully follow the instructions in this manual, which should be kept carefully for future reference.

This barbecue is for domestic use only and must not be used as a support surface or worktop.

**Child Safety**

The use of the apparatus is intended only for adults. Keep children away during operation due to the danger of burns (the barbecue reaches high temperatures also in the outside walls as well as on the cooking plates).

After cooling, there is a danger of falling flat pans, so do not let children play near the appliance even when it is not used.

**Caution**

Do not leave the barbecue unattended while it is in operation or cooking food.

During Use

- Even some perimeter walls in addition to cooking plates reach high temperatures during operation.
- Do not place flammable liquids, incendiary materials or objects that can melt (such as food film, plastic or aluminum) on or in its immediate vicinity
- Use protective gloves while operating.
- If you use other household appliances nearby, be careful that the electric cables are not exposed to the hot surfaces of the appliance, could be damaged with danger of electrocution.
- Wait for complete cooling after use before cleaning and storing to avoid any danger of burns.
- After each use, remove any oil or grease residues from the plates, drain channels and collection drawer, may ignite due to the effect of heat at the next use.
- The Barbecue is designed exclusively for cooking food placed on the plates supplied (including optional purchased separately, see list of original accessories).
- Any other improper use or with non-original accessories, forfeits the warranty and liability of the manufacturer.
- Keep away from atmospheric agents.
- Exclusively authorized technical staff, who must use only original spare

parts, must carry out any repair or extraordinary maintenance.

- Repairs carried out by non-expert personnel may cause malfunction or damage to property or persons.
- If necessary, you can contact the appliance shop.
- Use only a mild detergent specifically designed for stainless steel.
- Abrasive products and steel wool can scratch the surface. Always clean following the grain direction of the material.
- Handle components with a Total Black finish with care. The Total Black finish, similar to the glass, can chip if subjected to impacts. Stainless steel parts tend to discolor when heated, taking on a golden-brown or burnished hue. This is normal and does not affect the performance of the BBQ.

Disposal packaging and product:

- After installation, packaging can be disposed of together with normal household waste, making careful to divide the materials according to the current standard of separate collection.
- For disposal of the product, please contact the appropriate collection point in your country to enable a proper recycling of all mechanical and electrical parts without causing damage to the environment.

Assembly and installation must be carried out by a qualified and competent technician in compliance with current legislation.

- Remove all packaging and check that there is no damage due to transport. Otherwise, contact the dealer before proceeding with assembly.
- Do not modify any of the appliance's components. Any alteration to the specifications could be dangerous.
- Do not let connecting cables come into contact with or become trapped under the appliance.
- The manufacturer declines all responsibility in case of failure to comply

with the safety instructions given in this manual.

Power Requirements

 
 
 
- The apparatus can be connected to an electrical network at 230 V AC, 220 V AC or 240 V AC, 50-60 Hz.




Attention

For installation, it is necessary to comply with the laws, provisions, directives and standards in force in the country of use (safety regulations, regular and compliant recycling, etc.)

Dimensions

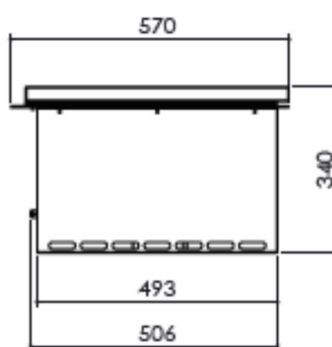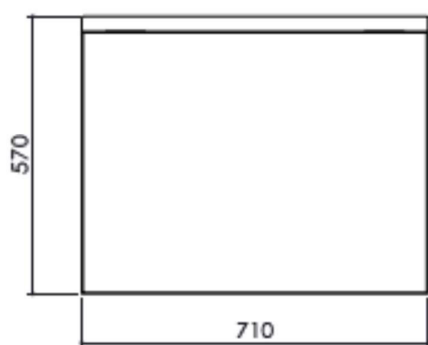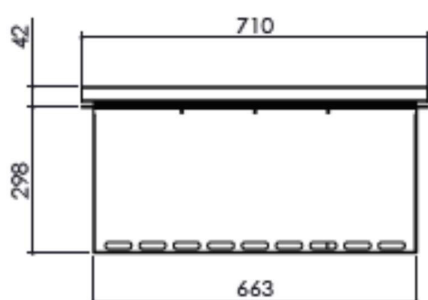


FORO INCASSO

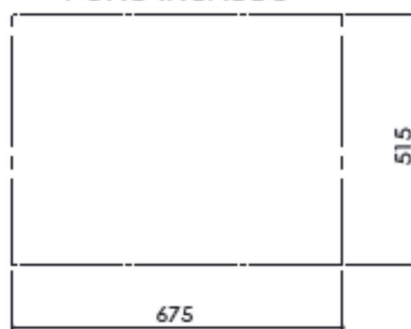 

*RECESSED HOLE

 Barbeque Components

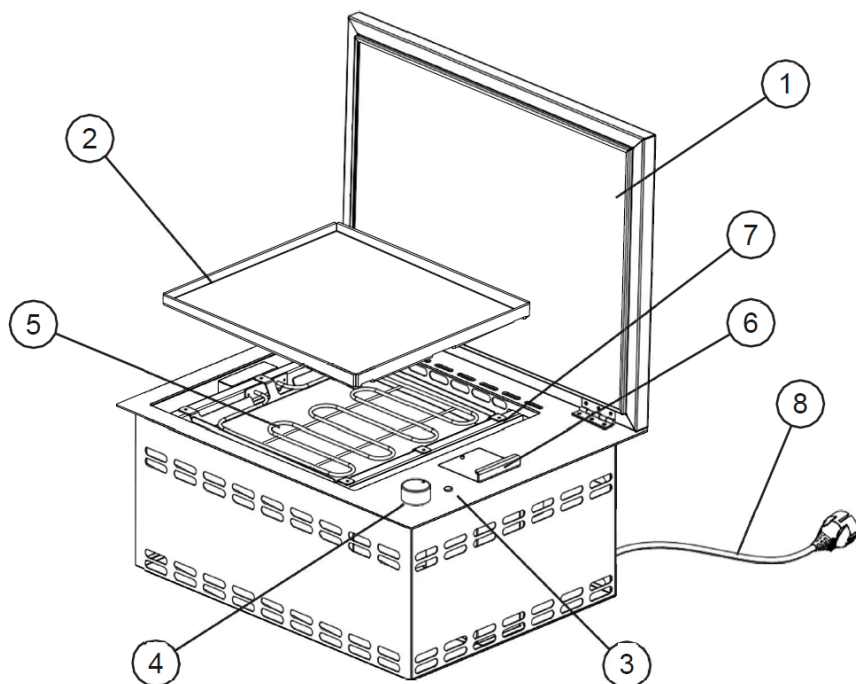

1	Hinged lid	Optional
2	Various and interchangeable cooking plates	Standard/optional
3	Function indicator	Standard
4	Power regulator knob	Standard
5	2400 W Electrical resistance	Standard
6	Grease collection drawer	Standard
7	Grease collection drawer	Standard
8	Power cord	Standard

- ① The machine does not need any assembly, it arrives fully assembled and tested, it is sufficient to place the cooking plate and connect the appliance to an electric network.

Lighting and use of the barbecue

Once all the previous assembly phases are completed, we are ready to turn on our barbecue. Turn the knob of the power regulator clockwise to switch on and to adjust the cooking power. Attention the appliance can reach high temperatures in the areas near the cooking plate.

 
 
 
 
The temperature uptake time depends on many external factors and the type of plate used, so it is advisable to initially make some preliminary cooking tests to become familiar with the times.

It is recommended to turn off the cooking area before the end of the cooking time, to take advantage of the residual heat.

To turn off the power regulator knob clockwise and anti-clockwise until you hear a closing click.

Spare parts and accessories

Standard/ optional spare parts and accessories:

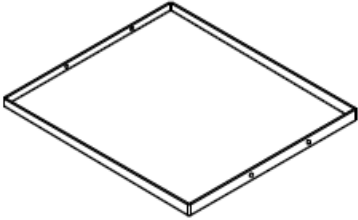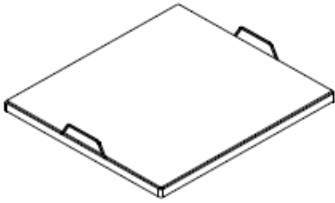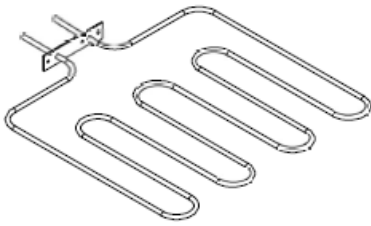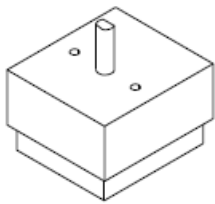
	Stainless steel plate in AISI 304/430 Please note: given the weight of the plate, it is recommended that two people handle it using the appropriate handles.	Measures: 250x450 smooth 500x450 smooth The plate is 6mm thick.
	Soapstone Suitable for fat-free diet cooking and for cooking pizza. Be careful not to wet the hot plate with cold water, wait for it to cool, otherwise it could break.	Measures: 250x450 500x450 (frame with handles supplied)
	Knob: - stainless steel	
	Electrical resistance	240 V 2400 W
	Potentiometer	

i Important

- All cleaning and maintenance operations must be performed when the barbecue is cold and turned off. Also, wear protective gloves to avoid scratches or abrasions from the metal parts.
- Abrasive cleaning products and sharp objects will damage the appliance.
- For safety reasons, cleaning the equipment with steam or high-pressure cleaners is prohibited.
- The glass-like, Total Black finish may chip if subjected to impacts.
- Stainless steel parts tend to change color with heat, taking on golden or burnished hues.
- This is a normal phenomenon and does not affect the performance of the barbecue.
- After use, remove the cooking plates and grease tray and remove residue with water and a liquid detergent. Also remove any detergent residue.
- The cooking fat is collected in the drawer located near the power control knob, and can be removed using the special handle for cleaning.
- The pin above the grease collection drawer acts as a grease level indicator; when it rises, it means the drawer is almost full and it's time to empty it.
- After each use, also clean the grease collection gutter.

Cleaning

 - Use only a mild detergent specifically designed for stainless steel. Abrasive products and steel wool can scratch the surface. Always clean in the direction of the grain.
- Handle components with a Total Black finish with care.

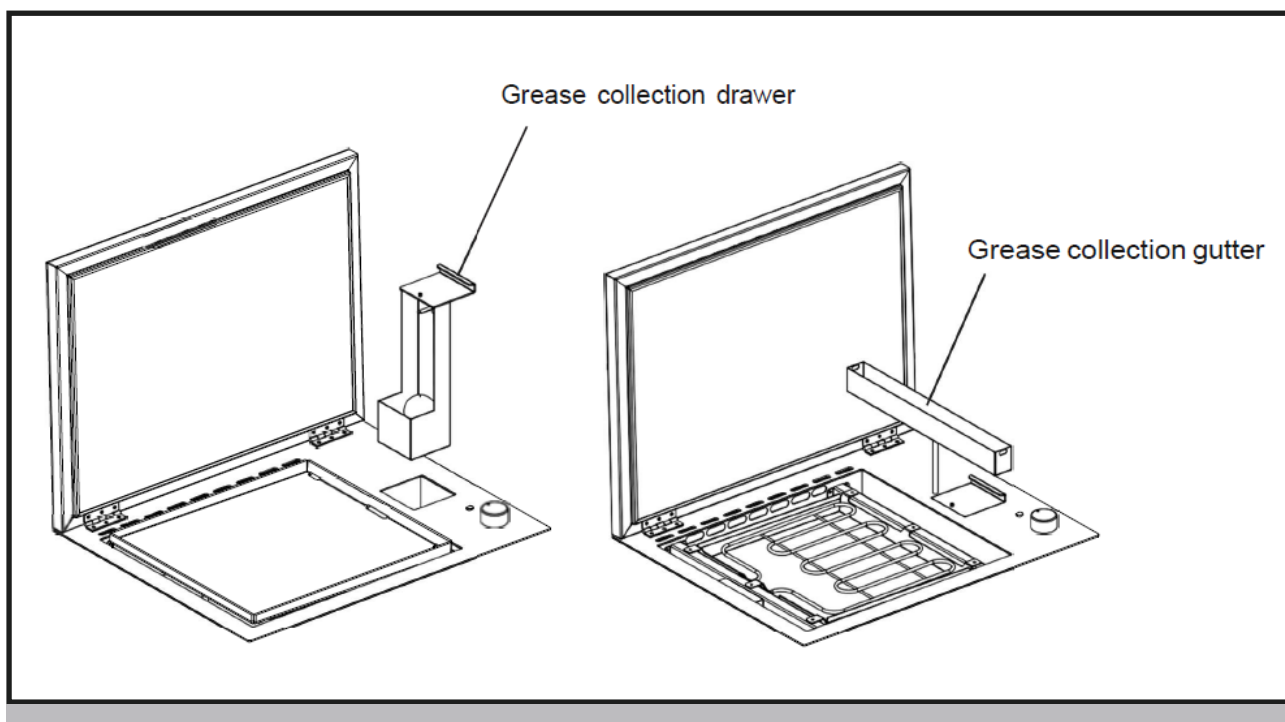

Solving operational problems

The malfunctions mentioned here are the situations that may occur usually. You can solve these problems easily without interfering with the product yourself.

- ① If the problem cannot be solved despite the instructions, call the dealer or the Authorized Service where you have bought the appliance from. In this case, never try to repair the appliance on your own.

Problem	Reason	Solution
Burner will not Ignite	Check the correct connection to the power grid	Disconnect and reconnect the apparatus to the electrical grid
Food is not cooking or is taking too long	Check the correct position of the hotplate	Place the plate correctly above the resistance
	The resistance inside could be damaged	Contact your dealer