



1

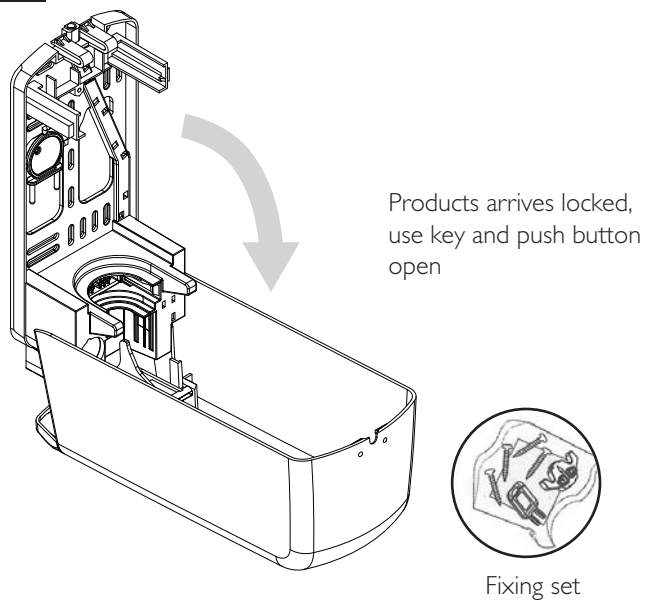


2

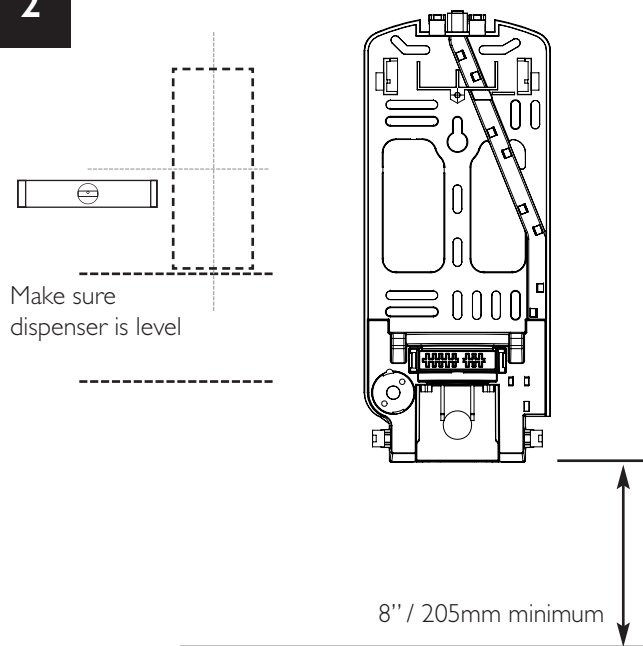


3

Use paper image on the back of this page to mark holes

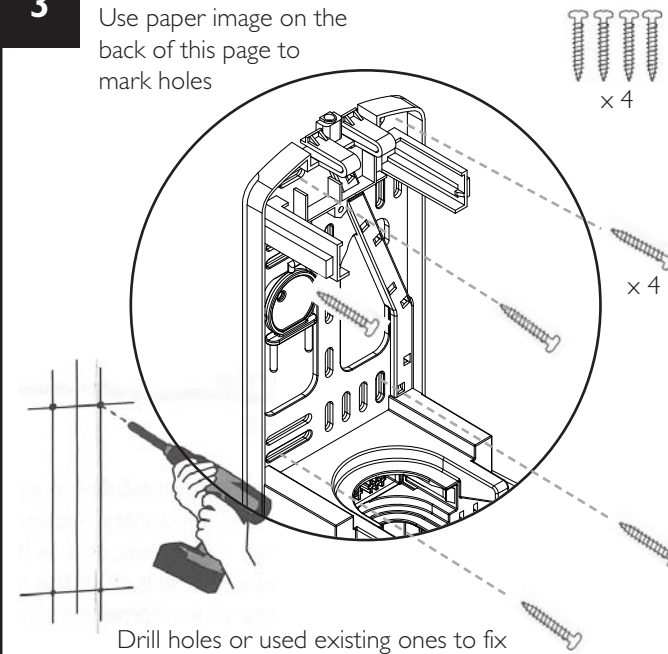


4

Remove transit cap from soap cartridge

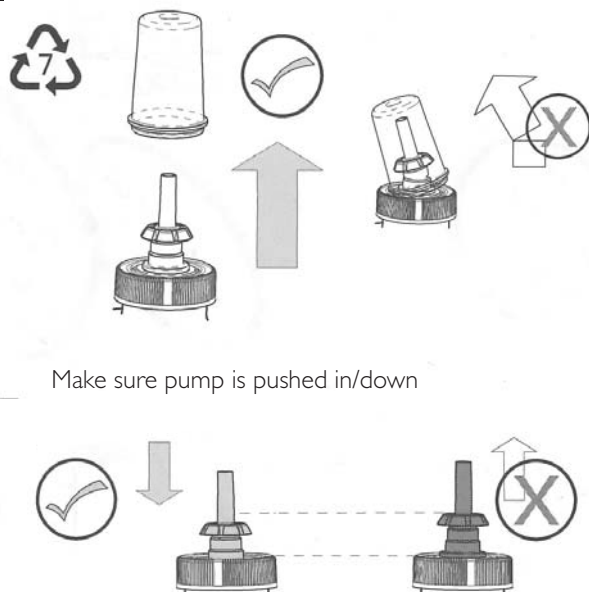


5

Locate cartridge with key into chassis housing.

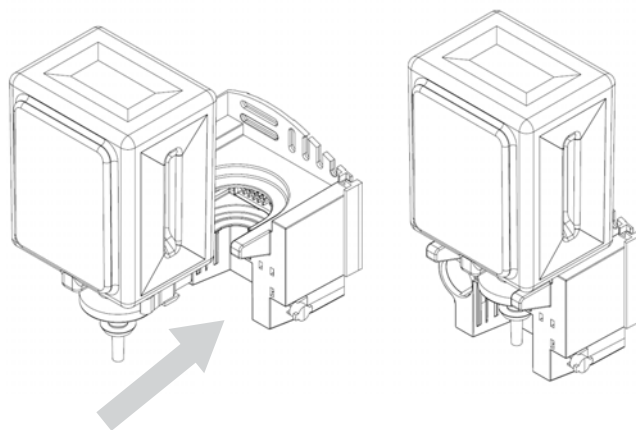

6

Close dispenser face and activate until product dispenses to ensure pump is primed.

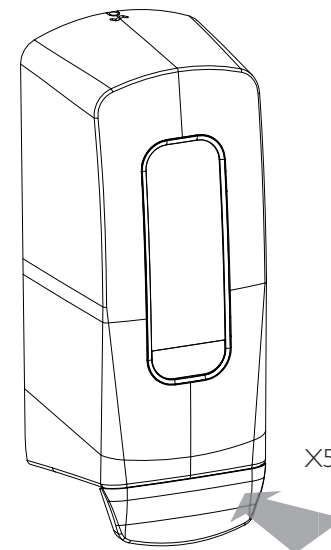

CLEANING AND MAINTENANCE

Clean exterior surfaces of the dispenser using warm water and mild soap. DO NOT USE ABRASIVE CLEANSERS. Dry with soft cloth

PRECAUTIONS

- 1. It is the installer's responsibility to ensure installation of unit complies with all applicable codes, standards and regulatory requirements.
- 2. Do not install this dispenser above heat sources or near sources of ignition/ flame.
- 3. Do not install where failure of the mounting system or dripping of product from hands may cause damage to equipment or create a potential safety hazard.

