


UMBRELLA SET UP

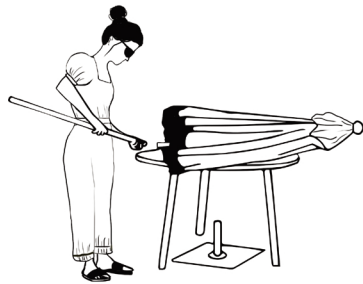

1. Once umbrella removed from cover, attach lower pole into upper pole. Screw firmly clock-wise untill tight.




2. Place the umbrella pole into umbrella stand or table center keeping canopy closed.




3. Reach under canopy and push plastic canopy base to open canopy.

CONTENTS



UMBRELLA

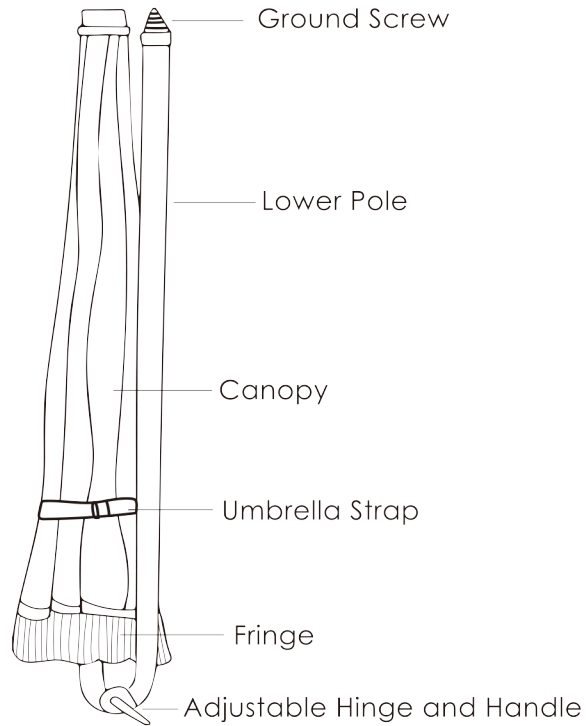

CARRY BAG

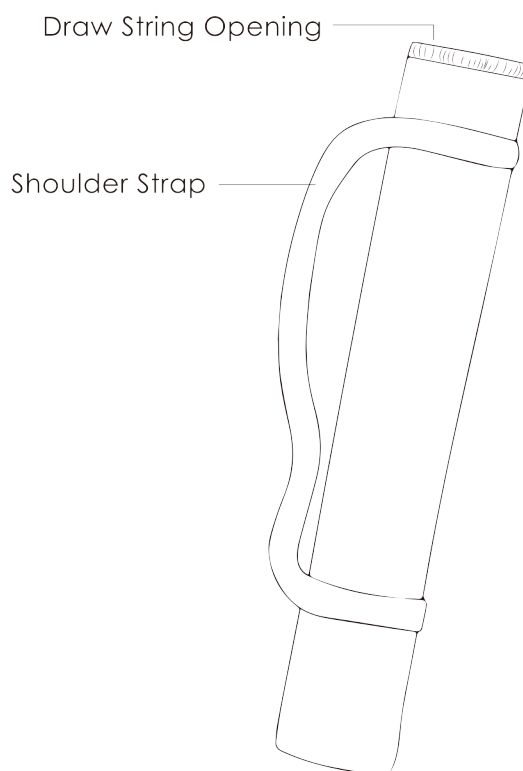

GYMKHANA

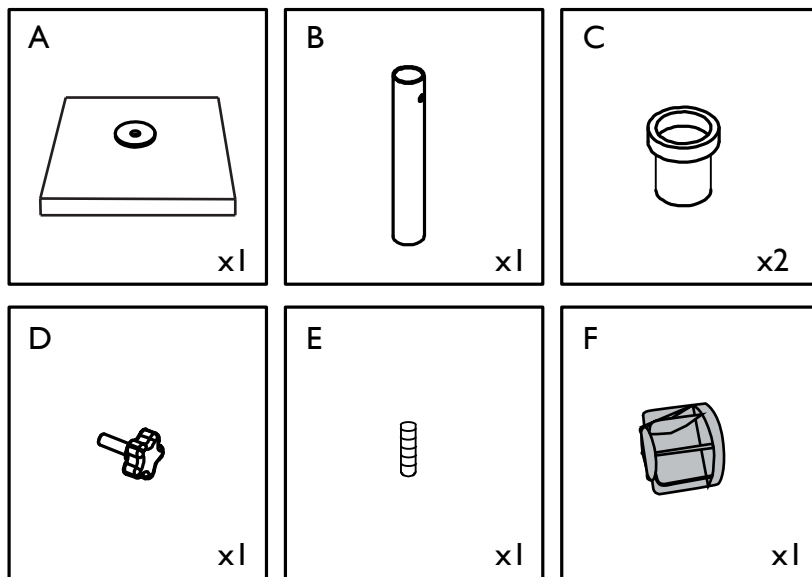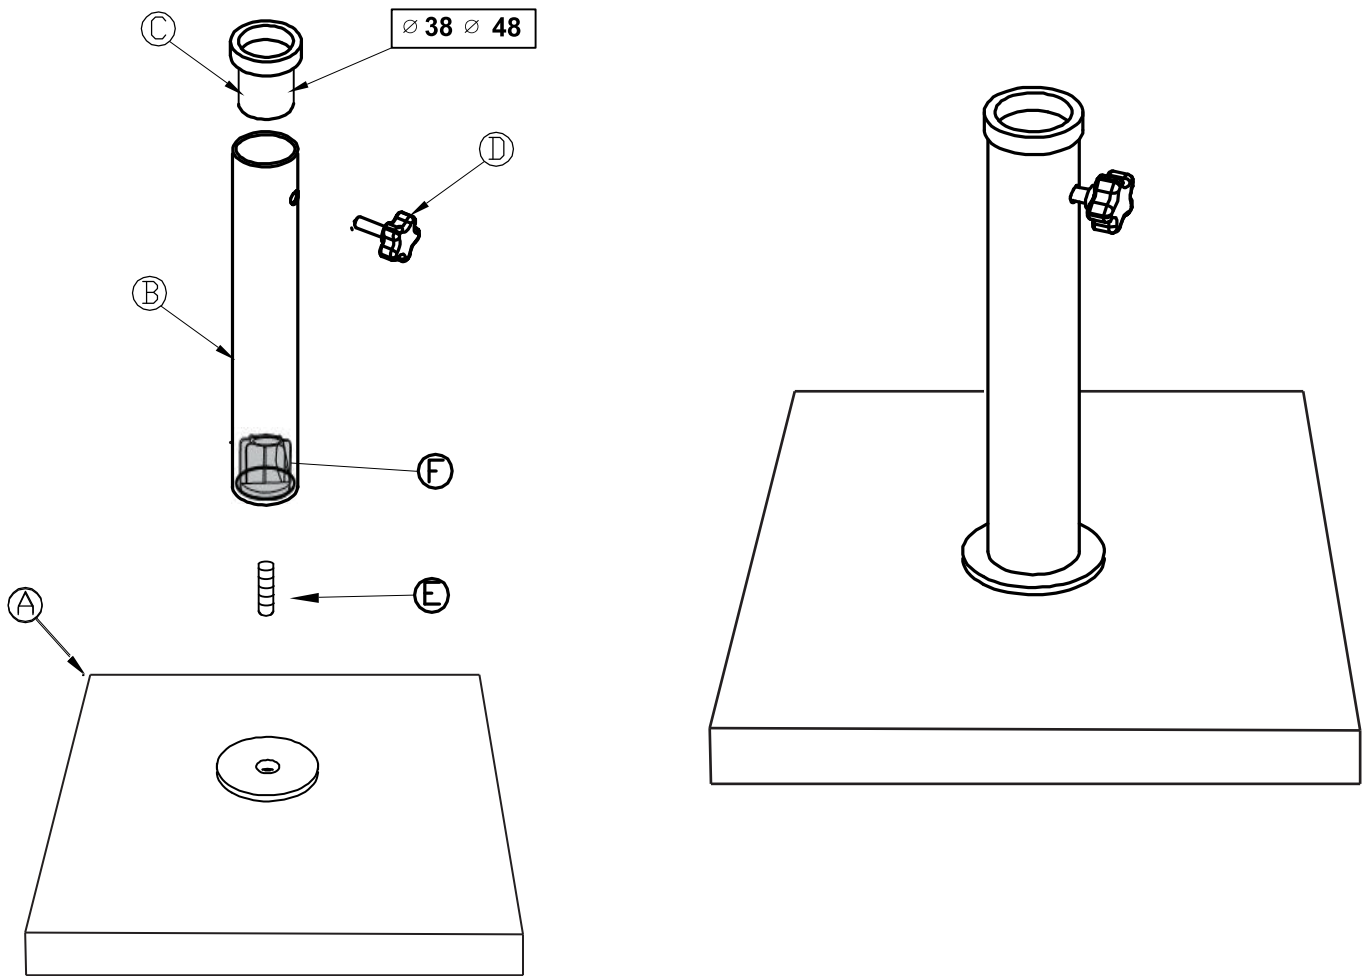

GYMKHANA

SAFETY PRECAUTIONS\ WARNINGS:

- The purpose of the umbrella is to provide shade from the sun.
- When adjusting the umbrella, make sure no person(s) or any item(s) are close to the umbrella. This is important in preventing any injury or damage to anyone or anything.
- NEVER LEAVE UNATTENDED, up, or use in windy conditions/gust or storms.
- It is best to remove the upper half of the umbrella from the base in off season.
- The manufacturer or retailer is not liable for any loss, or damage of the product, or other items due to the failure of not removing the umbrella from the umbrella base during windy-stormy conditions.

CARE AND MAINTENANCE:

- Allow a wet canopy to dry in open position.
- If necessary, clean the fabric with lukewarm water, mild detergent, and a sponge.
- Wipe sliding mark on the aluminum poles with a damp cloth.