


EN Fridge - Freezer / User Manual

AR ثلاجة / فريزر / دليل المستخدم

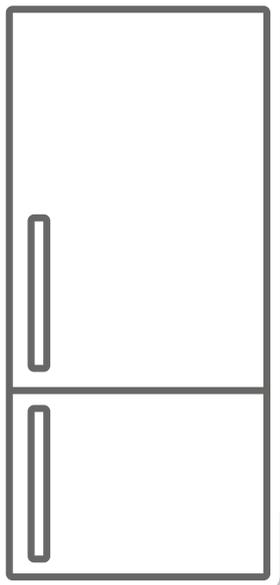

BYS-CFF243BI

Thank you for choosing this product.

This user manual contains important information on safety and instructions intended to assist you in the operation and maintenance of your appliance.

Please take the time to read this user manual before using your appliance and keep this book for future reference.

Icon	Type	Meaning
	WARNING	Serious injury or death risk
	RISK OF ELECTRIC SHOCK	Dangerous voltage risk
	FIRE	Warning; Risk of fire / flammable materials
	CAUTION	Injury or property damage risk
	IMPORTANT	Operating the system correctly

CONTENTS

1 SAFETY INSTRUCTIONS	3
1.1 General Safety Warnings	3
1.2 Installation warnings	7
1.3 During Usage.....	7
1.4 Electrical information (For UK type plug).....	8
2 DESCRIPTION OF THE APPLIANCE	9
3 USING THE APPLIANCE	9
3.1 Information on the Frost Free Technology	9
3.2 Display and Control Panel.....	10
3.3 Operating your Fridge Freezer	10
3.3.1 Super Freeze Mode.....	10
3.3.2 Super Cool Mode.....	10
3.3.3 Economy Mode.....	11
3.3.4 Holiday Mode.....	11
3.3.5 Drink Cool Mode.....	12
3.3.6 Screen Saver Mode.....	12
3.4 Temperature Settings	12
3.4.1 Freezer Temperature Settings	12
3.4.2 Cooler Temperature Settings.....	13
3.4.3 Stand-By Mode.....	13
3.4.4 Door Open Alarm Function	13
3.5 Temperature Settings Warnings	14
3.6 Accessories	14
3.6.1 Ice Tray (<i>In some models</i>)	14
3.6.2 The Bottle Holder (<i>In some models</i>)	14
3.6.3 The Freezer Box.....	14
3.6.4 The Fresh Dial (<i>In some models</i>)	15
3.6.5 Adjustable Door Shelf (<i>In some models</i>)	15
3.6.6 Maxi-fresh preserver (If available).....	16
4 FOOD STORAGE	16
4.1 Refrigerator Compartment.....	16
4.2 Freezer Compartment	17
5 CLEANING AND MAINTENANCE	20
5.1 Defrosting	20
6 SHIPMENT AND REPOSITIONING	21
6.1 Transportation and Changing Positioning	21
8 TIPS FOR SAVING ENERGY	24

1 SAFETY INSTRUCTIONS

1.1 General Safety Warnings

Read this user manual carefully.

⚠ WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

⚠ WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

⚠ WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

⚠ WARNING: Do not damage the refrigerant circuit.

⚠ WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

⚠ WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

⚠ WARNING: In order to avoid any hazards resulting from the instability of the appliance, it must be fixed in accordance with the instructions.

⚠ If your appliance uses R600a as a refrigerant (this information will be provided on the label of the cooler) you should take care during transportation and installation to prevent the cooler elements from being damaged. R600a is an environmentally friendly and

natural gas, but it is explosive. In the event of a leak due to damage of the cooler elements, move your fridge away from open flames or heat sources and ventilate the room where the appliance is located for a few minutes.

- While carrying and positioning the fridge, do not damage the cooler gas circuit.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is intended to be used in household and domestic applications such as:
 - staff kitchen areas in shops, offices and other working environments.
 - farm houses and by clients in hotels, motels and other residential type environments.
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
- If the socket does not match the refrigerator plug, it must be replaced by the manufacturer, a service agent or similarly qualified persons in order to avoid a hazard.
- A specially grounded plug has been connected to the power cable of your refrigerator. This plug should be used with a specially grounded socket of 13 amperes. If there is no such socket in your house, please have one installed by an authorised electrician.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances. Children are not expected to perform cleaning or user maintenance of the appliance, very young children (0-3 years old) are not expected to use appliances, young children (3-8 years old) are not expected to use appliances safely unless continuous supervision is given, older children (8-14 years old) and vulnerable people can use appliances safely after they have been given appropriate supervision or instruction concerning use of the appliance. Very vulnerable people are not expected to use appliances safely unless continuous supervision is given.
- If the supply cord is damaged, it must be replaced by the manufacturer, an authorised service agent or similar qualified persons, in order to avoid a hazard.
- This appliance is not intended for use at altitudes exceeding 2000 m.

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice cream and making ice cubes.
- One-, two- and three-star compartments are not suitable for the freezing of fresh food.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

1.2 Installation warnings

Before using your fridge freezer for the first time, please pay attention to the following points:

- The operating voltage for your fridge freezer is 220-240 V at 50Hz.
- The plug must be accessible after installation.
- Your fridge freezer may have an odour when it is operated for the first time. This is normal and the odour will fade when your fridge freezer starts to cool.
- Before connecting your fridge freezer, ensure that the information on the data plate (voltage and connected load) matches that of the mains electricity supply. If in doubt, consult a qualified electrician.
- Insert the plug into a socket with an efficient ground connection. If the socket has no ground contact or the plug does not match, we recommend you consult a qualified electrician for assistance.
- The appliance must be connected with a properly installed fused socket. The power supply (AC) and voltage at the operating point must match with the details on the name plate of the appliance (the name plate is located on the inside left of the appliance).
- We do not accept responsibility for any damages that occur due to ungrounded usage.
- Place your fridge freezer where it will not be exposed to direct sunlight.
- Your fridge freezer must never be used outdoors or exposed to rain.
- Your appliance must be at least 50 cm away from stoves, gas ovens and heater cores, and at least 5 cm away from electrical ovens.
- If your fridge freezer is placed next to a deep freezer, there must be at least 2 cm between them to prevent humidity forming on the outer surface.
- Do not cover the body or top of fridge freezer with lace. This will affect the

performance of your fridge freezer.

- Clearance of at least 150 mm is required at the top of your appliance. Do not place anything on top of your appliance.
- Do not place heavy items on the appliance.
- Clean the appliance thoroughly before use (see Cleaning and Maintenance).
- Before using your fridge freezer, wipe all parts with a solution of warm water and a teaspoon of sodium bicarbonate. Then, rinse with clean water and dry. Return all parts to the fridge freezer after cleaning.
- The installation procedure into a kitchen unit is given in the installation manual. This product is intended to be used in proper kitchen units only.

1.3 During Usage

- Do not connect your fridge freezer to the mains electricity supply using an extension lead.
- Do not use damaged, torn or old plugs.
- Do not pull, bend or damage the cord.
- Do not use plug adapter.
- This appliance is designed for use by adults. Do not allow children to play with the appliance or hang off the door.
- Never touch the power cord/plug with wet hands. This may cause a short circuit or electric shock.
- Do not place glass bottles or cans in the ice-making compartment as they will burst when the contents freeze.
- Do not place explosive or flammable material in your fridge. Place drinks with high alcohol content vertically in the fridge compartment and make sure their tops are tightly closed.
- When removing ice from the ice-making compartment, do not touch it. Ice may cause frost burns and/or cuts.
- Do not touch frozen goods with wet hands. Do not eat ice-cream or ice cubes immediately after they are removed from the ice-making compartment.
- Do not re-freeze thawed frozen food. This

may cause health issues such as food poisoning.

Old and Out-of-order Fridges

- If your old fridge or freezer has a lock, break or remove the lock before discarding it, because children may get trapped inside it and may cause an accident.
- Old fridges and freezers contain isolation material and refrigerant with CFC. Therefore, take care not to harm environment when you are discarding your old fridges.

CE Declaration of conformity

We declare that our products meet the applicable European Directives, Decisions and Regulations and the requirements listed in the standards referenced.

Disposal of your old appliance

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Packaging and the Environment

Packaging materials protect your machine from damage that may occur during transportation. The packaging materials are environmentally friendly as they are recyclable. The use of recycled material reduces raw material consumption and therefore decreases waste production.



Notes:

- Please read the instruction manual carefully before installing and using your

appliance. We are not responsible for the damage occurred due to misuse.

- Follow all instructions on your appliance and instruction manual, and keep this manual in a safe place to resolve the problems that may occur in the future.
- This appliance is produced to be used in homes and it can only be used in domestic environments and for the specified purposes. It is not suitable for commercial or common use. Such use will cause the guarantee of the appliance to be cancelled and our company will not be responsible for any losses incurred.
- This appliance is produced to be used in houses and it is only suitable for cooling / storing foods. It is not suitable for commercial or common use and/or for storing substances except for food. Our company is not responsible for any losses incurred by inappropriate usage of the appliance.




















1.4 Electrical information (For UK type plug)

 **Warning!** This appliance must be earthed.





The mains lead of this appliance has been fitted with a specially earthed plug.








 **Important:** Do not use the appliance without the fuse cover in position. Should the fuse need to be replaced, it must be replaced with a 13A fuse, ASTA approved to BS1362.


The plug must be used with a specially earthed socket of 13 amperes. If there is no such socket in your house, please have one installed by an authorised electrician.

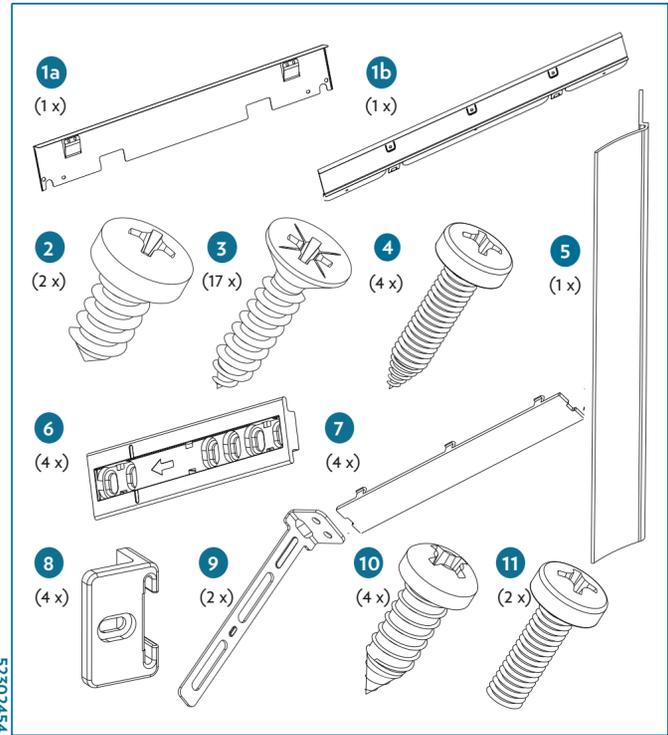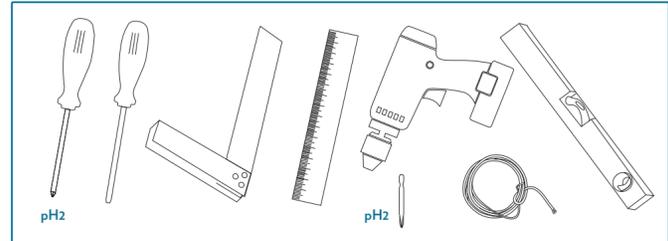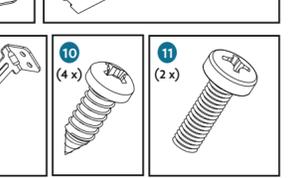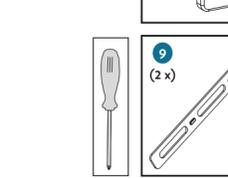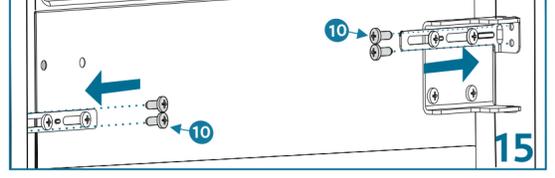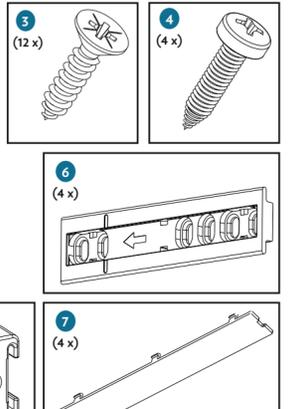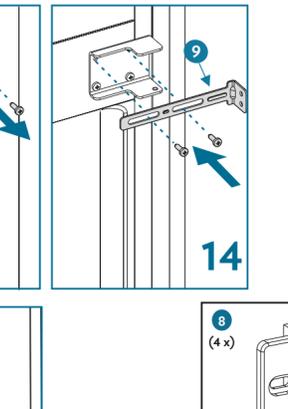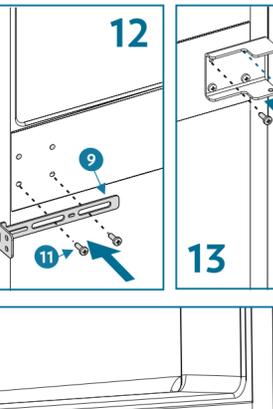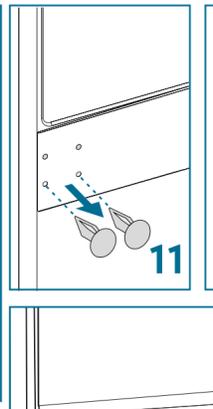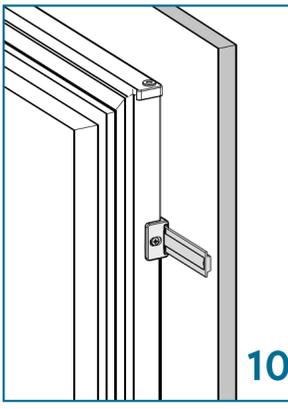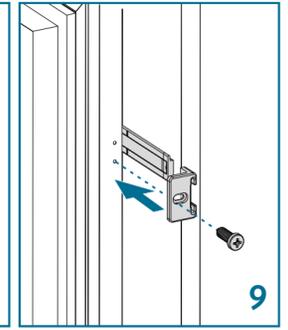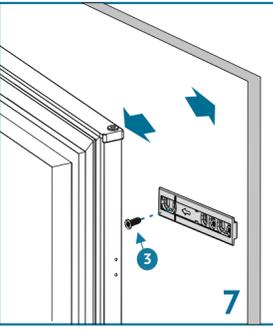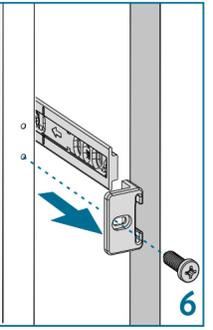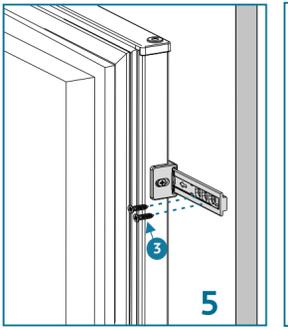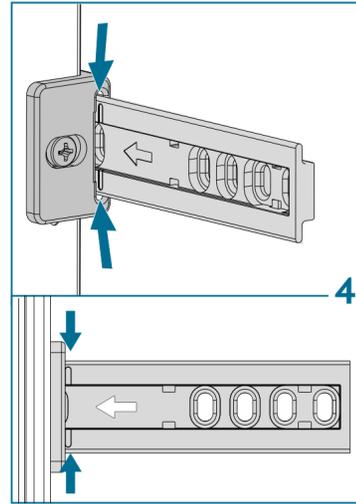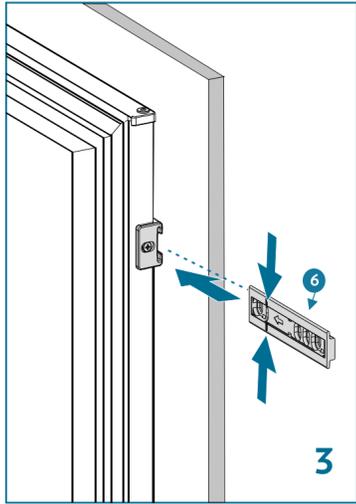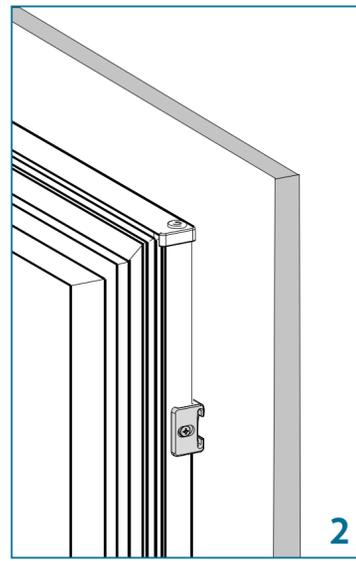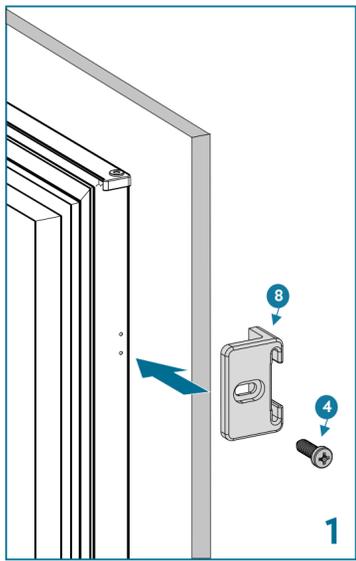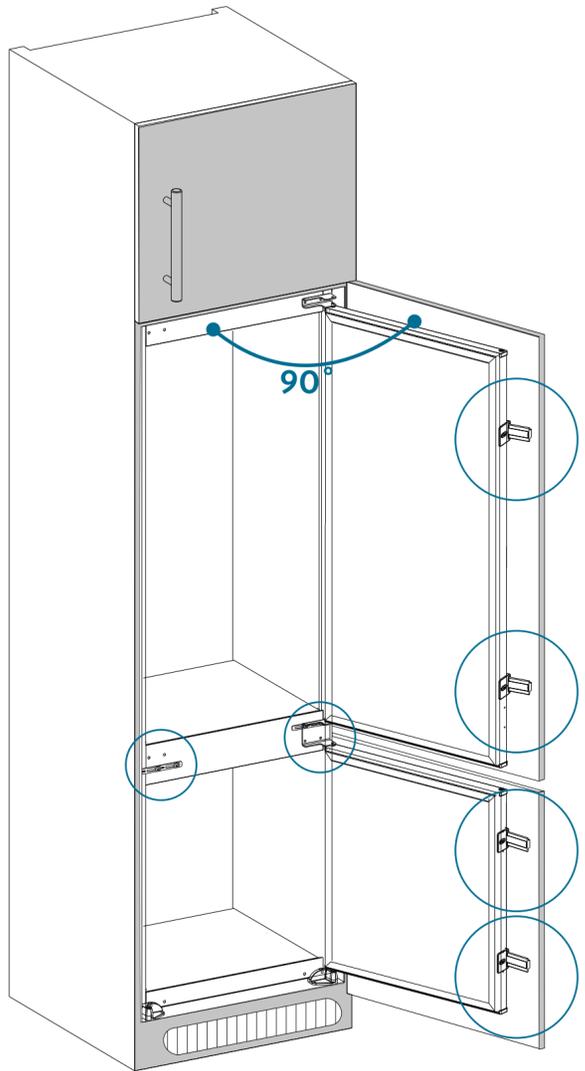

53302454

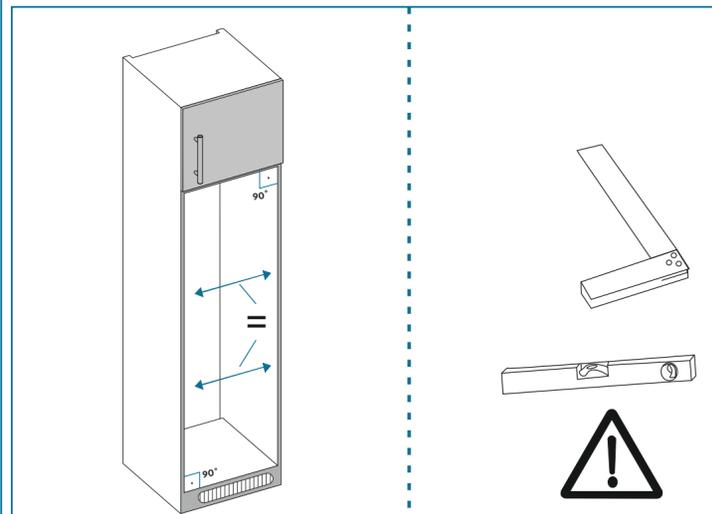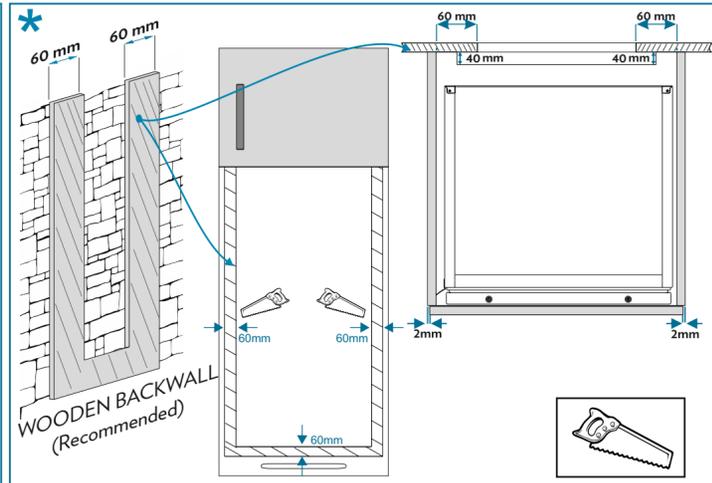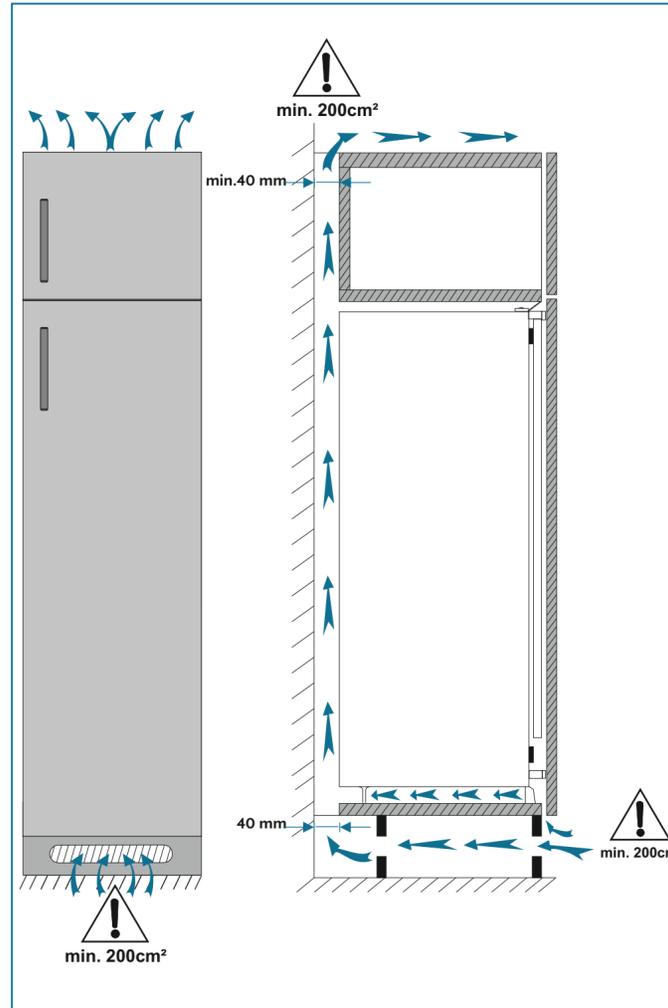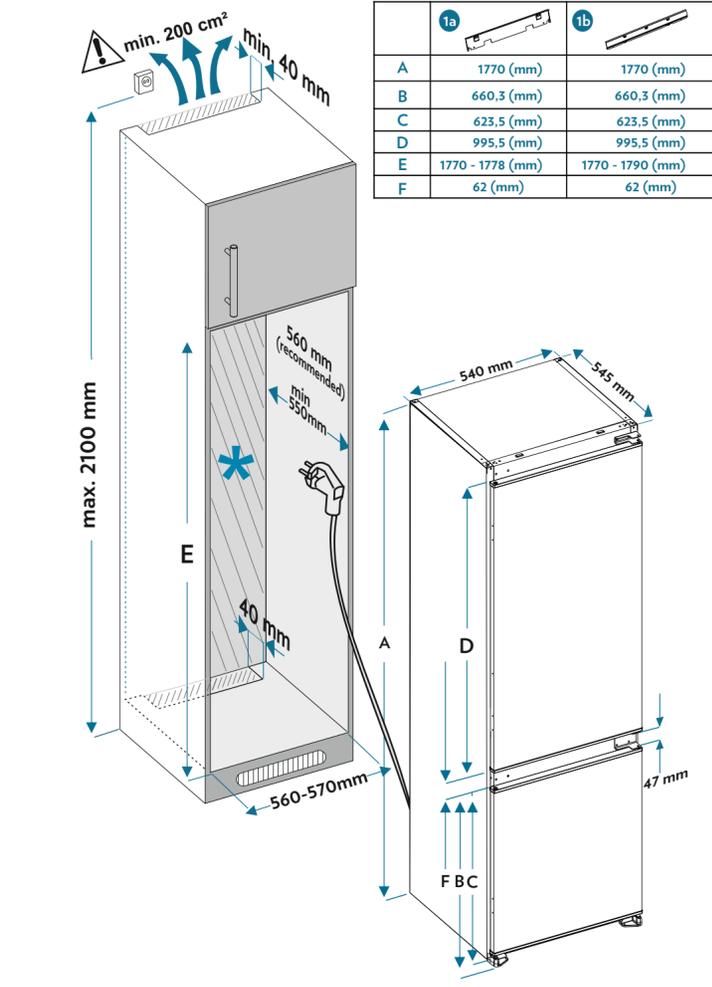

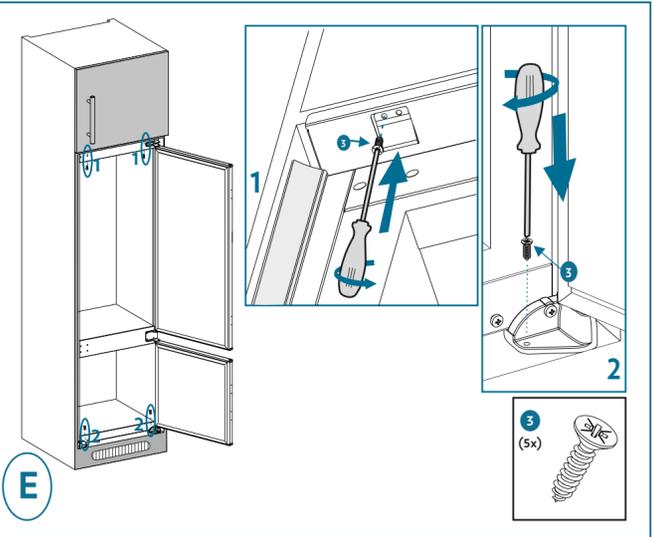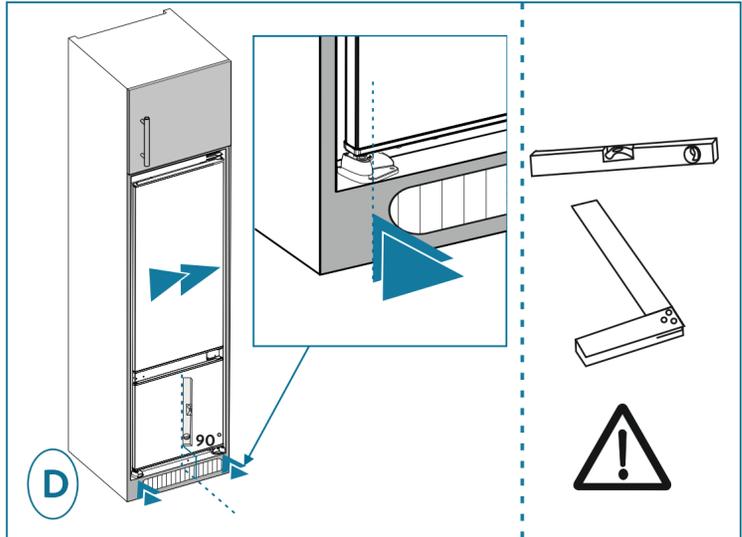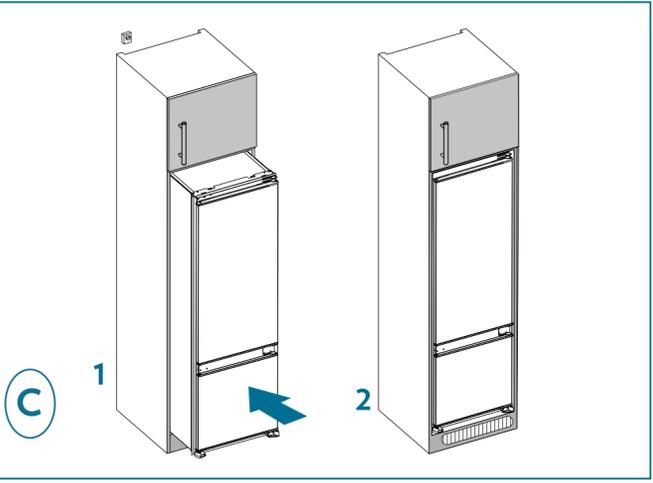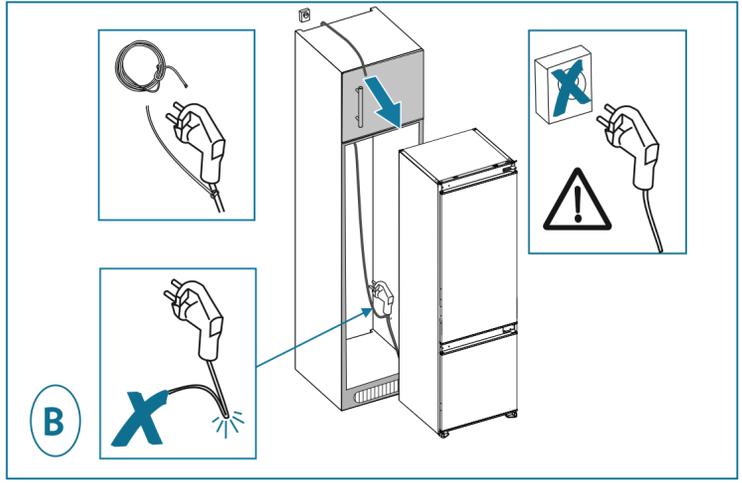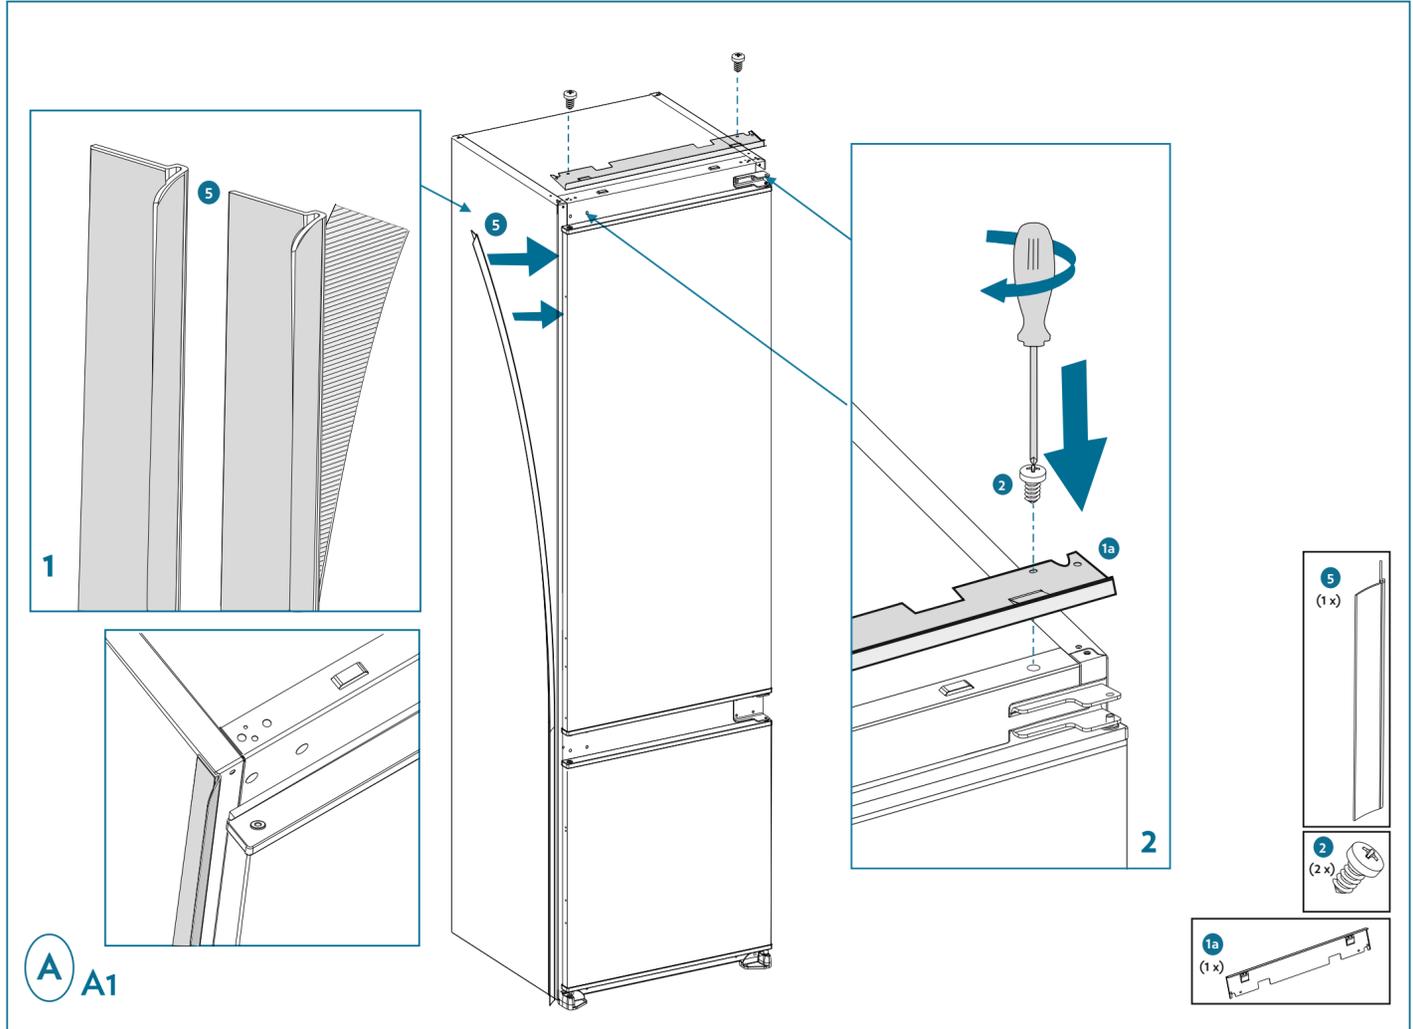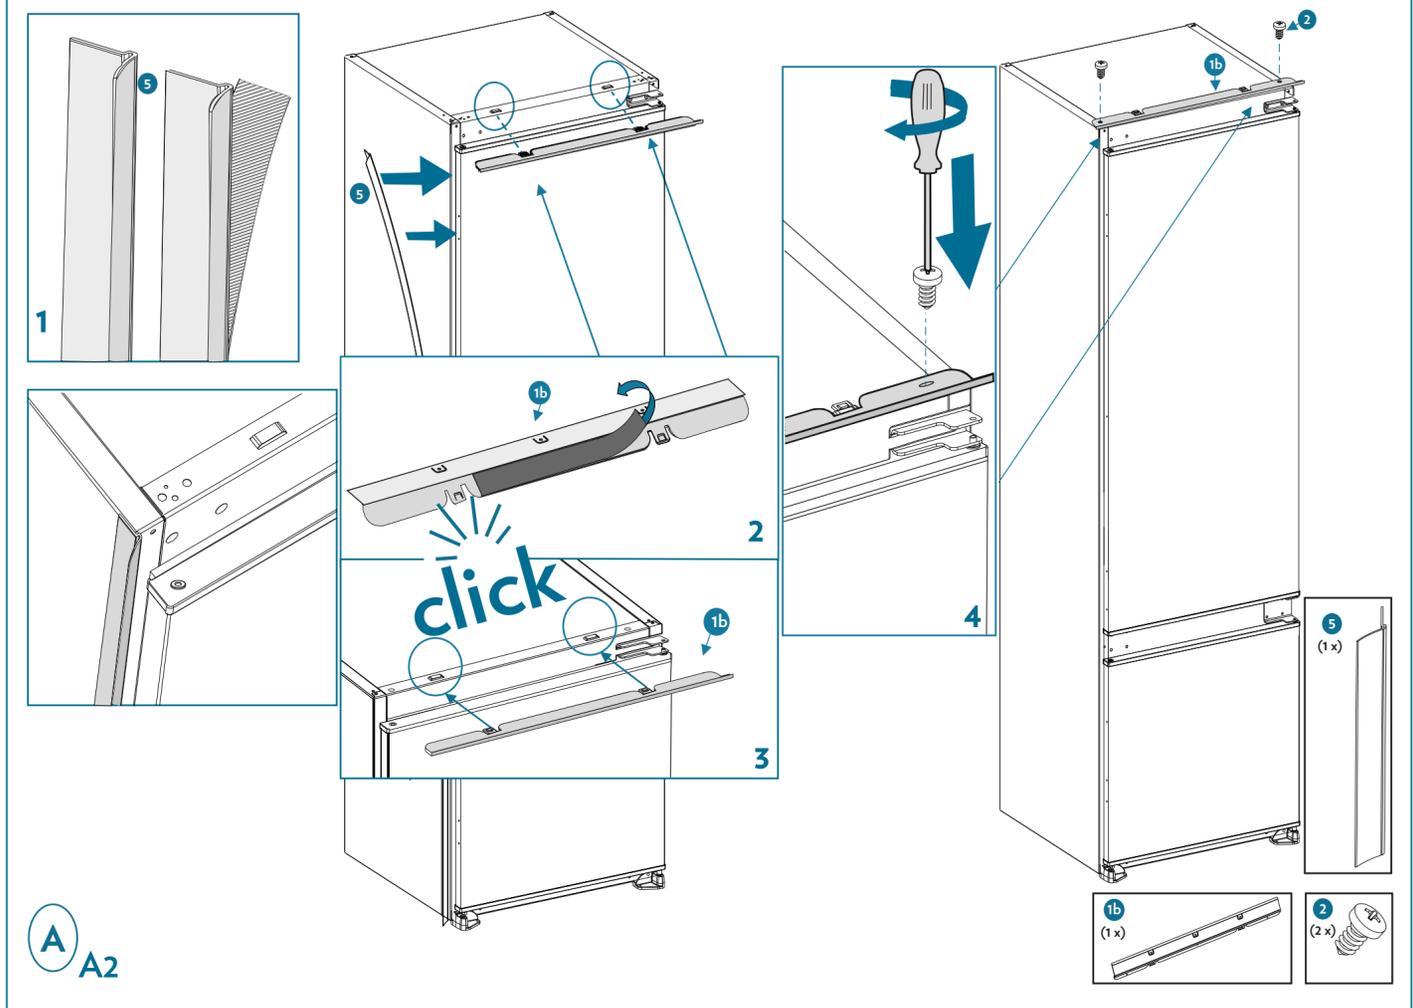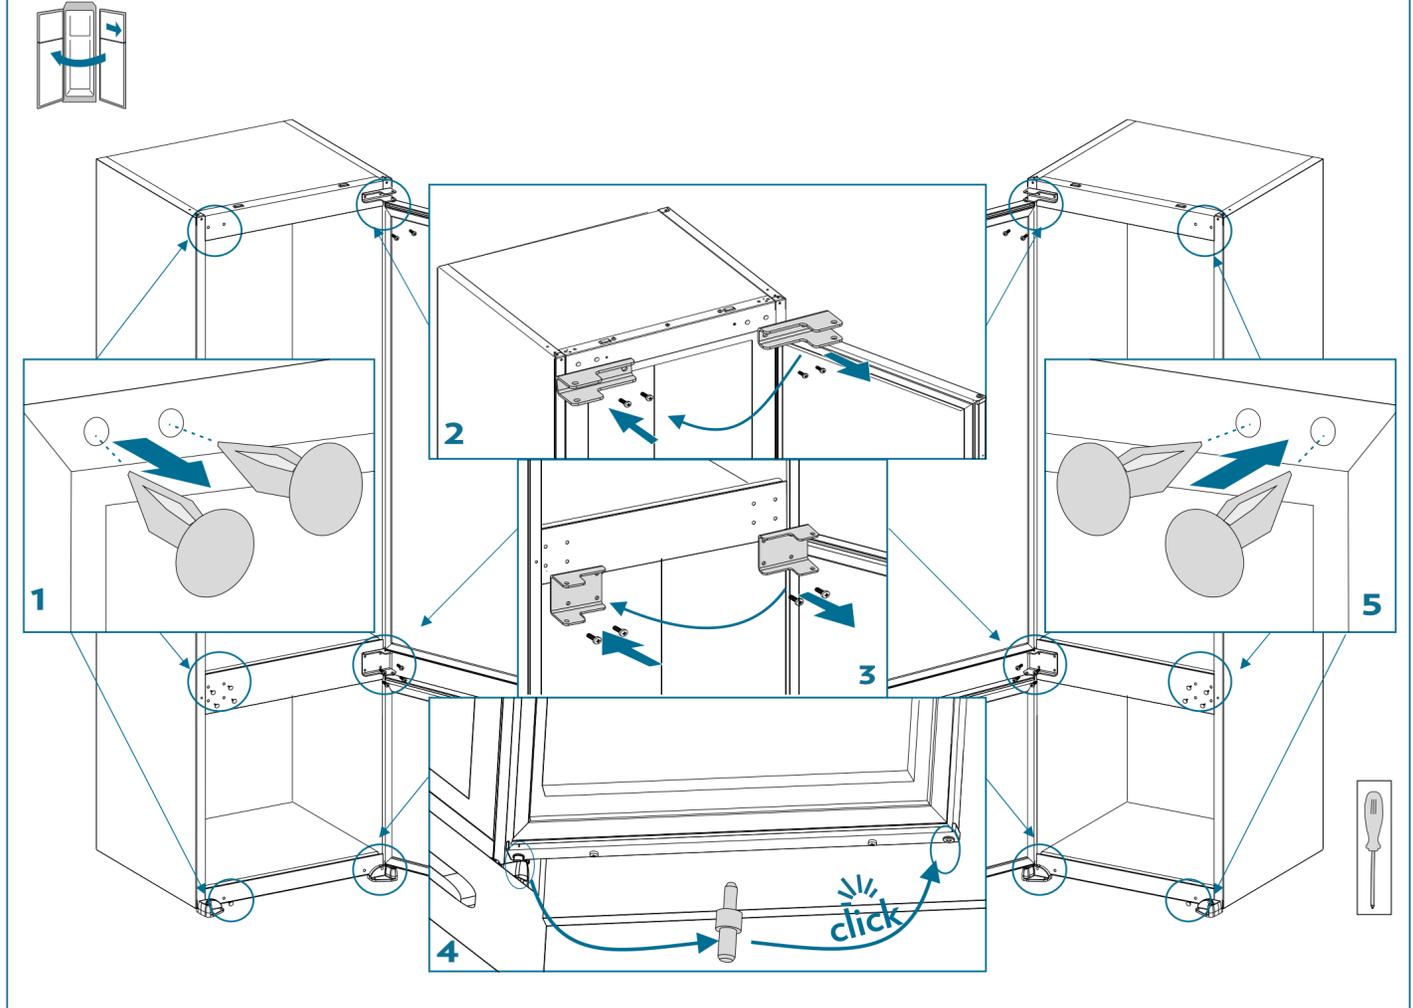


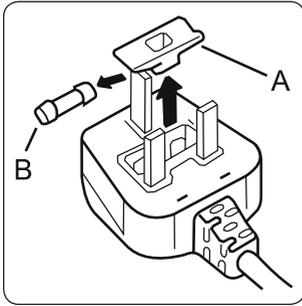

The mains lead of this appliance has been fitted with a BS 1363A 13A fused plug. To change a fuse in this type of plug, follow the steps below:

1. Remove the fuse cover and fuse.
2. Fit replacement 13A fuse, ASTA approved to BS 1362 type, into the fuse cover.
3. Replace fuse cover.

2 DESCRIPTION OF THE APPLIANCE

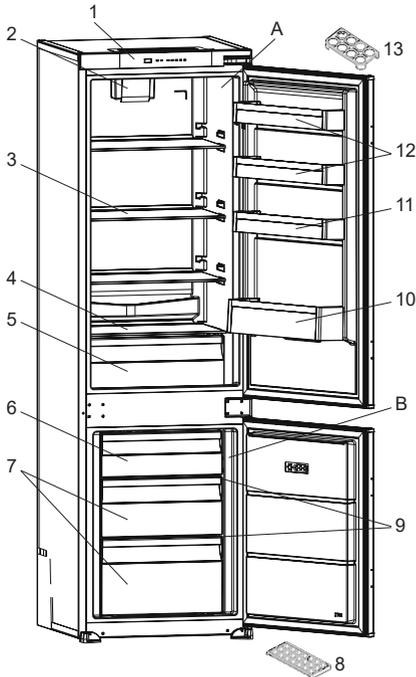

 This presentation is only for information about the parts of the appliance. Parts may vary according to the appliance model.

- A) Refrigerator compartment
- B) Freezer compartment
 - 1) Control panel
 - 2) Turbo fan *
 - 3) Refrigerator shelves
 - 4) Crisper cover
 - 5) Crisper
 - 6) Freezer upper flap / Drawer
 - 7) Freezer drawers
 - 8) Ice box tray
 - 9) Freezer glass shelves
 - 10) Bottle shelf
 - 11) Adjustable door shelf * / Door shelf
 - 12) Door shelves
 - 13) Egg holder

* In some models

3 USING THE APPLIANCE

3.1 Information on the Frost Free Technology


The Frost Free refrigerators have a different operating system to static refrigerators.

In normal (static) fridges, the humidity entering the fridge due to opening the door, and the humidity inherent in the food, causes frost build-up in the freezer compartment. To defrost the frost and ice in the freezer compartment, you are required to periodically switch off the fridge, place the frozen food in a separate cooled container, then remove the ice gathered in the freezer compartment.

The situation is completely different in No-frost fridges. A built-in fan blows dry and cold air evenly throughout the cooler and freezer compartments. The cold air disperses uniformly between the shelves, ensuring all your food is cooled equally, thus preventing humidity and frost build-up. Therefore, your No-frost fridge allows ease

of use, in addition to its huge capacity and stylish appearance.

3.2 Display and Control Panel

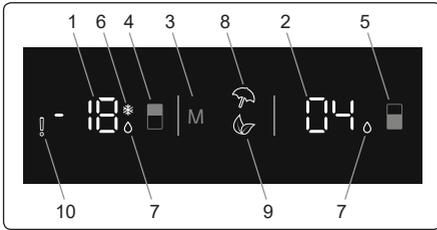

Using the Control Panel

- Freezer set value screen
- Cooler set value screen
- Mode button. It enables the modes (economy, holiday, etc.) to be activated if desired.
- Freezer set button. Enables the setting of the freezer to be modified and super freeze mode to be activated if desired. The freezer may be set to -16, -18, -20, -22, or -24 °C.
- Cooler set button. Enables the setting of the cooler to be modified and super cool mode to be activated if desired. The cooler may be set to 8, 6, 5, 4, or 2 °C.
- Super freeze indicator.
- Super cool indicator.
- Holiday mode symbol.
- Economy mode symbol.
- Alarm symbol.

3.3 Operating your Fridge Freezer

If your product has lighting


 When the product is plugged in for the first time, the interior lights may turn on 1 minute late due to opening tests.

3.3.1 Super Freeze Mode

Purpose

- To freeze a large quantity of food that cannot fit on the fast freeze shelf.
- To freeze prepared foods.
- To freeze food more quickly.
- To store fresh food and vegetables.

How to Use?

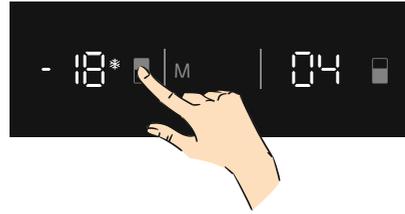

Press freezer set button until Super freeze symbol will be seen on the screen. Buzzer will sound beep beep. Mode will be set.

During This Mode:

- Temperature of cooler and super cool mode may be adjusted. In this case super freeze mode continues.
- Economy and Holiday mode can not be selected.
- Super freeze mode can be cancelled by the same operation of selecting.


 **Note:** This option shall be turned on 24 hours before placing the fresh food to the freezer. After 54h, it returns to the normal set value.

3.3.2 Super Cool Mode

Purpose

- To cool and store a large quantity of food in the fridge compartment.
- To quickly cool drinks.

How Would It Be Used?

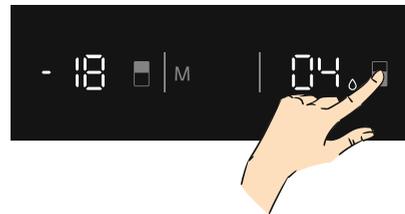

Press cooler set button until super cool symbol will be seen on the screen. Buzzer will sound beep beep. Mode will be set.

During This Mode:

- Temperature of freezer and super freeze mode may be adjusted. In this case

super cool mode continues.


- Economy and holiday mode can not be selected.
- Super cool mode can be cancelled by the same operation of selecting.

3.3.3 Economy Mode

Purpose

Energy savings. During periods of less frequent use (door opening) or absence from home, such as a holiday, Eco program can provide optimum temperature whilst saving power.

How Would It Be Used?

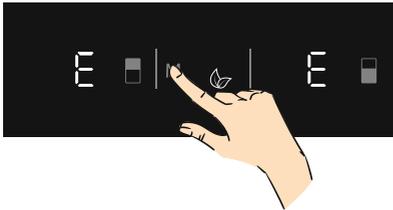


- Push "MODE" button until eco symbol appears.
- If no button is pressed for 1 second. Mode will be set. Eco symbol will blink 3 times. When mode is set, buzzer will sound beep beep.
- Freezer and refrigerator temperature segments will show "E".
- Economy symbol and E will light till mode finishes.

During This Mode:

- Freezer may be adjusted. When economy mode will be cancelled, the selected setting values will proceed.
- Cooler may be adjusted. When economy mode will be cancelled, the selected setting values will proceed.
- Super cool and super freeze modes can be selected. Economy mode is automatically cancelled and the selected mode is activated.
- Holiday mode can be selected after cancelling the economy mode. Then the selected mode is activated.
- To cancel, you will just need to press on mode button.

3.3.4 Holiday Mode

How Would It Be Used?

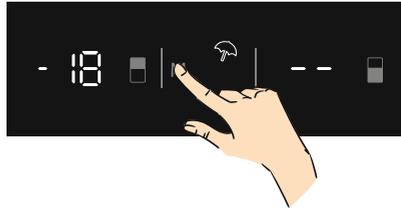

- Push "MODE" button until holiday symbol appears
- If no button is pressed for 1 second. Mode will be set. Holiday symbol will blink 3 times. When mode is set, buzzer will sound beep beep.
- Cooler temperature segment will show "--".
- Holiday symbol and "--" will light till mode finishes.

During This Mode:


- Freezer may be adjusted. When holiday mode will be cancelled, the selected setting values will proceed.
- Cooler may be adjusted. When holiday mode will be cancelled, the selected setting values will proceed.
- Super cool and super freeze modes can be selected. Holiday mode is automatically cancelled and the selected mode is activated.
- Economy mode can be selected after cancelling the holiday mode. Then the selected mode is activated.
- To cancel, you will just need to press on mode button.

3.3.5 Drink Cool Mode

Purpose

This mode is used to cool drinks within an adjustable time frame.

How Would It Be Used?

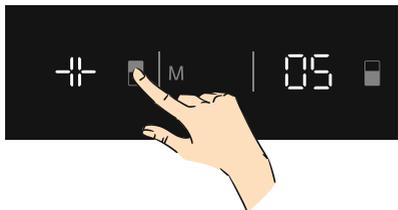


- Press freezer button for 3 seconds.
- Special animation will start on freezer set value screen and 05 will blink on cooler set value screen.
- Press cooler button to adjust the time (05 - 10 - 15 - 20 - 25 - 30 minutes).
- When you select the time the numbers will blink 3 times on screen and sound beep beep.
- If no button is pressed within 2 seconds the time will be set.
- The countdown starts from the adjusted time minute by minute.
- Remaining time will blink on the screen.
- To cancel this mode press freezer set button for 3 seconds.

3.3.6 Screen Saver Mode

Purpose

This mode saves energy by switching off all control panel lighting when the panel is left inactive.

How to Use

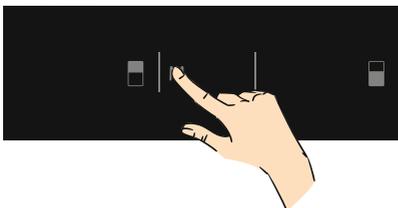

- Screen saver mode will be activated automatically after 30 seconds.
- If you press any key while the lighting of the control panel is off, the current machine settings will reappear on the display to let you make any change you wish.
- If you do not cancel the screen saving mode or press any key for 30 seconds, control panel will remain off.


To deactivate the screen saving mode,

- To cancel the screen saving mode, first of all, you need to press any key to activate the keys and then press and hold the Mode button for 3 seconds.
- To reactivate screen saving mode, press and hold the mode button for 3 seconds.

3.4 Temperature Settings

3.4.1 Freezer Temperature Settings

- The initial temperature value for the freezer setting indicator is -18°C.

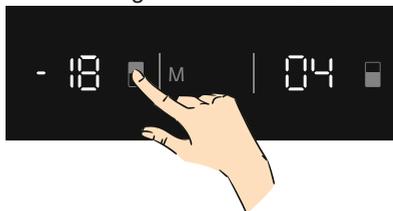


- Press the set freezer button once.
- When you first push this button, the last set value will blink on the screen.
- Whenever you press this button, a lower temperature will be set (-16 °C, -18 °C, -20 °C, -22 °C, -24 °C, super freeze).
- When you push the set freezer button until the super freeze symbol appears, and if you do not push any other button within 1 second, super freeze will flash.
- If you continue to press it, it will restart from -16 °C.
- The temperature value selected before holiday mode, super freeze mode, super cool mode or economy mode is activated and will remain the same when the mode is over or cancelled. The appliance continues to operate with this

temperature value.

3.4.2 Cooler Temperature Settings

- Initial temperature value for the cooler setting indicator is +4 °C.

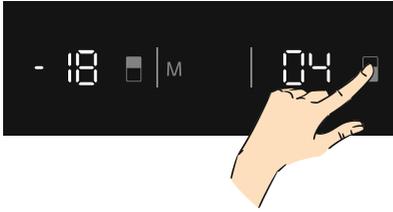

- Press the cooler button once.
- When you first push this button, the last value will appear on the cooler setting indicator.
- Whenever you press this button, a lower temperature will be set. (+8 °C, +6 °C, +5 °C, +4 °C, +2 °C, super cool)
- When you push the cooler set button until the super cool symbol appears, and if you do not push any button within 1 second, super cool will flash.
- If you continue to press the button, it will restart from +8 °C.
- The temperature value selected before holiday mode, super freeze mode, super cool mode or economy mode is activated and will remain the same when the mode is over or cancelled. The appliance continues to operate with this temperature value.

Recommended Settings for the Freezer and Cooler Compartment Temperature

Freezer Compartment	Cooler Compartment	Remarks
-18 °C	4 °C	For regular use and best performance.
-20 °C, -22 °C or -24 °C	4 °C	Recommended when environmental temperature exceeds 30 °C.
SF	4 °C	Must be used when you wish to freeze food in a short period of time.

Freezer Compartment	Cooler Compartment	Remarks
-18 °C, -20 °C, -22 °C or -24 °C	2 °C	These temperature settings must be used when the environmental temperature is high or if you think the refrigerator compartment is not cool enough because the door is being opened frequently.
-18 °C, -20 °C, -22 °C or -24 °C	SC	Must be used when the refrigerator compartment is overloaded with food or when food needs to be cooled quickly.

Note: Some built-in appliances may have a stand-by mode.

3.4.3 Stand-By Mode

Purpose

This mode can be used to save energy when you go on vacation.

How Would It Be Used?

*Select "8" set value.

*Push mode and cooler Set Button for 5 seconds.

*Display will show "St" "bY" on the screen.

During This Mode:

In stand-by mode; all components will be disabled.

If you push the display button, display will show "St" "bY" on the screen to show stand-by mode is active.

To cancel; push mode and cooler set button for 5 seconds.

After the mode is deactivated, an error code may light on the display because the product maybe not cool enough. The error code will turn off when the product reaches normal temperature.

3.4.4 Door Open Alarm Function

If fridge door is opened more than 2 minutes, appliance sounds 'beep beep'.

3.5 Temperature Settings Warnings

- Your appliance is designed to operate in the ambient temperature ranges stated in the standards, according to the climate class stated in the information label. It is not recommended that your fridge is operated in the environments which are outside of the stated temperature ranges. This will reduce the cooling efficiency of the appliance.
- Temperature adjustments should be made according to the frequency of door openings, the quantity of food kept inside the appliance and the ambient temperature in the location of your appliance.
- When the appliance is first switched on, allow it to run for 24 hours in order to reach operating temperature. During this time, do not open the door and do not keep a large quantity of food inside.
- A 5 minute delay function is applied to prevent damage to the compressor of your appliance when connecting or disconnecting to mains, or when an energy breakdown occurs. Your appliance will begin to operate normally after 5 minutes.

Climate class and meaning:

T (tropical): This refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C.

ST (subtropical): This refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C.

N (temperate): This refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C.

SN (extended temperate): This refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C.

The Turbo Fan (if available)

Do not block the air inlet and outlet openings when storing food, otherwise air circulation provided by the turbo fan will be impaired.

3.6 Accessories

Visual and text descriptions in the accessories section may vary according to the model of your appliance.


3.6.1 Ice Tray (In some models)

- Fill the ice tray with water and place in the freezer compartment.
- After the water has completely frozen, you can twist the tray as shown below to remove the ice cubes.




3.6.2 The Bottle Holder (In some models)

Use the bottle holder to prevent bottles from slipping or falling over.

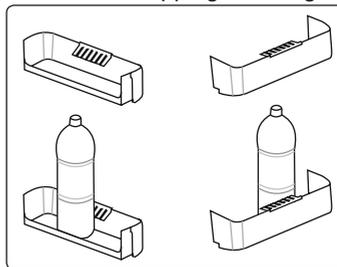


3.6.3 The Freezer Box

The freezer box allows food to be accessed more easily.

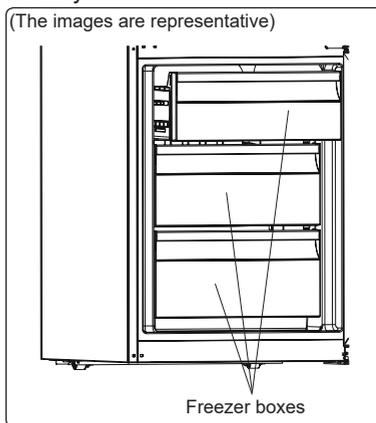

or

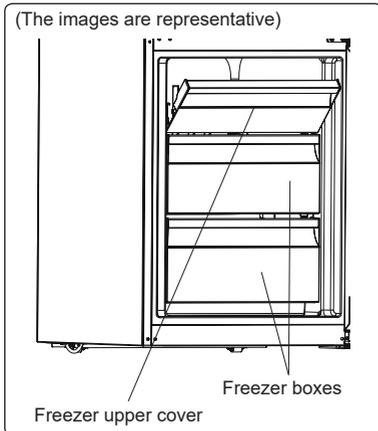


Removing the freezer box:

- Pull the box out as far as possible
- Pull the front of the box up and out


 Carry out the opposite of this operation when refitting the sliding compartment.

 Always keep hold of the handle of the box while removing it.

3.6.4 The Fresh Dial (*In some models*)

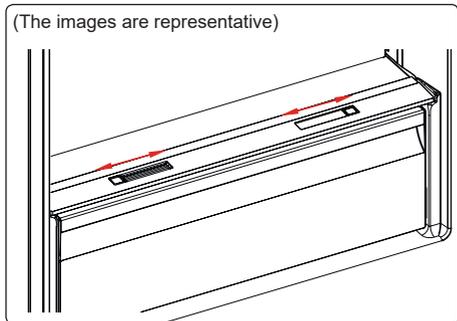

or

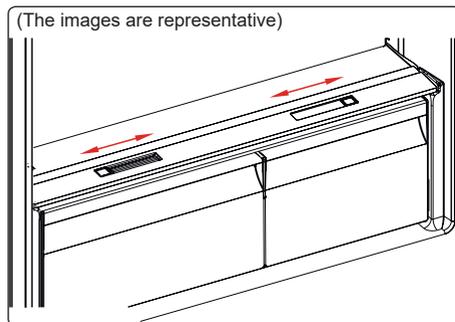

If the crisper is full, the fresh dial located in front of the crisper should be opened. This allows the air in the crisper and the humidity rate to be controlled, to increase the life of food within.

The dial, located behind the shelf, must be opened if any condensation is seen on the glass shelf.

3.6.5 Adjustable Door Shelf (*In some models*)

Six different height adjustments can be made to provide storage areas that you need by adjustable door shelf.



To change the position of adjustable door shelf ;

Hold the bottom of the shelf and pull the buttons on the side of the door shelf direction of arrow.

(Fig.1)

Position door shelf the height you need by moving up and down. After you get the position that you want the door shelf,

release the buttons on the side of the door shelf (Fig.2) Before releasing the door shelf, move up down and make sure the door shelf is fixed.

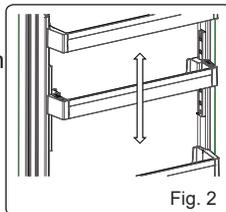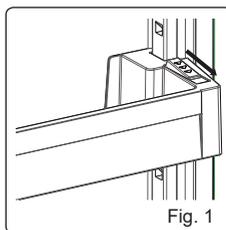

 **Note:** Before moving door shelf is loaded, you must hold the shelf by supporting the bottom. Otherwise, door shelf could fall off the rails due to the


weight. So damage may occur on the door shelf or rails.

3.6.6 Maxi-fresh preserver (If available)


Maxi Fresh Preserver technology helps to remove ethylene gas (a volatile organic compound released naturally from fresh foods) and unpleasant odors from the crisper.

In this way, food stays fresh for a longer time.

- Maxi Fresh Preserver must be cleaned once in a year. The filter should be waited for 2 hours at 65°C in a oven.
- To clean the filter, please remove the back cover of the filter box by pulling it in the direction of the arrow.
- The filter should not be washed with water or any detergent.

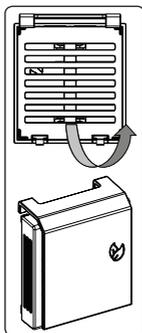

(The images are representative)

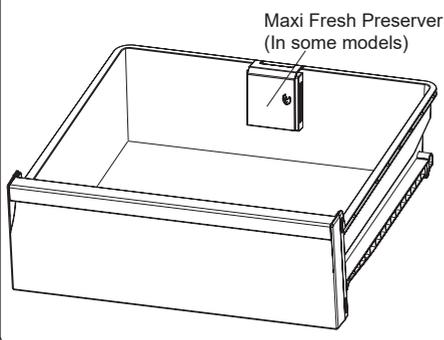

Visual and text descriptions in the accessories section may vary according to the model of your appliance.

4 FOOD STORAGE

4.1 Refrigerator Compartment

- To reduce humidity and avoid the consequent formation of frost, always

store liquids in sealed containers in the refrigerator. Frost tends to concentrate in the coldest parts of the evaporating liquid and, in time, your appliance will require more frequent defrosting.

- Cooked dishes must remain covered when they are kept in the fridge. Do not place warm foods in fridge. Place them when they are cool, otherwise the temperature/humidity inside the fridge will increase, reducing the fridge's efficiency.
- Make sure no items are in direct contact with the rear wall of the appliance as frost will develop and packaging will stick to it. Do not open the refrigerator door frequently.
- We recommend that meat and clean fish are loosely wrapped and stored on the glass shelf just above the vegetable bin where the air is cooler, as this provides the best storage conditions.
- Store loose fruit and vegetable items in the crisper containers.
- Storing fruit and vegetables separately helps prevent ethylene-sensitive vegetables (green leaves, broccoli, carrot, etc.) being affected by ethylene-releaser fruits (banana, peach, apricot, fig etc.).
- Do not put wet vegetables into the refrigerator.
- Storage time for all food products depends on the initial quality of the food and an uninterrupted refrigeration cycle before refrigerator storage.
- Water leaking from meat may contaminate other products in the refrigerator. You should package meat products and clean any leakages on the shelves.
- Do not put food in front of the air flow passage.
- Consume packaged foods before the recommended expiry date.

Do not allow food to come into contact with the temperature sensor, which is located in the refrigerator compartment, in order to keep the refrigerator compartment at

optimum temperature.

- For normal working conditions, it will be sufficient to adjust the temperature setting of your refrigerator to +4 °C.
- The temperature of the fridge compartment should be in the range of 0-8 °C, fresh foods below 0 °C are iced and rotted, bacterial load increases above 8 °C, and spoils.
- Do not put hot food in the refrigerator immediately, wait for the temperature to pass outside. Hot foods increase the degree of your refrigerator and cause food poisoning and unnecessary spoiling of the food.
- Meat, fish, etc. should be store in the chiller compartment of the food, and the vegetable compartment is preferred for vegetables. (if available)
- To prevent cross contamination, meat products and fruit vegetables are not stored together.
- Foods should be placed in the refrigerator in closed containers or covered to prevent moisture and odors.

The table below is a quick guide to show you the most efficient way to store the major food groups in your refrigerator compartment.

Food	Maximum storage time	How and where to store
Vegetables and fruits	1 week	Vegetable bin
Meat and fish	2 - 3 days	Wrap in plastic foil, bags, or in a meat container and store on the glass shelf
Fresh cheese	3 - 4 days	On the designated door shelf
Butter and margarine	1 week	On the designated door shelf
Bottled products e.g. milk and yoghurt	Until the expiry date recommended by the producer	On the designated door shelf
Eggs	1 month	On the designated egg shelf

Food	Maximum storage time	How and where to store
Cooked food	2 days	All shelves

NOTE:



Potatoes, onions and garlic should not be stored in the refrigerator.

4.2 Freezer Compartment

- The freezer is used for storing frozen food, freezing fresh food, and making ice cubes.
- Food in liquid form should be frozen in plastic cups and other food should be frozen in plastic folios or bags. For freezing fresh food; wrap and seal fresh food properly, that is the packaging should be air tight and shouldn't leak. Special freezer bags, aluminum foil polythene bags and plastic containers are ideal.
- Do not store fresh food next to frozen food as it can thaw the frozen food.
- Before freezing fresh food, divide it into portions that can be consumed in one sitting.
- Consume thawed frozen food within a short period of time after defrosting
- Always follow the manufacturer's instructions on food packaging when storing frozen food. If no information is provided food, should not be stored for more than 3 months from the date of purchase.
- When purchasing frozen food, make sure that it has been stored under appropriate conditions and that the packaging is not damaged.
- Frozen food should be transported in appropriate containers and placed in the freezer as soon as possible.
- Do not purchase frozen food if the packaging shows signs of humidity and abnormal swelling. It is probable that it has been stored at an unsuitable temperature and that the contents have deteriorated.
- The storage life of frozen food depends

on the room temperature, the thermostat setting, how often the door is opened, the type of food, and the length of time required to transport the product from the shop to your home. Always follow the instructions printed on the packaging and never exceed the maximum storage life indicated.

- If the freezer door has been left open for a long time or not closed properly, frost will form and can prevent efficient air circulation. To resolve this, unplug the freezer and wait for it to defrost. Clean the freezer once it has fully defrosted.
- The freezer volume stated on the label is the volume without baskets, covers, and so on.
- Do not refreeze thawed food. It may pose a danger to your health and cause problems such as food poisoning.

NOTE: If you attempt to open the freezer door immediately after closing it, you will find that it will not open easily. This is normal. Once equilibrium has been reached, the door will open easily.

- Use the fast freezing shelf to freeze home cooking (and any other food which needs to be frozen quickly) more quickly because of the freezing shelf's greater freezing power. Fast freezing shelf is the bottom drawer of the freezer compartment.
- To use the maximum capacity of the freezer compartment, use the glass shelves for the upper and middle section, and use the lower basket for the bottom section.



The table below is a quick guide to show you the most efficient way to store the major food groups in your freezer compartment.

Meat and fish	Preparation	Maximum storage time (months)
Steak	Wrap in foil	6 - 8
Lamb meat	Wrap in foil	6 - 8
Veal roast	Wrap in foil	6 - 8
Veal cubes	In small pieces	6 - 8
Lamb cubes	In pieces	4 - 8
Minced meat	In packaging without using spices	1 - 3
Giblets (pieces)	In pieces	1 - 3
Bologna sausage/salami	Should be kept packaged even if it has a membrane	1 - 3
Chicken and turkey	Wrap in foil	4 - 6
Goose and duck	Wrap in foil	4 - 6
Deer, rabbit, wild boar	In 2.5 kg portions or as fillets	6 - 8
Freshwater fish (Salmon, Carp, Crane, Catfish)	After cleaning the bowels and scales of the fish, wash and dry it. If necessary, remove the tail and head.	2
Lean fish (Bass, Turbot, Flounder)		4
Fatty fishes (Tuna, Mackerel, Bluefish, Anchovy)		2 - 4

Meat and fish	Preparation	Maximum storage time (months)
Shellfish	Clean and in a bag	4 - 6
Caviar	In its packaging, or in an aluminium or plastic container	2 - 3
Snails	In salty water, or in an aluminium or plastic container	3
 NOTE: Thawed frozen meat should be cooked as fresh meat. If the meat is not cooked after defrosting, it must not be re-frozen.		

Vegetables and Fruits	Preparation	Maximum storage time (months)
String beans and beans	Wash, cut into small pieces and boil in water	10 - 13
Beans	Hull, wash and boil in water	12
Cabbage	Clean and boil in water	6 - 8
Carrot	Clean, cut into slices and boil in water	12
Pepper	Cut the stem, cut into two pieces, remove the core and boil in water	8 - 10
Spinach	Wash and boil in water	6 - 9
Cauliflower	Remove the leaves, cut the heart into pieces and leave it in water with a little lemon juice for a while	10 - 12
Eggplant	Cut into pieces of 2cm after washing	10 - 12
Corn	Clean and pack with its stem or as sweet corn	12

Vegetables and Fruits	Preparation	Maximum storage time (months)
Apple and pear	Peel and slice	8 - 10
Apricot and Peach	Cut into two pieces and remove the stone	4 - 6
Strawberry and Blackberry	Wash and hull	8 - 12
Cooked fruits	Add 10 % of sugar to the container	12
Plum, cherry, sourberry	Wash and hull the stems	8 - 12

	Maximum storage time (months)	Thawing time at room temperature (hours)	Thawing time in oven (minutes)
Bread	4 - 6	2 - 3	4-5 (220-225 °C)
Biscuits	3 - 6	1 - 1,5	5-8 (190-200 °C)
Pastry	1 - 3	2 - 3	5-10 (200-225 °C)
Pie	1 - 1,5	3 - 4	5-8 (190-200 °C)
Phyllo dough	2 - 3	1 - 1,5	5-8 (190-200 °C)
Pizza	2 - 3	2 - 4	15-20 (200 °C)

Dairy products	Preparation	Maximum storage time (months)	Storage conditions
Packet (Homogenized) Milk	In its own packet	2 - 3	Pure Milk – in its own packet
Cheese - excluding white cheese	In slices	6 - 8	Original packaging may be used for short-term storage. Keep wrapped in foil for longer periods.
Butter, margarine	In its packaging	6	

5 CLEANING AND MAINTENANCE


-  Disconnect the unit from the power supply before cleaning.
-  Do not wash your appliance by pouring water on it.
-  Do not use abrasive products, detergents or soaps for cleaning the appliance. After washing, rinse with clean water and dry carefully. When you have finished cleaning, reconnect the plug to the mains supply with dry hands.
- Make sure that no water enters the lamp housing and other electrical components.
- The appliance should be cleaned regularly using a solution of bicarbonate of soda and lukewarm water.
- Clean the accessories separately by hand with soap and water. Do not wash

accessories in a dish washer.

- Clean the condenser with a brush at least twice a year. This will help you to save on energy costs and increase productivity.

 **The power supply must be disconnected during cleaning.**

5.1 Defrosting

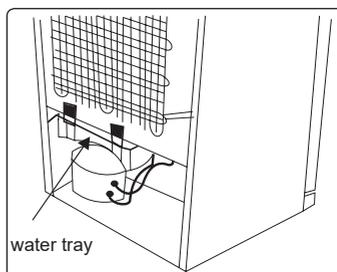

- Your appliance performs automatic defrosting. The water formed as a result

of defrosting passes through the water collection spout, flows into the water tray behind your appliance and evaporates there.

- Make sure you have disconnected the plug of your appliance before cleaning the water tray.
- Remove the water tray from its position by removing the screws (if it has screws). Clean it with soapy water at specific time intervals. This will prevent odours from forming.

Replacing LED Lighting

To replace any of the LEDs, please contact the nearest Authorised Service Centre.



Note: The numbers and location of the LED strips may change according to the model.

6 SHIPMENT AND REPOSITIONING

6.1 Transportation and Changing Positioning

- The original packaging and foam may be kept for re-transportation (optional).
- Fasten your appliance with thick packaging, bands or strong cords and follow the instructions for transportation on the packaging.
- Remove all movable parts or fix them into the appliance against shocks using bands when re-positioning or transporting.



Always carry your appliance in the upright position.

SALES SERVICE

Errors

Your fridge will warn you if the temperatures for the cooler and freezer are at improper levels or if a problem occurs with the appliance. Warning codes are displayed in the freezer and cooler indicators.

ERROR TYPE	MEANING	WHY	WHAT TO DO
E01	Sensor warning		Call Service for assistance as soon as possible.
E02	Sensor warning		Call Service for assistance as soon as possible.
E03	Sensor warning		Call Service for assistance as soon as possible.
E06	Sensor warning		Call Service for assistance as soon as possible.
E07	Sensor warning		Call Service for assistance as soon as possible.
E08	Low Voltage Warning	Power supply to the device has dropped to below 170 V.	<ul style="list-style-type: none"> - This is not a device failure, this error helps to prevent damages to the compressor. - The voltage needs to be increased back to required levels <p>If this warning continues an authorised technician needs to be contacted.</p>
E09	Freezer compartment is not cold enough	Likely to occur after long term power failure.	<ol style="list-style-type: none"> 4. Set the freezer temperature to a colder value or set Super Freeze. This should remove the error code once the required temperature has been reached. Keep doors closed to improve time taken to reach the correct temperature. 5. Remove any products which have thawed/defrosted during this error. They can be used within a short period of time. 6. Do not add any fresh produce to the freezer compartment until the correct temperature has been reached and the error is no longer. <p>If this warning continues an authorised technician needs to be contacted.</p>

ERROR TYPE	MEANING	WHY	WHAT TO DO
E10	Fridge compartment is not cold enough	Likely to occur after: - Long term power failure. - Hot food has been left in the fridge.	<ol style="list-style-type: none"> 1. Set the fridge temperature to a colder value or set Super Cool. This should remove the error code once the required temperature has been reached. Keep doors closed to improve time taken to reach the correct temperature. 2. Please empty the location at the front area of air duct channel holes and avoid putting food close to the sensor. If this warning continues an authorised technician needs to be contacted.
E11	Fridge compartment is too cold	Various	<ol style="list-style-type: none"> 1. Check is Super Cool mode is activated 2. Reduce the fridge compartment temperature 3. Check to see if vents are clear and not clogged If this warning continues an authorised technician needs to be contacted.

If you are experiencing a problem with your **appliance**, please check the following before contacting the after-sales service.

Your appliance is not operating

Check if:

- There is power
- The plug is correctly placed in the socket
- The plug fuse or the mains fuse has blown
- The socket is defective. To check this, plug another working appliance into the same socket.

The appliance performs poorly

Check if:

- The appliance is overloaded
- The appliance door is closed properly
- There is any dust on the condenser
- There is enough space near the rear and side walls.

Your appliance is operating noisily

Normal noises

Cracking noise occurs:

- During automatic defrosting
- When the appliance is cooled or warmed (due to expansion of

appliance material).

Short cracking noise occurs: When the thermostat switches the compressor on/off.

Motor noise: Indicates the compressor is operating normally. The compressor may cause more noise for a short time when it is first activated.

Bubbling noise and splash occurs: Due to the flow of the refrigerant in the tubes of the system.

Water flowing noise occurs: Due to water flowing to the evaporation container. This noise is normal during defrosting.

Air blowing noise occurs: In some models during normal operation of the system due to the circulation of air.

The edges of the appliance in contact with the door joint are warm

Especially during summer (warm seasons), the surfaces in contact with the door joint may become warmer during the operation of the compressor, this is normal.

There is a build-up of humidity inside the appliance

Check if:

- All food is packed properly. Containers must be dry before being placed in the **appliance**.
- The **appliance** door is opened frequently. Humidity of the room enters the **appliance** when the doors are opened. Humidity increases faster when the doors are opened more frequently, especially if the humidity of the room is high.

The door does not open or close properly

Check if:

- There is food or packaging preventing the door from closing
- The door joints are broken or torn
- Your **appliance** is on a level surface.
- The compressor can run loudly or the noise of the compressor/refrigerator may increase in some models during operating in some conditions such that the product is plugged in for the first time, depending on change in the ambient temperature or change of usage. That is normal; when the refrigerator reaches the required temperature, the noise decreases automatically.

Recommendations

- If the appliance is switched off or unplugged, wait at least 5 minutes before plugging the appliance in or restarting it in order to prevent damage to the compressor.
- If you will not use your appliance for a long time (e.g. in summer holidays) unplug it. Clean your appliance according to chapter cleaning and leave the door open to prevent humidity and smell.
- If a problem persists after you have followed all the above instructions, please consult the nearest authorised service centre.
- The appliance you have purchased is designed for domestic use only. It is not suitable for commercial or common use. If the consumer uses the appliance in a

way that does not comply with this, we emphasise that the manufacturer and the dealer will not be responsible for any repair and failure within the guarantee period.

8 TIPS FOR SAVING ENERGY

1. Install the appliance in a cool, well-ventilated room, but not in direct sunlight and not near a heat source (such as a radiator or oven) otherwise an insulating plate should be used.
2. Allow warm food and drinks to cool before placing them inside the appliance.
3. Place thawing food in the refrigerator compartment if available. The low temperature of the frozen food will help cool the refrigerator compartment while the food is thawing. This will save energy. Frozen food left to thaw outside of the appliance will result in a waste of energy.
4. Drinks or other liquids should be covered when inside the appliance. If left uncovered, the humidity inside the appliance will increase, therefore the appliance uses more energy. Keeping drinks and other liquids covered helps preserve their smell and taste.
5. Avoid keeping the doors open for long periods and opening the doors too frequently as warm air will enter the appliance and cause the compressor to switch on unnecessarily often.
6. Keep the covers of the different temperature compartments (such as the crisper and chiller if available) closed.
7. The door gasket must be clean and pliable. In case of wear, replace the gasket.

8 نصائح لتوفير الطاقة

1. قم بتركيب الجهاز في غرفة باردة جيدة التهوية وليست معرضة لأشعة الشمس المباشرة وليس بالقرب من مصدر للحرارة (مثل المبرد أو الفرن) وإلا يجب استخدام لوحة عازلة.
2. اترك الطعام والمشروبات الساخنة حتى تبرد قبل وضعها داخل الجهاز.
3. ضع الطعام المذاب في مقصورة الثلجة، إن وجدت. فإن درجة الحرارة المنخفضة للمواد الغذائية المجمدة ستساعد على تبريد مقصورة الثلجة أثناء إذابتها. وهذا سيوفر الطاقة. سيؤدي الطعام المجمد المتروك ليذوب خارج الجهاز إلى إهدار الطاقة.
4. يجب تغطية المشروبات أو السوائل الأخرى عندما تكون داخل الجهاز. إذا لم يتم تغطيتها، ستزداد الرطوبة داخل الجهاز، وبالتالي فإن الجهاز سيستخدم المزيد من الطاقة. كما أن تغطية المشروبات والسوائل الأخرى تساعد في الحفاظ على راحتها وطعمها.
5. تجنب إبقاء الأبواب مفتوحة لفترات طويلة وفتح الأبواب بمعدل متكرر للغاية، إذ إن الهواء الدافئ سيدخل الجهاز ويتسبب في تشغيل الضاغط في كثير من الأحيان دون داع.
6. احرص على إغلاق أغطية المقصورات ذات درجات الحرارة المختلفة (الدرج الحافظ للأغذية، وحدة التبريد إن وجدت).
7. يجب أن تكون سدادة الباب نظيفة ومرنة. **في حالة التلف، استبدل السدادة.**

إذا كنت تواجه مشكلة في جهازك، يرجى التحقق مما يلي قبل الاتصال بخدمة ما بعد البيع.

جهازك لا يعمل

تحقق مما يلي:

- وجود طاقة
- تم وضع القابس بشكل صحيح في المقبس
- انفجر فيوز القابس أو التيار الكهربائي
- مقبس التيار الكهربائي معيب. للتحقق من هذا، ضع جهاز آخر يعمل في المقبس نفسه.

أداء الجهاز ضعيف

تحقق مما يلي:

- الجهاز متقل
- باب الجهاز مغلق بشكل صحيح
- وجود غبار على المكثف
- وجود مساحة كافية في الجدران الخلفية والجانبية.

جهازك يصدر ضوضاء

ضوضاء طبيعية

تحدث طقطقة:

- أثناء الإذابة التلقائية للثلج
- عندما يتم تبريد الجهاز أو تسخينه (بسبب تمدد المواد المصنوع منها الجهاز).
- تحدث طقطقة قصيرة: عندما يقوم الثرموستات بتشغيل/ إيقاف تشغيل ضاغط التلاجة.

ضوضاء الموتور: تشير إلى أن الضاغط يعمل بشكل طبيعي. قد يصدر الضاغط مزيداً من الضوضاء لفترة قصيرة عند تشغيله لأول مرة.

صوت رذاذ وحدث فقاعي: نتيجة تدفق غاز التبريد في أنابيب النظام.

حدث ضوضاء تدفق المياه: بسبب تدفق المياه إلى حاوية التخزين. يكون ذلك الضوضاء طبيعي أثناء إزالة الثلج.

يصدر صوت يُشبه هبوب الرياح: في بعض الطرازات أثناء التشغيل العادي للنظام بسبب دوران الهواء.

حواف الجهاز التي تلامس مفصل الباب دافئة

خلال فصل الصيف (المواسم الدافئة)، قد تصبح الأسطح الملامسة لمفصل الباب أكثر دفئاً أثناء تشغيل الضاغط، وهذا أمر طبيعي.

هناك تراكم للرطوبة داخل الجهاز

تحقق مما يلي:

- جميع الأطعمة معبأة بشكل صحيح. يجب أن تكون الحاويات جافة قبل وضعها داخل الجهاز.
- يتم فتح باب الجهاز بشكل متكرر. تدخل رطوبة الغرفة إلى الجهاز عند فتح الأبواب. تزداد الرطوبة بشكل أسرع عند فتح الأبواب بشكل متكرر، وخاصة إذا كانت نسبة الرطوبة في الغرفة مرتفعة.

الباب لا يفتح أو يغلق بشكل صحيح

تحقق مما يلي:

- هناك طعام أو عبوة تمنع الباب من الإغلاق
- مفصلات الأبواب تالفة أو ممزقة
- الجهاز الخاص بك على سطح مستوي.
- يمكن أن يصدر الضاغط صوتاً مرتفعاً أثناء اشتغاله، أو يمكن أن يرتفع صوت ضوضاء الضاغط/التلاجة مع بعض النماذج أثناء التشغيل وفي بعض مثل حالة ربط المنتج بالكهرباء لأول مرة، وذلك مرتبط بتغير في درجة الحرارة المحيطة أو تغير في الاستعمال. هذا أمر عادي؛ عندما تصل درجة حرارة التلاجة إلى المستوى المطلوب، ينخفض صوت الضوضاء تلقائياً.

التوصيات

- إذا تم إيقاف تشغيل الجهاز أو نزع القابس، فعليك الانتظار لمدة 5 دقائق على الأقل قبل توصيل الجهاز بالطاقة أو إعادة تشغيله كي لا يتلف الضاغط.
- إذا كنت لن تستخدم جهازك لفترة طويلة (على سبيل المثال طوال العطلة الصيفية)، فقم بفصله عن التيار الكهربائي. عليك تنظيف الجهاز وفقاً لفصل التنظيف و اترك الباب مفتوحاً لمنع الرطوبة والرائحة.
- إذا استمرت المشكلة بعد اتباع جميع التعليمات أعلاه، يرجى استشارة أقرب مركز صيانة معتمد.
- الجهاز الذي اشتريته مصمم للاستخدام المنزلي فقط. فهو غير مناسب للاستخدام التجاري أو المشترك. إذا استخدم المستهلك الجهاز بطريقة لا تتوافق مع هذه التعليمات، فحن نؤكد أن الجهة المصنعة والتاجر لن يتحملا مسؤولية أي إصلاحات أو أعطال خلال فترة الضمان.

7 قبل الاتصال بخدمة ما بعد البيع

الأخطاء

ستحذرك الثلاجة إذا كانت درجات حرارة ووحدة التبريد والفریزر عرض رموز التحذيرات على مؤشرات الفریزر ووحدة التبريد.

نوع الخطأ	المعنى	لماذا؟	ما الذي يجب أن تفعله؟
E01	تحذير المستشعر		اتصل بالخدمة لتحصل على المساعدة في أقرب وقت ممكن.
E02	تحذير المستشعر		اتصل بالخدمة لتحصل على المساعدة في أقرب وقت ممكن.
E03	تحذير المستشعر		اتصل بالخدمة لتحصل على المساعدة في أقرب وقت ممكن.
E06	تحذير المستشعر		اتصل بالخدمة لتحصل على المساعدة في أقرب وقت ممكن.
E07	تحذير المستشعر		اتصل بالخدمة لتحصل على المساعدة في أقرب وقت ممكن.
E08	تحذير انخفاض الفولطية	لقد انخفضت قدرة إمداد الجهاز بالطاقة إلى أقل من 170 فولت.	- هذا الخطأ ليس عطلاً بالجهاز، ولكنه يساعدك على تجنب تلف الضاغط. - يلزم زيادة الفولطية مرة أخرى حتى المستويات المطلوبة إذا استمر ظهور هذا التحذير، فيلزم الاتصال بفني.
E09	مقصورة الفریزر ليست باردة بدرجة كافية	من المرجح حدوث ذلك بعد انقطاع الكهرباء لفترة طويلة.	4. اضبط درجة حرارة الفریزر على قيمة أكثر برودة أو اضبطه على Super Freeze (وضع التجميد الفائق). ينبغي أن يساهم ذلك في إزالة رمز الخطأ بمجرد الوصول إلى درجة الحرارة المطلوبة. أبقِ الأبواب مغلقة لتقليل الفترة المستغرقة للوصول إلى درجة الحرارة الصحيحة. 5. أزل أي منتجات ربما تعرضت للذوبان أو تمت إزالة الصقيع من عليها أثناء هذا الخطأ. يمكن استخدامها في فترة وجيزة. 6. لا تضع أي منتجات طازجة في قسم الفریزر حتى يصل إلى درجة الحرارة المطلوبة ويختفي هذا الخطأ. إذا استمر ظهور هذا التحذير، فيلزم الاتصال بفني.
E10	حجرة الثلاجة ليست باردة بدرجة كافية	من المرجح حدوث ذلك بعد: - انقطاع الكهرباء لفترة طويلة. - وضع طعام ساخن في الثلاجة.	1. اضبط درجة حرارة الثلاجة على قيمة أكثر برودة أو اضبطه على Super Cool (وضع التبريد الفائق). ينبغي أن يساهم ذلك في إزالة رمز الخطأ بمجرد الوصول إلى درجة الحرارة المطلوبة. أبقِ الأبواب مغلقة لتقليل الفترة المستغرقة للوصول إلى درجة الحرارة الصحيحة. 2. يرجى إخلاء الموقع المواجه لفتحات قناة أنبوب الهواء وتجنب وضع الطعام بالقرب من المستشعر. إذا استمر ظهور هذا التحذير، فيلزم الاتصال بفني.
E11	حجرة الثلاجة باردة جدًا	نقاط متنوعة	1. تأكد مما إذا كان وضع Super Cool (التبريد الفائق) قيد التنشيط 2. اخفض درجة حرارة قسم الثلاجة 3. تحقق مما إذا كانت الفتحات نظيفة وغير مسدودة إذا استمر ظهور هذا التحذير، فيلزم الاتصال بفني.

6 الشحن وضبط الموضع

6.1 النقل وتغيير الموضع


- ينبغي الحفاظ على العبوة الأصلية والفوم لإعادة النقل (اختياري).
- قم بتثبيت الجهاز الخاص بك في عبوة سميكة أو أربطة أو حبال قوية واتبع الإرشادات الخاصة بالنقل الموجودة على العبوة.
- أزل كل الأجزاء المتحركة أو قم بتثبيتها داخل الجهاز ضد الصدمات باستخدام الأربطة أثناء تغيير الموضع أو النقل. احمل الجهاز في وضع مستقيم دائمًا. 

أقصى مدة للتخزين (بالأشهر)	الإعداد	الخضار و الفواكه
12 - 8	يتم غسله وتقسيره	الفراولة والتوت الأسود
12	أضف 10% من السكر إلى الوعاء	الفواكه المطهية
12 - 8	يتم غسله وتقسير الجنوع	برقوق وكرز وفراولة

أقصى مدة للتخزين (بالشهر)	وقت إذابة التجمد في درجة حرارة الغرفة (بالساعات)	وقت إذابة التجمد في الفرن (بالدقائق)
6 - 4	3 - 2	4-5 (220-225 C°)
6 - 3	1,5 - 1	5-8 (190-200 درجة مئوية)
3 - 1	3 - 2	5-10 (200-225 درجة مئوية)
1,5 - 1	4 - 3	5-8 (190-200 درجة مئوية)
3 - 2	1,5 - 1	5-8 (190-200 درجة مئوية)
3 - 2	4 - 2	15-20 (200 درجة مئوية)

منتجات الألبان	الإعداد	أقصى مدة للتخزين (بالشهر)	شروط التخزين
لبن معبأ (متجانس)	في العبوة الخاصة به	3 - 2	لبن صافي - في العبوة الخاصة به
جبين - ما عدا الجبن الأبيض	على هيئة شرائح	8 - 6	يمكن استخدام العبوة الأصلية للتخزين قصير الأجل. استمر في لفها في فويل لتخزينها لفترة أطول.
الزبد، السمن الصناعي	في عبوتها	6	

5.1 إزالة الثلج

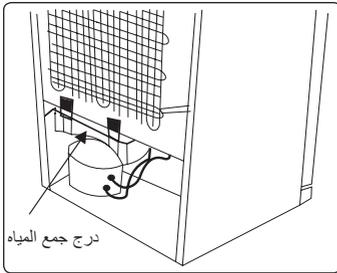

- يقوم الجهاز الخاص بك بإزالة الثلج تلقائيًا. تمر المياه المتكونة نتيجة إزالة الثلج من خلال صنوبر جمع الماء، وتسقط في درج جمع المياه خلف الثلاجة وتتبخر هناك.
- تأكد من فصل قابس الجهاز قبل تنظيف درج جمع المياه.
- أزل درج جمع المياه من مكانها عن طريق فك البراغي (إن وجدت). نظفها بالماء والصابون في فترات زمنية محددة. سيمر ذلك تكون الروائح.

استبدال لمبة LED

لاستبدال أي من مصابيح LED، يرجى الاتصال بأقرب مركز خدمة معتمد.

ملاحظة: قد يتم تغيير عدد وأماكن شرائط مصابيح LED وفقًا للطراز.

5 التنظيف والصيانة

- فصل الجهاز عن التيار الكهربائي قبل التنظيف.
- لا تغسل الجهاز عن طريق صب الماء عليه.
- لا تستخدم منتجات المنظفات الكاشطة أو القوية أو الصابون لتنظيف الجهاز. بعد الغسيل، اشطفه باستخدام مياه نظيفة وجفقه بعناية. بعد الانتهاء من التنظيف، أعد توصيل القابيس بمصدر التيار الكهربائي بأيدي جافة.
- تأكد من عدم دخول الماء إلى مبيت المصباح والعناصر الكهربائية الأخرى.
- يجب تنظيف الجهاز بشكل دوري باستخدام محلول بيكربونات الصودا والماء الفاتر.
- نظف الإكسسوارات يدويًا بشكل منفصل بالماء والصابون. لا تنظف الإكسسوارات في غسالة الأطباق.
- نظف المكثف بفرشاة مرتين في السنة على الأقل.
- سيساعدك ذلك على توفير تكاليف الطاقة وزيادة الإنتاجية.
- يجب فصل قابس الكهرباء عن الجهاز أثناء التنظيف.

- أكثر سرعة، وذلك نتيجة لطاقة التجميد الكبيرة لرف التجميد. زف التجميد السريع هو الدرج السفلي لمقصورة الفريزر.
- للاستفادة من السعة القصوى لمقصورة الفريزر، استخدم الأرفف الزجاجية للقسمين العلوي والوسطي، واستخدم السلة السفلية للقسم السفلي.

يعد الجدول أدناه دليلاً سريعاً يظهر لك أفضل طريقة فعالة لتخزين مجموعات الأطعمة الرئيسية في مقصورة الفريزر.

اللحوم والأسماك	الإعداد	أقصى مدة للتخزين (بالأشهر)
شرائح لحم	يُلف في رقائق	8 - 6
لحم الضأن	يُلف في رقائق	8 - 6
قطع لحم العجل	يُلف في رقائق	8 - 6
مكعبات لحم العجل	في قطع صغيرة	8 - 6
مكعبات لحم الضأن	على هيئة قطع	8 - 4
لحم مفروم	يُغلف في عبوات بدون استخدام التوابل	3 - 1
أحشاء طائر (قطع)	على هيئة قطع	3 - 1
السجق/السلامي	يجب إبقاء معبأ حتى إذا كان به أغشية	
الدجاج والديك الرومي	يُلف في رقائق	6 - 4
الإوز والبط	يُلف في رقائق	6 - 4
الفزلان، الأرناب، والحيوانات البرية	على هيئة كميات تبلغ 2.5 كجم وكشرايح فيليه	8 - 6
أسماك المياه العذبة (السلمون، الشبوط، الكرين، القرموط)	بعد تنظيف أحشاء وقشور الأسماك، يتم غسلها وتجفيفها. وعند اللزوم يتم قطع الذيل والرأس.	2
السماك النجيل (البص، سمك الترس، الفلاوندر)		4
الأسماك الدهنية (التونة، الماكريل، سمك القنبر، الأمشوجة)		4 - 2
محار	يُنظف ويُوضع في كيس	6 - 4
الكافيار	في عبوتها، أو داخل حاوية من البلاستيك أو الألومنيوم	3 - 2
الحلزون	في مياه مالحة، أو داخل حاوية من البلاستيك أو الألومنيوم	3
ملاحظة: يجب طهي اللحم المجمد بعد ذوبانه كالم طازج. إذا لم يتم طهي اللحم بعد إذابته، يجب عدم تجميده مجدداً.		

الخضار و الفواكه	الإعداد	أقصى مدة للتخزين (بالأشهر)
الفاصوليا والفول	يُغسل ويقطع إلى قطع صغيرة وتُغلى في الماء	13 - 10
الفول	يتم تشويره ويُغسل ثم يغلى في الماء	12
الكرنب	يغسل ويغلى في الماء	8 - 6
الجزر	يُغسل ويقطع إلى شرائح ثم يغلى في الماء	12
الفلفل	يتم قطع الجذع، ويقطع إلى قطعتين ويتم إزالة القلب ثم يغلى في الماء	10 - 8
السياتخ	يغسل ثم يغلى في الماء	9 - 6
القرنبيط	أزل الأوراق، وقطع القلب إلى قطع، واتركه في الماء مع قليل من عصير الليمون لفترة من الوقت	12 - 10
البانجان	يقطع إلى أجزاء بطول 2 سم بعد غسله	12 - 10
الذرة	تُغسل وتعبأ بالساق أو كذرة حلوة	12
التفاح والكمثرى	يتم تشويرها وتقطع إلى شرائح	10 - 8
المشمش والخوخ	يقطع إلى قطعتان ويتم إزالة البذرة	6 - 4

4.2 مقصورة الفريزر

- يستخدم الفريزر في تخزين الطعام المجمد، وتجميد الطعام الطازج، وصنع مكعبات الثلج.
- يجب تجميد الطعام السائل في أكواب بلاستيكية ويجب تجميد غيره من الطعام في أوراق الفويل أو الأكياس البلاستيكية لتجميد المواد الغذائية الطازجة؛ قم بلف وإحكام الغلق على المواد الغذائية الطازجة بشكل صحيح، بحيث يكون التغليف محكمًا ولا يسرب. تعتبر أكياس الثلجة الخاصة ورقائق الألومنيوم وأكياس النايلون والحاويات البلاستيكية مثالية لهذا الأمر.
- لا تخزن الطعام الساخن بجانب الطعام المجمد إذ قد يؤدي ذلك إلى ذوبان الطعام المجمد.
- قبل تجميد الطعام الطازج، قسّمه إلى كميات يمكن استخدامها في المرة الواحدة.
- استهلك الطعام المجمد المذاب خلال فترة قصيرة من إزالة الثلج
- اتبع دائماً تعليمات المصنع الواردة على عبوة الطعام في حال تخزين الطعام المجمد. وإذا لم يتم توفير معلومات على العبوة، فلا يجب تخزين الطعام لما يزيد على 3 أشهر من تاريخ الشراء.
- عند شراء الطعام المجمد، تأكد من أنه تم تخزينه تحت ظروف ملائمة وأن العبوة ليست تالفة.
- يجب نقل الطعام المجمد في حاويات ملائمة ووضعه في الفريزر في أقرب وقت ممكن.
- لا تشتري الطعام المجمد إذا ظهر على العبوة علامات الرطوبة أو انفخاخ غير معتادة. فمن المحتمل أنه قد تم تخزينه في درجة حرارة غير مناسبة وقد تدهورت حالة محتوياته.
- تعتمد فترة حياة الطعام المجمد على درجة حرارة الغرفة، وإعداد الترموستات، ومعدل تكرار فتح الباب، ونوع الطعام، والمدة الزمنية المطلوبة لنقل المنتج من المتجر إلى منزلك. عليك دائماً اتباع التعليمات المطبوعة على العبوة وعدم تجاوز فترة التخزين القصوى المُشار إليها.
- في حالة ترك باب الفريزر مفتوحاً لفترة طويلة أو غير مغلق بصورة صحيحة، سينتفخ الجليد ويمكنه أن يُعيق الدوران الفعال للهواء. لحل هذه المشكلة، افصل الفريزر عن الطاقة واتركه حتى يذوب الجليد. نظف الفريزر بمجرد انتهاء عملية ذوبان الجليد.
- حجم الفريزر المذكور على الملصق هو حجمه دون إضافة السلات والأغطية وما شابه.
- لا تعد تجميد الطعام المذاب. فهذا قد يُشكل خطراً على صحتك ويسبب مشاكل مثل التسمم الغذائي.
- **ملاحظة:** إذا حاولت فتح باب الفريزر بعد إغلاقه مباشرة، ستجد أنه لن يُفتح بسهولة. وهذا أمر طبيعي. بعد الوصول إلى حالة التوازن، سيفتح الباب بسهولة.
- استخدم رف التجميد السريع لتجميد الأطعمة المطهولة بالمنزل (والأطعمة التي يجب تجميدها سريعاً) على نحو

الأولية وعدم انقطاع دورة التبريد قبل التخزين بالثلاجة.

- قد يؤثر تسرب الماء من اللحوم سلباً على المنتجات الأخرى في الثلاجة. يجب تغليف منتجات اللحوم وتنظيف أي تسربات من على الأرفف.
- لا تضع الطعام أمام تيار الهواء المتدفق.
- استهلك الأطعمة المغلفة قبل تاريخ انتهاء الصلاحية الموصى به.
- لا تدع الطعام يلامس مستشعر درجة الحرارة الواقع في مقصورة الثلاجة، وذلك للحفاظ على درجة الحرارة المثلى في مقصورة الثلاجة.
- لظروف التشغيل العادية، سيكون من الكافي تعديل إعدادات درجة الحرارة للثلاجة إلى +4 درجة مئوية.
- درجة حرارة مقصورة الثلاجة يجب أن تكون في نطاق 0-8 درجة مئوية، الأطعمة الجاهزة أدنى من 0 درجة مئوية ستكون مجمدة وتالفة وسيزداد الحمل البكتيري عند أعلى من 8 درجة مئوية ويتسبب في تلف الطعام.
- لا تضع الطعام في الثلاجة على الفور، انتظر حتى تنخفض درجة الحرارة بالخارج. تزيد الأطعمة الساخنة من درجة الثلاجة وتسبب في تسمم الطعام والتلف غير ضروري للطعام.
- اللحوم، الأسماك، .. إلخ يجب تخزينها في مقصورة التبريد للأطعمة، ويُفضل استخدام مقصورة الخضراوات للخضراوات. (عند الإتاحة).
- لمنع التلوث المتبادل، لا يجب تخزين منتجات اللحوم، والفواكه والخضراوات معاً.
- يجب وضع الأطعمة في الثلاجة في حاويات مغلقة أو تغطيتها لمنع الرطوبة والروائح.
- يعد الجدول أدناه دليلاً سريعاً يظهر لك أفضل طريقة فعالة لتخزين مجموعات الأطعمة الرئيسية في مقصورة الثلاجة.


الطعام	أقصى مدة للتخزين	كيف التخزين ومكانه
الخضراوات والفواكه	أسبوع واحد	درج الخضراوات
اللحوم والأسماك	يومين - 3 أيام	تلف في رقائق أو أكياس بلاستيكية، أو في حاوية اللحوم وتُخزين على الرف الزجاجي
الجبن الطازج	3 - 4 أيام	على رف الباب المحدد
الزبد والسمن	أسبوع واحد	على رف الباب المحدد
المنتجات المعبأة في زجاجات مثل الحليب والزيادي	حتى تاريخ انتهاء الصلاحية الذي أوصى به المنتج	على رف الباب المحدد
البيض	شهر واحد	على رف البيض المحدد
الطعام المطهي	يومين	في جميع الأرفف

ملاحظة:

يجب ألا تُحفظ البطاطس والبصل والثوم في الثلاجة.

(الصور تمثيلية)

Maxi Fresh Preserver
(في بعض الطرازات)

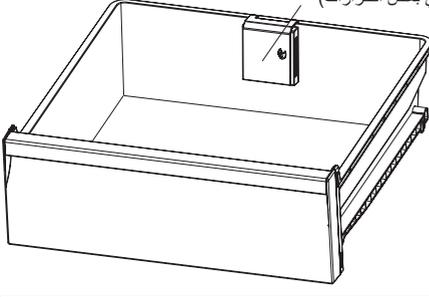

قد تختلف الأوصاف المرئية، والنصية لقسم الملحقات حسب طراز جهازك.

4 تخزين الأطعمة


4.1 مقصورة الثلجة

- للحد من الرطوبة وتجنب توابعها المتمثلة في تكون الثلج، خزن السوائل دائماً في حاويات مغلقة جيداً في الثلجة. يميل الثلج للتركز في أكثر الأجزاء برودة من السائل المتبخر وبمرور الوقت سيتطلب جهازك إزالة الثلج على نحو أكثر تكراراً.
- ينبغي الحفاظ على تغطية الأطباق التي بها طعام مطهو عند وضعها في الثلجة. لا تضع طعاماً ساخناً في الثلجة، ضعه عندما يبرد، وإلا فيستزداد درجة الحرارة/الرطوبة داخل الثلجة، ما ينتج منه انخفاض كفاءة الثلجة.
- احرص على عدم ملامسة أي عنصر للجدار الخلفي للجهاز لأن ذلك سيؤدي إلى تكون الجليد والتصاق العبوات به. لا تفتح باب الثلجة على نحو متكرر.
- نوصي بتغليف اللحوم والأسماك النظيفة بشكل سائب وتخزينها على الرف الزجاجي أعلى صندوق الخضروات مباشرةً حيث يكون الهواء أكثر برودة، حيث يوفر هذا أفضل ظروف تخزين.
- خزن الفواكه والخضروات السائبة في حاويات مقصورة الطعام الطازج.
- يساعد تخزين الفواكه والخضروات بشكل منفصل على منع تأثير الخضروات الحساسة للإيثيلين (ذات الأوراق الخضراء، والقربنيط، والجزر، الخ) على الفواكه التي تفرز الإيثيلين (الموز، والوخوخ، والمشمش، والتين الخ)
- لا تضع الخضروات الرطبة في الثلجة.
- يعتمد وقت التخزين لجميع المواد الغذائية على جودة الغذاء

إذا كان الدرج الحافظ للأغذية ممتلئاً، فإن مفتاح الحفاظ على نضارة الطعام الموجود أمام الدرج الحافظ للأغذية يجب أن يكون مفتوحاً. يسمح ذلك بالتحكم في الهواء ونسبة الرطوبة بالدرج الحافظ للأغذية مما يطيل عمر الطعام. يجب الضغط على المفتاح الموجود خلف الرف، في حالة ظهور أي تكاثف على الرف الزجاجي.


3.6.5 رف الباب القابل للضبط (في بعض الطرازات)

يمكنك ضبط الارتفاع عند ستة مستويات مختلفة لتوفير مناطق التخزين التي تحتاج إليها من خلال رف الباب القابل للضبط. لتغيير موضع رف الباب القابل للضبط؛ أمسك الجزء السفلي للرف، واسحب الأزرار على جانب رف الباب في اتجاه السهم. (الشكل 1)

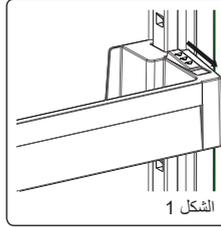

الشكل 1

ضع رف الباب حسب مستوى الارتفاع المرغوب عن طريق رفعه نحو الأعلى والأسفل. بعد ضبط الارتفاع حسب المستوى المرغوب، حرر الأزرار على جانب رف الباب (الشكل 2).

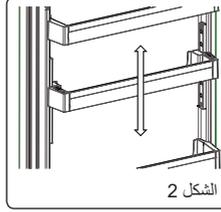



الشكل 2

قبل تحرير رف الباب، قم بتحريكه نحو الأعلى والأسفل للتحقق من تثبيته في مكانه.


● **ملاحظة:** قبل تحريك رف الباب وهو محمل، يجب عليك إمساك الرف من الجزء الأسفل. وإلا فقد يسقط رف الباب من على القضبان بسبب الثقل. لذلك فقد يحدث تلف برف الباب أو القضبان.

3.6.6 Maxi-fresh preserver (إن وجدت)

تساعد تقنية Maxi Fresh Preserver على إزالة غاز الإيثيلين (مركب عضوي متطاير والذي ينشأ على نحو طبيعي من الأطعمة الطازجة) وعلى إزالة الروائح الكريهة من الدرج الحافظ للأغذية. وبهذه الطريقة، يظل الطعام طازجاً لفترة أطول.

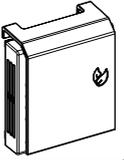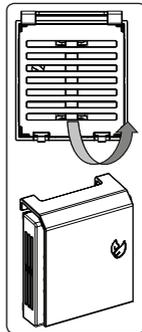

- يجب تنظيف Maxi Fresh Preserver مرة واحدة في العام. يجب وضع فلتر الروائح في الفرن لمدة ساعتين عند 65 درجة مئوية.
- لتنظيف فلتر الروائح، يرجى إزالة الغطاء الخلفي لصندوق الفلتر عن طريق سحبه في اتجاه السهم.
- يحذر تنظيف الفلتر باستخدام المياه أو أي منظف.

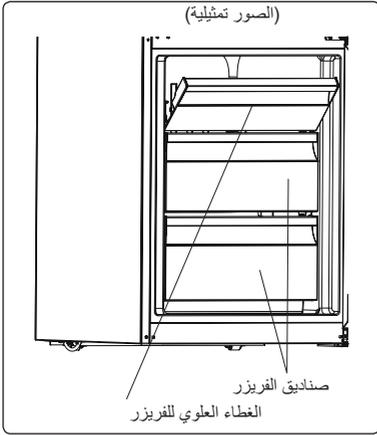

إزالة صندوق الفريزر:

- اسحب الصندوق للخارج إلى أقصى مدى ممكن
 - اسحب مقدمة الصندوق لأعلى وللخارج
- نفذ عكس هذه العملية عن إعادة تركيب المقصورة المنزلة.




عليك دائماً الإمساك بمقبض الصندوق أثناء إزالته.





3.6.4 مفتاح الحفاظ على نضارة الطعام (في بعض

الطرقات)

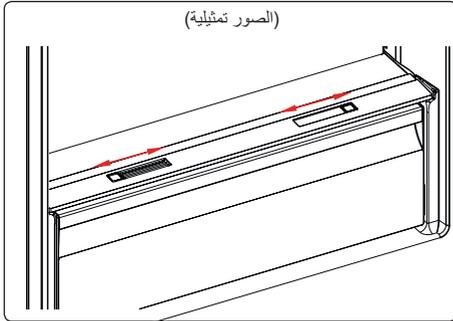


أو

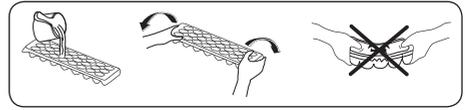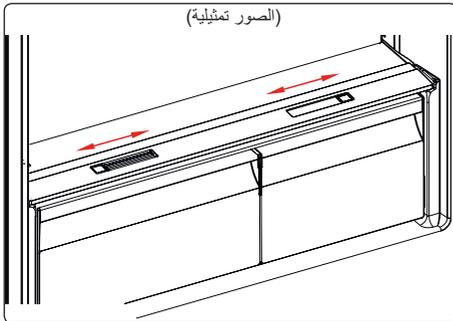


3.6.2 حامل الزجاجات (في بعض الطرازات)

استخدم حامل الزجاجات لمنع الزجاجات من الانزلاق أو السقوط.

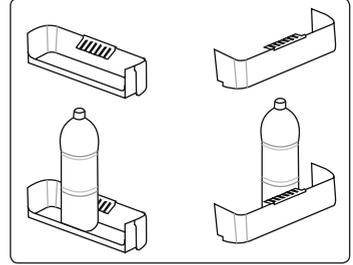

3.6.3 صندوق الفريزر

يسمح صندوق الفريزر بالوصول إلى الطعام بسهولة أكبر.

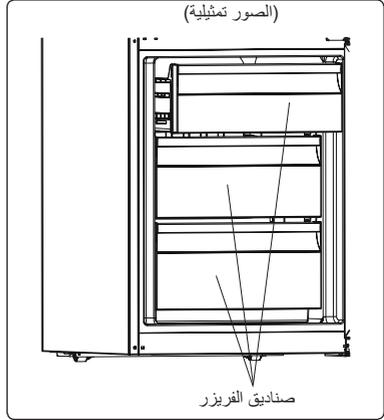

أو

- في حالة الاستمرار في الضغط على الزر، فسيبدأ مرة أخرى من +8 درجات مئوية.
- ستبقى قيمة درجة الحرارة المحددة قبل تنشيط وضع الإجازة أو وضع التجميد الفائق أو التبريد الفائق أو الوضع الاقتصادي هي نفسها عند انتهاء الوضع أو إلغاؤه. يستمر الجهاز بالعمل بقيمة درجة الحرارة هذه.

الإعدادات الموصى بها لدرجات حرارة الفريزر ومقصورة وحدة التبريد

ملاحظات	مقصورة وحدة التبريد	مقصورة الفريزر
للاستخدام المنتظم وأفضل أداء.	4 درجات مئوية	18- درجة مئوية
يوصى به عندما تزيد درجة الحرارة المحيطة عن 30 درجة مئوية.	4 درجات مئوية	20- درجة مئوية، 22- درجة مئوية أو 24- درجة مئوية
يجب أن يتم استخدامها عندما ترغب في تجميد الطعام في فترة قصيرة من الزمن.	4 درجات مئوية	التجميد الفائق
يجب استخدام إعدادات درجة الحرارة هذه عندما تكون درجة الحرارة المحيطة عالية، أو إذا كنت تعتقد أن مقصورة الثلجة لا تبرد بشكل كافٍ بسبب فتح الباب بشكل متكرر.	2 درجة مئوية	18- درجة مئوية، 20- درجة مئوية، 22- درجة مئوية أو 24- درجة مئوية

ملاحظات	مقصورة وحدة التبريد	مقصورة الفريزر
يجب أن يستخدم عندما تحميل مقصورة الثلجة حملاً زائداً من الأطعمة أو عند الحاجة إلى تبريد الطعام على الفور.	التبريد الفائق	18- درجة مئوية، 20- درجة مئوية، 22- درجة مئوية أو 24- درجة مئوية

ملحوظة: قد يكون لبعض الأجهزة المدمجة وضع الاستعداد.

3.4.3 وضع الاستعداد

الغرض

يمكن استخدام هذا الوضع لتوفير الطاقة عندما تقوم بإجازة. كيف يتم استخدامه؟

* حدد قيمة الضغط «8».

* اضغط على زر ضبط الوضع والمبرد لمدة 5 ثوان.

* سيظهر البيان "bY" "St" على الشاشة.

أثناء هذا الوضع:

في وضع الاستعداد؛ سيتم تعطيل جميع المكونات.

إذا ضغطت على زر العرض، سيظهر البيان "bY" "St" موضحاً أن وضع الاستعداد نشط.

للإلغاء، اضغط على زر ضبط الوضع والمبرد لمدة 5 ثوان. بعد إيقاف تفعيل الوضع، قد يضيء رمز الخطأ على الشاشة لأن المنتج يمكن ألا يكون بارداً بالقدر الكافي. سينطفئ رمز

الخطأ، عندما يصل المنتج إلى درجة حرارة عادية.

3.4.4 وظيفة الإنذار عند فتح الباب

إذا تم فتح باب الثلجة لأكثر من دقيقتين، فستسمع صوت "صافرة".

3.5 تحذيرات إعدادات درجة الحرارة

- صُمم الجهاز للعمل في نطاقات درجة الحرارة المحيطة المنصوص عليها في المعايير القياسية، وفقاً لفئة المناخ المبنية في ملصق المعلومات. لا يوصى بتشغيل الثلجة في البيئات الواقعة خارج نطاقات درجة الحرارة المنصوص عليها. فهذا سيؤدي إلى خفض كفاءة التبريد الخاصة بالجهاز.
- ينبغي إجراء التعديلات على درجة الحرارة وفقاً لمعدل تكرار فتح باب الثلجة ولكمية الأطعمة المحفوظة داخل الجهاز ودرجة الحرارة المحيطة لموقع جهازك.
- عند تشغيل الجهاز للمرة الأولى، اتركه يعمل لمدة 24 ساعة للوصول إلى درجة حرارة التشغيل. خلال هذه الفترة، لا تفتح الباب ولا تترك كمية كبيرة من الطعام بالداخل.
- يتم تفعيل وظيفة التأخير لمدة 5 دقائق لمنع تلف ضاغط الجهاز عند توصيله بالكهرباء أو فصله عنها، أو عند انقطاع التيار الكهربائي. سوف يعمل جهازك بشكل طبيعي بعد 5 دقائق.

فئات المناخ ومعانيها:

T (استوائية): هذه الثلجة مُعدة للاستخدام في درجات حرارة محيطية تتراوح بين 16 و 43 درجة مئوية.

ST (شبه استوائية): هذه الثلجة مُعدة للاستخدام في درجات حرارة محيطية تتراوح بين 16 و 38 درجة مئوية.

N (معتدلة): هذه الثلجة مُعدة للاستخدام في درجات حرارة محيطية تتراوح بين 16 و 32 درجة مئوية.

SN (درجة حرارة موسعة): هذه الثلجة مُعدة للاستخدام في درجات حرارة محيطية تتراوح بين 10 و 32 درجة مئوية.

مروحة التبريد (إن وجدت)

لا تسد فتحات دخول الهواء وخروجه عند تخزين الطعام، وإلا فستضعف عملية تدوير الهواء الصادرة من المروحة التبريد.

3.6 الملحقات

قد تختلف الأوصاف المرئية، والنصية لقسم الملحقات حسب طراز جهازك.

3.6.1 صينية الثلج (في بعض الطرازات)

• عليك تعبئة درج الثلج بالمياه ووضعه في مقصورة صنع الثلج.

بعد تجمد الماء بالكامل، يمكنك لف الدرج كما هو موضح أدناه لفريق مكعبات الثلج.

3.4 إعدادات درجة الحرارة

3.4.1 إعدادات درجة حرارة الفريزر


- قيمة درجة الحرارة الأولية لمؤشر إعدادات الفريزر هي 18- درجة مئوية.



- اضغط على زر إعداد الفريزر مرة واحدة.
- عندما تضغط على هذا الزر أولاً، فسيومض قيمة آخر ضبط على الشاشة.
- في أي وقت تضغط فيه على هذا الزر، يتم ضبط درجة حرارة أقل (16- درجة مئوية، 18- درجة مئوية 20- درجة مئوية، 22- درجة مئوية، 24- درجة مئوية أو التجميد الفائق).
- عند الضغط على زر إعداد الفريزر حتى يظهر رمز التجميد الفائق، وإذا لم تضغط على أي زر آخر خلال ثانية واحدة، فسوف تومض علامة التجميد الفائق.
- إذا واصلت الضغط عليه، فستبدأ مرة أخرى من 16- درجة مئوية.
- ستبقى قيمة درجة الحرارة المحددة قبل تنشيط وضع الإجازة أو وضع التجميد الفائق أو التبريد الفائق أو الوضع الاقتصادي هي نفسها عند انتهاء الوضع أو إلغاؤه. يستمر الجهاز بالعمل بقيمة درجة الحرارة هذه.

3.4.2 إعدادات درجة حرارة وحدة التبريد

- قيمة درجة الحرارة الأولية لمؤشر إعدادات وحدة التبريد هي 4+ درجة مئوية.

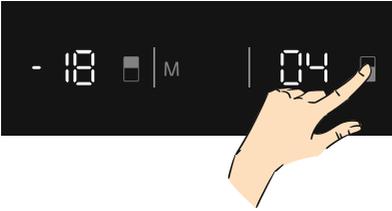

- اضغط على زر وحدة التبريد مرة واحدة.
- عندما تضغط على هذا الزر أولاً، فستظهر قيمة آخر إعداد على شاشة مؤشر إعداد وحدة التبريد.
- في أي وقت تضغط فيه على هذا الزر، يتم ضبط درجة حرارة أقل (8+ درجة مئوية، 6+ درجة مئوية، 5+ درجة مئوية، 4+ درجة مئوية، 2+ درجة مئوية أو التبريد الفائق).
- عند الضغط على زر إعداد وحدة التبريد حتى يظهر رمز التبريد الفائق، وإذا لم تضغط على أي زر خلال ثانية واحدة، فسوف تومض علامة التبريد الفائق.




- اضغط على زر الفريزر لمدة 3 ثوانٍ.
- سوف تبدأ رسمة متحركة خاصة في الظهور على شاشة قيمة ضبط الفريزر وسوف يومض الرقم 05 على شاشة قيمة ضبط وحدة التبريد.
- اضغط على زر الثلجة لضبط الوقت (05 - 10 - 15 - 20 - 25 - 30 دقيقة).
- عند تحديد الوقت ستومض الأرقام 3 مرات على الشاشة وسيصدر صوت بيب بيب.
- إذا لم يتم الضغط على أي زر لمدة ثانيتين سيتم ضبط الوقت.
- يبدأ العد التنازلي من الوقت الذي تم ضبطه دقيقة بدقيقة.
- سوف يومض الزمن المتبقي على الشاشة.
- لإلغاء هذا الوضع قم بالضغط على زر إعداد الفريزر لمدة 3 ثوانٍ.

3.3.6 وضع الشاشة المؤقتة

الغرض

- يوفر هذا الوضع الطاقة عن طريق إيقاف تشغيل إضاءة لوحة التحكم كلها عند ترك اللوحة غير نشطة.

كيفية الاستخدام

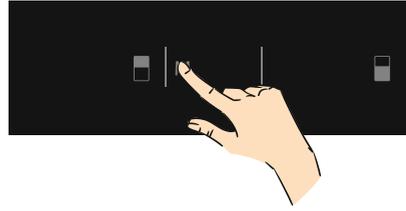

- سيتم تنشيط وضع الشاشة المؤقتة تلقائيًا بعد 30 ثانية.
- إذا ضغطت أي مفتاح أثناء إيقاف تشغيل إضاءة لوحة التحكم، فستظهر إعدادات الجهاز الحالية مرة أخرى على الشاشة لتتيح لك إجراء أي تغيير تريده.
- إذا لم تقم بإلغاء وضع الشاشة المؤقتة أو لم تضغط على أي مفتاح لمدة 30 ثانية، فستظل لوحة التحكم في حالة إيقاف تشغيل.

إلغاء تنشيط وضع الشاشة المؤقتة،

- لإلغاء وضع الشاشة المؤقتة، أولاً وقبل كل شيء، تحتاج إلى الضغط على أي مفتاح لتنشيط المفاتيح ثم اضغط باستمرار على زر الوضع لمدة 3 ثوانٍ.
- لإعادة تنشيط وضع الشاشة المؤقتة، اضغط باستمرار على زر الوضع لمدة 3 ثوانٍ.


ملاحظة: يجب تشغيل هذا الخيار قبل 24 ساعة من وضع الطعام في الفريزر. بعد 54 ساعة، يعود إلى قيمة الإعداد العادية.

3.3.2 وضع التبريد الفائق

الغرض

- لتبريد كميات كبيرة من الأطعمة وتخزينها في مقصورة التلاجة.
- لتبريد المشروبات بسرعة.

كيف يتم استخدامه؟

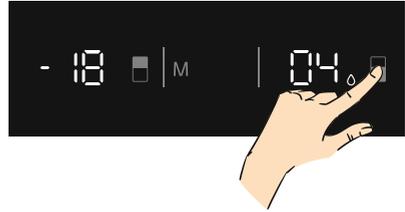

اضغط على زر ضبط إعدادات وحدة التبريد حتى يظهر رمز التبريد الفائق على الشاشة. وسيصدر الجرس صوت صافرة. وسيتم تعيين الوضع.

أثناء هذا الوضع:


- يمكن تعديل درجة حرارة الفريزر ووضع التجميد الفائق. في هذه الحالة يستمر وضع التبريد الفائق.
- لا يمكن اختيار الوضع الاقتصادي ووضع الإجازة.
- يمكن إلغاء وضع التبريد الفائق بنفس طريقة الاختيار.

3.3.3 الوضع الاقتصادي

الغرض

توفير الطاقة. أثناء فترات عدم الاستخدام المتكرر (فتح الباب) أو عدم المكوث في المنزل، مثل أوقات الإجازة، يمكن لبرنامج الوضع الاقتصادي أن يوفر درجة الحرارة المثلى ويوفر الطاقة في الوقت نفسه.

كيف يتم استخدامه؟

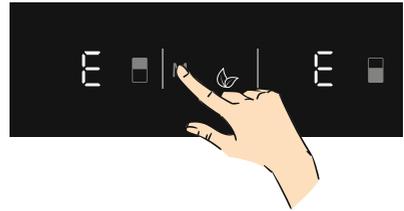


- استمر في الضغط على زر "MODE" (الوضع) إلى أن يظهر الرمز الاقتصادي.
- إذا لم يتم الضغط على أي زر لمدة ثانية واحدة. وسيتم تعيين الوضع. سوف يومض الرمز الاقتصادي ثلاث مرات. عندما يتم تعيين الوضع، يصدر الجرس صوت صافرة.
- سوف يظهر على قسم درجة حرارة الفريزر والتلاجة حرف "E".

- سوف يضيء رمز الوضع الاقتصادي وحرف E حتى انتهاء الوضع.
- **أثناء هذا الوضع:**

- يمكن ضبط إعدادات الفريزر. عندما يتم إلغاء الوضع الاقتصادي، سيتم استكمال قيم الإعدادات المحددة.
- يمكن ضبط إعدادات وحدة التبريد. عندما يتم إلغاء الوضع الاقتصادي، سيتم استكمال قيم الإعدادات المحددة.
- يمكن اختيار الوضعين التبريد الفائق والتجميد الفائق. يتم إلغاء الوضع الاقتصادي تلقائيًا ويتم تنشيط الوضع المحدد.
- يمكن اختيار وضع الإجازة بعد إلغاء الوضع الاقتصادي. ثم يتم تنشيط الوضع المحدد.
- للإلغاء، سوف تحتاج فقط إلى الضغط على زر الوضع.

3.3.4 وضع الإجازة

كيف يتم استخدامه؟

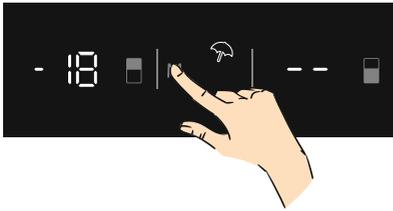

- استمر في الضغط على زر "MODE" (الوضع) إلى أن يظهر رمز الإجازات
- إذا لم يتم الضغط على أي زر لمدة ثانية واحدة. وسيتم تعيين الوضع. سوف يومض رمز الإجازات ثلاث مرات. عندما يتم تعيين الوضع، يصدر الجرس صوت صافرة.
- وسيظهر على قسم درجة حرارة وحدة التبريد الرمز "E".
- سوف يضيء رمز الإجازات والرمز "E" حتى انتهاء الوضع.

أثناء هذا الوضع:

- يمكن ضبط إعدادات الفريزر. عندما يتم إلغاء وضع الإجازة، سيتم استكمال قيم الإعدادات المحددة.
- يمكن ضبط إعدادات وحدة التبريد. عندما يتم إلغاء وضع الإجازة، سيتم استكمال قيم الإعدادات المحددة.
- يمكن اختيار الوضعين التبريد الفائق والتجميد الفائق. يتم إلغاء وضع الإجازة تلقائيًا ويتم تنشيط الوضع المحدد.
- يمكن اختيار الوضع الاقتصادي بعد إلغاء وضع الإجازة. ثم يتم تنشيط الوضع المحدد.
- للإلغاء، سوف تحتاج فقط إلى الضغط على زر الوضع.

3.3.5 وضع تبريد الشرب

الغرض

يتم استخدام هذا الوضع لتبريد المشروبات في إطار زمني قابل للتعديل.

كيف يتم استخدامه؟

أ) مقصورة التلاجة

ب) مقصورة الفريزر

1) لوحة التحكم

2) مروحة التريو *

3) أرفف التلاجة

4) غطاء الدرج الحافظ للأغذية

5) الدرج الحافظ للأغذية

6) الدرفة/الدرج العلوي للفريزر

7) أدراج الفريزر

8) صينية صندوق الثلج

9) الأرفف الزجاجية للفريزر

10) رف الزجاجات

11) رف الباب القابل للضبط * / رف الباب

12) أرفف الباب

13) حامل البيض

* في بعض الطرز

3 استخدام الجهاز


3.1 معلومات عن تكنولوجيا Frost Free

يختلف نظام التشغيل في ثلاجات Frost Free عن ذلك الموجود في الثلاجات ثابتة التبريد.

في الثلاجات العادية (ثابتة التبريد)، تدخل الرطوبة التلاجة بسبب فتح الباب ومع رطوبة الأطعمة يتراكم الجليد في مقصورة الفريزر. لإذابة الثلوج والجليد من درج الفريزر، عليك إيقاف تشغيل التلاجة، ووضع الطعام المجمد في حاوية تجميد منفصلة، وإزالة الثلج المتجمع في مقصورة الفريزر بصفة دورية.

هذا الوضع مختلف تماماً في الثلاجات النوفروست. تنفخ مروحة مدمجة الهواء الجاف والبارد بشكل متساوي في جميع أنحاء مقصورتى المبرد والفريزر. يتبدد الهواء البارد بشكل موحد بين الأرفف، ما يضمن تبريد كل طعامك بالتساوي، وبالتالي يمنع الرطوبة وتكون الجليد. لذا، فإن ثلاجات النوفروست سهلة الاستخدام، بجانب حجمها الضخم ومظهرها الأنيق.

3.2 شاشة العرض ولوحة التحكم

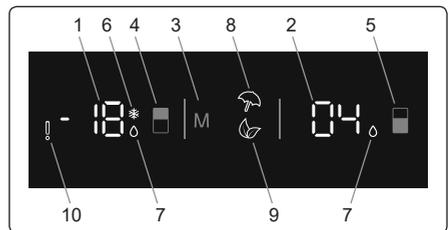

استخدام لوحة التحكم

1. شاشة عرض قيمة إعدادات الفريزر
2. شاشة عرض قيمة إعدادات وحدة التبريد
3. زر الوضع. تسمح بتفعيل الأوضاع (الاقتصادي، والإجازة، وما شابه) إذا رغبت في ذلك.
4. زر إعداد الفريزر. يسمح بتعديل قيمة إعدادات الفريزر وتفعيل وضع التجميد الفائت إذا رغبت في ذلك. يمكن إعداد الفريزر على 16-، 18-، 20-، 22-، 24- درجة مئوية.
5. زر إعداد وحدة التبريد. يسمح بتعديل قيمة إعدادات وحدة التبريد وتفعيل وضع التبريد الفائت إذا رغبت في ذلك. يمكن إعداد وحدة على 8 أو 6 أو 5 أو 4 أو 2 درجة مئوية.
6. مؤشر التجميد الفائت.
7. مؤشر التبريد الفائت.
8. رمز وضع الإجازة.
9. رمز الوضع الاقتصادي.
10. رمز المنبه.

3.3 تشغيل ثلاجتك المجمدة

إذا كانت الإضاءة متوفرة بالمنتج


عندما يكون الجهاز متصلاً بمقيس الطاقة للمرة الأولى، قد تعمل الأضواء الداخلية بعد دقيقة بسبب اختبارات الفتح.

3.3.1 وضع التجميد الفائت

الغرض


- لتجميد كمية كبيرة من الأطعمة التي لا يمكن وضعها على رف التجميد السريع.
- لتجميد الأطعمة الجاهزة.
- لتجميد الطعام بشكل أسرع.
- لتخزين الطعام والخضروات الطازجة.

كيف يُستخدم؟

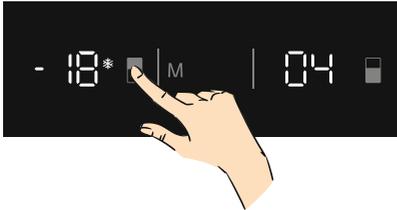

اضغط على زر ضبط إعدادات الفريزر حتى يظهر رمز التجميد السريع على الشاشة. وسيصدر الجرس صوت صافرة. وسيتم تعيين الوضع. أثناء هذا الوضع:


- يمكن تعديل درجة حرارة وحدة التبريد ووضع التبريد الفائت. في هذه الحالة يستمر وضع التجميد الفائت.
- لا يمكن اختيار الوضع الاقتصادي وضع الإجازة.
- يمكن إلغاء وضع التجميد الفائت بنفس طريقة الاختيار.

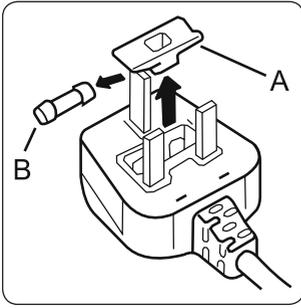

تم تجهيز سلك التيار الكهربائي لهذا الجهاز بقباس مزود بفيوز من نوع 13 أمبير حسب النوع BS 1363A. لتغيير فيوز في هذا النوع من القوابس، اتبع الخطوات التالية:

1. أزل الفيوز وغطاءه.
2. ركب فيوزًا بديلاً 13 أمبير معتمدًا من ASTA حسب النوع BS 1362 بغطاء الفيوز.
3. أعد تركيب غطاء الفيوز.

2 وصف الجهاز

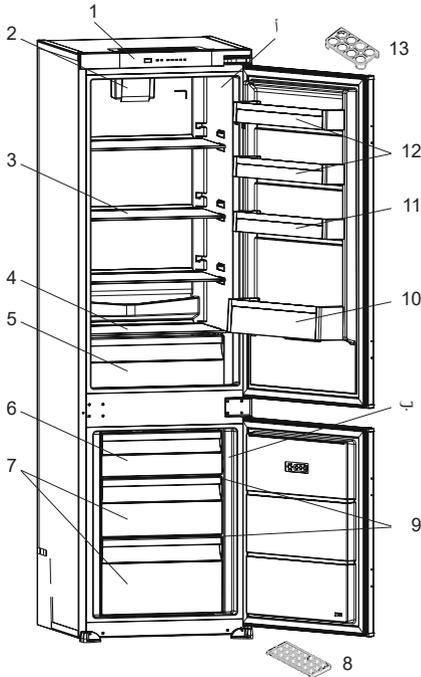

هذا العرض التقديمي مُعد فقط للاطلاع على معلومات بشأن أجزاء الجهاز. قد تختلف الأجزاء وفقًا لطراز الجهاز.

من الجهاز بشكل خاطئ. ولمزيد من المعلومات المفصلة حول إعادة تدوير هذا الجهاز، يرجى الاتصال بالمكتب المحلي في مدينتك، أو خدمة التخلص من النفايات المنزلية أو المحل الذي اشتريته منه المنتج.

التغليف والبيئة

تحمي مواد التغليف جهازك من التلف الذي قد يحدث أثناء النقل. جميع مواد التغليف صديقة للبيئة وقابلة لإعادة التدوير. يحد استخدام المواد المعاد تدويرها من استهلاك المواد الخام وبالتالي



يقلل من إنتاج النفايات.

ملاحظات:

- يرجى قراءة دليل التعليمات بعناية قبل تركيب الجهاز الخاص بك واستخدامه. نحن لسنا مسؤولين عن الضرر الذي يقع بسبب سوء الاستخدام.
- اتبع جميع التعليمات التي على الجهاز الخاص بك والموجودة بدليل التعليمات، واحفظ هذا الدليل في مكان آمن من أجل حل المشكلات التي قد تحدث في المستقبل.
- تم صنع هذا الجهاز لاستخدامه في المنازل، ولا يمكن استخدامه إلا في البيئة المحلية وللأغراض المحددة. فهو غير مناسب للاستخدام التجاري أو المشترك. وسوف يسبب مثل هذا الاستخدام إلغاء ضمان الجهاز ولن تكون شركتنا مسؤولة عن أي خسائر قد تتكبدها.
- تم صنع هذا الجهاز لاستخدامه في المنازل، وهو مناسب فقط لتبريد / تخزين الأطعمة. فهو غير مناسب للاستخدام التجاري أو المشترك وأولاً لتخزين المواد الأخرى غير الأطعمة. شركتنا غير مسؤولة عن أي خسائر تتكبدها نتيجة للاستخدام غير الصحيح للجهاز.

1.4 معلومات كهربائية (قباس من نوع مخصص للمملكة المتحدة)

تحذير! يجب تأريض هذا الجهاز.

تم تجهيز سلك التيار الكهربائي لهذا الجهاز بقباس مؤرض بشكل خاص.

مهم! لا تستخدم الجهاز دون وضع غطاء الفيوز. إذا كان من الضروري استبدال الفيوز، يجب استبداله بفيوز 13 أمبير، ومعتمد من ASTA حسب النوع BS1362.

يجب استخدام هذا القابس مع مقبس مؤرض بشكل خاص من فئة 13 أمبير. إذا لم يكن هناك مقبس كهربائي مثل هذا في منزلك، يرجى تركيبه بواسطة اختصاصي كهرباء معتمد.

1.2 تحذيرات التركيب

قبل استخدام فريزر الثلجة لأول مرة، يرجى الانتباه إلى النقاط التالية:

- فوطلية تشغيل فريزر الثلجة هي 220-240 فولت عند 50 هرتز.
- يجب أن يسهل الوصول إلى القابيس بعد التركيب.
- قد يكون لفريزر الثلجة رائحة عند تشغيله لأول مرة. وهذا أمر طبيعي وستلاشي هذه الرائحة عندما يبدأ فريزر الثلجة في البرودة.
- قبل توصيل فريزر الثلجة، تأكد من أن المعلومات الواردة في لوحة البيانات (الفوطلية والحمل الموصول) تطابق مصادر الكهرباء الرئيسية. في حالة وجود شكوك، استشر فني كهرباء مؤهل.
- قم بإدخال القابيس في مقبس كهربائي ذي وصلة أرضية كافية. إذا كان المقبوس لا يوجد به اتصال أرضي أو لا يتوافق القابيس معه، فننصح عليك استشارة فني كهربائي معتمد لتقديم المساعدة.
- يجب توصيل الجهاز بمقبس ذي فيوز مثبت بشكل صحيح. يجب أن يتطابق مصدر الطاقة (AC) والفوطلية عند نقطة التشغيل مع التفاصيل المدونة على لوحة اسم الجهاز (توجد اللوحة على الجانب الأيسر للجهاز).
- لا تنحمل مسؤولية الأضرار التي قد تحدث بسبب الاستخدامات غير المبررة.
- ضع فريزر الثلجة في مكان بعيد عن أشعة الشمس المباشرة.
- ينبغي ألا يُستخدم فريزر الثلجة أبداً في العراء أو أن يترك تحت المطر.
- يجب أن يبتعد الجهاز عن المواقد وأفران الغاز والسخانات بما لا يقل عن 50 سم، وينبغي أن يبتعد عن الأفران الكهربائية بما لا يقل عن 5 سم.
- إذا وضعت فريزر الثلجة بالقرب من الديب فريزر، يجب أن يكون هناك على الأقل 2 سم بينهما لمنع تكون الرطوبة على السطح الخارجي.
- لا تغط جسم فريزر الثلجة أو اعلاه بالدانتيل. سيؤثر هذا على أداء فريزر الثلجة.
- يجب ترك مسافة لا تقل عن 150 ملم أعلى جهازك. لا تضع أي شيء أعلى جهازك.
- لا تضع الأشياء الثقيلة على الجهاز.
- قم بتنظيف الجهاز جيداً قبل استخدامه (راجع قسم التنظيف والصيانة).
- قبل استخدام فريزر الثلجة، قم بمسح جميع الأجزاء بمحلول من الماء الدافئ المضاف إليه ملعقة صغيرة من بيكربونات الصوديوم. ثم اشطفه بالمياه النظيفة وجفّه. أعد جميع الأجزاء إلى فريزر الثلجة بعد التنظيف.
- يتضمن دليل التركيب إجراءات التركيب داخل وحدة المطبخ. هذا الجهاز مُعد للاستخدام في وحدات المطبخ المناسبة فقط.

1.3 أثناء الاستخدام

- لا تقم بتوصيل فريزر الثلجة بالكابلات الرئيسية للإمداد بالطاقة الكهربائية باستخدام وصلات من الرصاص.
- لا تستخدم المقابيس الكهربائية التالفة أو المشقوقة أو القديمة.
- لا تشد أو تشني أو تلحق الضرر بالكابل.
- يحظر استخدام مهائئ القابيس.
- هذا الجهاز مخصص لاستخدام البالغين. لا تسمح للأطفال بالعبث بهذا الجهاز أو بالتعلق بالباب.
- لا تلمس كابل/قابيس الطاقة بيدين مبتلئين. لأن ذلك قد يتسبب في حدوث ماس كهربائي أو صدمة كهربائية.
- لا تضع الزجاجات أو علب المشروبات في مقصورة صنع الثلج، لأنها ستفجر عند تجمد محتواها.
- لا تضع مواد متفجرة أو قابلة للاشتعال داخل الثلجة. ضع المشروبات التي تحتوي على نسبة عالية من الكحوليات في مقصورة ثلاجتك، واحرص على أن تكون فوهاتها مغلقة بإحكام.
- لا تلمس الثلج عند إزالته من مقصورة صنع الثلج. قد يسبب الثلج حروق الصقيع و / أو جروحاً.
- لا تلمس السلع المجمدة بيدين مبتلئين. لا تتناول الأيس كريم أو مكعبات الثلج مباشرة بعد إخراجها من مقصورة صنع الثلج.
- لا تعد تجميد الطعام المجمد المذاب. فقد يسبب هذا مشاكل صحية مثل التسمم الغذائي.

الثلجات القديمة والمعلطة

- إذا كانت ثلاجتك القديمة أو الفريزر القديم به قفل، فقم بكسر هذا القفل أو إزالته قبل التخلص منه، لأن الأطفال قد يعلقون بداخله وقد يتسبب في وقوع حادث.
- تحتوي أجهزة الثلجة والفريزر القديمة على مواد عزل والمبرد يحتوي على مركبات الكلوروفلوروكربون. لذلك، احرص على عدم الإضرار بالبيئة عند التخلص من الثلجات القديمة.

إعلان المطابقة لمعايير اللجنة الأوروبية

نعلن أن منتجاتنا تلبى التوجيهات والقرارات واللوائح الأوروبية المعمول بها والمتطلبات المدرجة في المعايير المشار إليها.

التخلص من جهازك القديم

- يشير الرمز الموجود على المنتج أو على صندوق التعبئة إلى أنه لا يتعين التعامل مع هذا المنتج باعتباره من النفايات المنزلية. وبدلاً من ذلك، يُسلم الجهاز إلى نقطة التجميع المناسبة لإعادة تدوير المعدات الإلكترونية والكهربائية. ومن خلال التأكد أنه تم التخلص من هذا الجهاز بالطريقة الصحيحة، ستساعد في منع العواقب السلبية المحتمل حدوثها للبيئة وصحة الإنسان، والتي من شأنها أن تنتج من التخلص



- إذا تعرض سلك التيار الكهربائي للتلف، يجب استبداله بواسطة الجهة المصنعة أو وكيل الصيانة المعتمد لديها أو شخص آخر مؤهل تجنبًا لحدوث المخاطر.
- لم يتم تصميم هذا الجهاز للاستخدام عند ارتفاعات تزيد عن 2000 متر.
- **لتجنب تلوث الطعام، يُرجى اتباع التعليمات التالية:**
- قد يتسبب فتح الباب لفترات طويلة في ارتفاع درجة حرارة مكونات الجهاز بشكل كبير.
- قم بتنظيف الأسطح التي من الممكن أن تلامس الطعام أو أنظمة الصرف التي يسهل الوصول إليها على نحو منتظم
- قم بتخزين اللحوم والأسماك النيئة في حاويات مناسبة في الثلاجة بحيث لا تكون ملائمة للأطعمة الأخرى ولا تتساقط النقاط عليها.
- تُعد مقصورات الطعام المجمد ذات النجمتين مناسبة لتخزين الطعام المجمد مسبقًا، وتخزين أو عمل الأيس كريم أو مكعبات الثلج.
- المقصورات ذات النجمة أو النجمتين أو الثلاث نجوم ليست مناسبة لتجميد الطعام الطازج.
- إذا تم ترك الجهاز المبرد فارغًا لفترات طويلة، فقم بإيقاف تشغيله وإزالة الثلج وتنظيفه وتجفيفه ثم اترك الباب مفتوحًا لمنع حدوث تعفن داخل الجهاز.

- صنع هذا الجهاز للاستخدام المنزلي والاستخدامات الداخلية مثل:
 - المطابخ الموجودة في المحلات والمكاتب وأماكن العمل الأخرى
 - في المزارع وبواسطة نزلاء الفنادق والموتيلات والأماكن السكنية الأخرى.
 - الفنادق التي توفر الإقامة والإفطار؛
 - المطاعم والأماكن المماثلة التي ليس فيها بيع بالتجزئة.
- في حالة عدم توافق المقبس الكهربائي مع قابس الثلاجة، يجب أن يتم استبداله بواسطة الجهة المصنعة، أو من الوكيل أو بواسطة الأشخاص المؤهلين لذلك من أجل تجنب المخاطر المحتملة.
- تم توصيل قابس مؤرض خاص بكابل الطاقة بالثلاجة. هذا القابس يجب أن يستخدم مع مقبس كهربائي مؤرض بشكل خاص من فئة 13 أمبير. إذا لم يكن هناك مقبس كهربائي مثل هذا في منزلك، يرجى تركيبه بواسطة اختصاصي كهرباء معتمد.
- يمكن للأطفال من سن 8 أعوام فأكثر استخدام هذا الجهاز ويمكن أيضاً للأشخاص من ذوي الاحتياجات الخاصة، الجسدية أو الحسية أو الذهنية أو الذين يفتقرون إلى الخبرة والمعرفة استخدام الجهاز إذا تم الإشراف عليهم أو إعطاؤهم تعليمات حول طريقة استخدام الجهاز بطريقة آمنة وحول فهم المخاطر المصاحبة. يجب على الأطفال عدم العبث بالجهاز. يحظر على الأطفال إجراء أعمال التنظيف والصيانة دون إشراف.
- يُسمح للأطفال الذين تتراوح أعمارهم بين 3 و8 أعوام بملء أجهزة التبريد وتفريغها. لا يُسمح للأطفال بإجراء أعمال التنظيف، أو صيانة الجهاز، ولا يُسمح للأطفال الصغار جداً (الذين تتراوح أعمارهم بين 0 و3 سنوات) باستخدام الأجهزة، أما بالنسبة للأطفال الصغار (الذين تتراوح أعمارهم بين 3 و8 سنوات)، فلا يُسمح لهم باستخدام الأجهزة بشكل آمن ما لم يتم الإشراف عليهم بشكل مستمر، ويُسمح للأطفال الأكبر سنّاً (الذين تتراوح أعمارهم بين 8 و14 عاماً) والأشخاص الضعفاء باستخدام الجهاز بشكل آمن بعد خضوعهم للإشراف المناسب، أو إعطاؤهم التعليمات المناسبة بشأن استخدام الجهاز. لا يُسمح للأشخاص الضعفاء جداً باستخدام الأجهزة ما لم يتم الإشراف عليهم بشكل مستمر.

1 تعليمات السلامة

1.1 تحذيرات السلامة العامة

اقرأ دليل المستخدم هذا بعناية.

⚠ تحذير: لا تضع عوائق في فتحات التهوية الخاصة في صندوق الجهاز أو الهيكل الداخلي.

⚠ تحذير: يجب عدم استخدام أدوات ميكانيكية أو أية وسائل أخرى للتسريع من عملية إزالة التجميد، بخلاف الأدوات التي توصي بها الجهة المصنعة.

⚠ تحذير: لا تستخدم أجهزة كهربائية داخل مقصورات حفظ المواد الغذائية بالجهاز، ما لم تكن من النوع الذي أوصت به الجهة المصنعة.

⚠ تحذير: لا تتلف دائرة التبريد.

⚠ تحذير: عند وضع الجهاز، تأكد من أن سلك التيار الكهربائي غير عالقٍ أو تالف.

⚠ تحذير: لا تضع مأخذ كهرباء محمولاً متعدد المقابس أو وحدات إمداد بالطاقة محمولة في ظهر الجهاز.

⚠ تحذير: لتجنب أي مخاطر محتملة لعدم استقرار الجهاز، يجب تثبيته وفقاً للتعليمات.

⚠ إذا كان جهازك يستخدم مادة التبريد R600a - (يمكنك معرفة هذا من خلال الملصق الموجود على المبرد) يجب أن تكون أكثر حذرًا أثناء النقل والتركيب لمنع تلف مكونات المبرد. على الرغم من أن الغاز R600a هو غازٌ طبيعي وصديقٌ للبيئة، فإنه قابلٌ للانفجار. وفي حالة وجود تسرب نتيجة حدوث تلف بمكونات المبرد، قم بإبعاد الثلاجة عن مصادر اللهب أو الحرارة المكشوفة وقم بتهوية الغرفة التي يوجد بها الجهاز لبضع دقائق.

• أثناء حمل الثلاجة وتغيير موضعها، لا تلتحق الضرر بدوائر الغاز الخاصة بالمبرد.

لا تقم بتخزين المواد المتفجرة مثل علب الأيروسول التي تحتوي على مواد قابلة للاشتعال في هذا الجهاز.

4	1 تعليمات السلامة
4	1.1 تحذيرات السلامة العامة
7	1.2 تحذيرات التركيب
7	1.3 أثناء الاستخدام
8	1.4 معلومات كهربائية (قابس من نوع مخصص للمملكة المتحدة)
8	2 وصف الجهاز
9	3 استخدام الجهاز
9	3.1 معلومات عن تكنولوجيا Frost Free
9	3.2 شاشة العرض ولوحة التحكم
9	3.3 تشغيل ثلاجتك المجمدة
9	3.3.1 وضع التجميد الفائق
10	3.3.2 وضع التبريد الفائق
10	3.3.3 الوضع الاقتصادي
10	3.3.4 وضع الإجازة
10	3.3.5 وضع تبريد الشراب
11	3.3.6 وضع الشاشة المؤقتة
11	3.4 إعدادات درجة الحرارة
11	3.4.1 إعدادات درجة حرارة الفريزر
11	3.4.2 إعدادات درجة حرارة وحدة التبريد
12	3.4.3 وضع الاستعداد
12	3.4.4 وظيفة الإنذار عند فتح الباب
12	3.5 تحذيرات إعدادات درجة الحرارة
12	3.6 الملحقات
12	3.6.1 صينية الثلج (في بعض الطرازات)
13	3.6.2 حامل الزجاجات (في بعض الطرازات)
13	3.6.3 صندوق الفريزر
13	3.6.4 مفتاح الحفاظ على نضارة الطعام (في بعض الطرازات)
14	3.6.5 رف الباب القابل للضبط (في بعض الطرازات)
14	3.6.6 Maxi-fresh preserver (إن وجدت)
14	4 تخزين الأطعمة
14	4.1 مقصورة الثلجة
15	4.2 مقصورة الفريزر
17	5 التنظيف والصيانة
17	5.1 إزالة الثلج
18	6 الشحن وضبط الموضع
18	6.1 النقل وتغيير الموضع
19	7 قبل الاتصال بخدمة ما بعد البيع
21	8 نصائح لتوفير الطاقة

نشكرك على اختيارك لهذا المنتج.
 يحتوي دليل المستخدم هذا على معلومات مهمة بشأن السلامة والإرشادات التي تهدف إلى مساعدتك في تشغيل الجهاز وصيانته.
 يُرجى أخذ الوقت الكافي لقراءة دليل المستخدم هذا قبل استخدام الجهاز والاحتفاظ بهذا الدليل للرجوع إليه في المستقبل.

الأيقونة	النوع	المعنى
	تحذير	خطر الإصابة الخطيرة أو الوفاة
	خطر الصعق الكهربائي.	خطر الجهد الكهربائي
	خطر الحريق	تحذير؛ خطر نشوب حريق / مواد قابلة للاشتعال
	تنبيه:	خطر التعرض للإصابة أو تلف الممتلكات
	هام	تشغيل النظام بطريقة صحيحة

CE



52400220

