


BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

Installation Guide

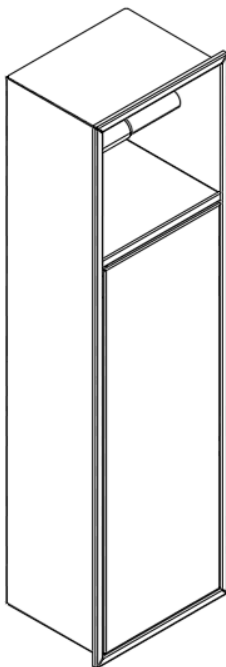

BDA-HOT-716-XX


HOTEL IN-WALL PAPER AND TOILET BRUSH HOLDER

A member of **SANIPEXGROUP**
www.sanipexgroup.com

Instruction Manual


Step 1.

- Open the front door by pressing it
- Remove the toilet brush holder by pull up the toilet brush holder (TBH)
- Take out the TBH from the frame

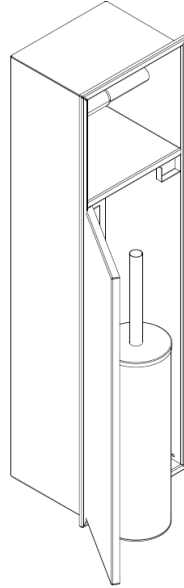


Step 3.

- Mount the Recessed Frame into the wall cavity
- Place the recessed frame into the wall cavity
- Fix it by filling the cavity part of wall

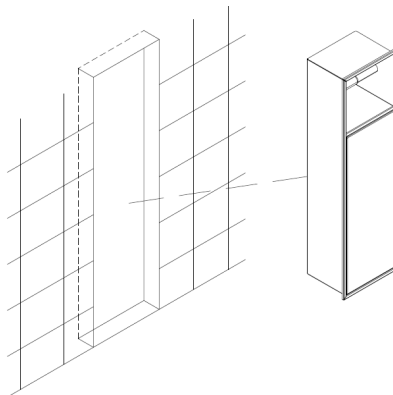

Step 4.

- Re-attach the TBH into the recessed frame

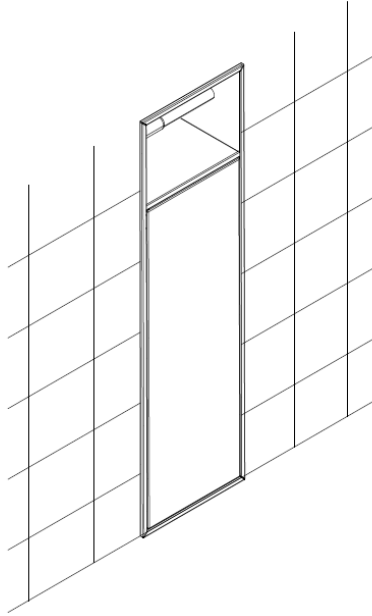

**ABRASIVE
S**

