


BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

Installation Guide

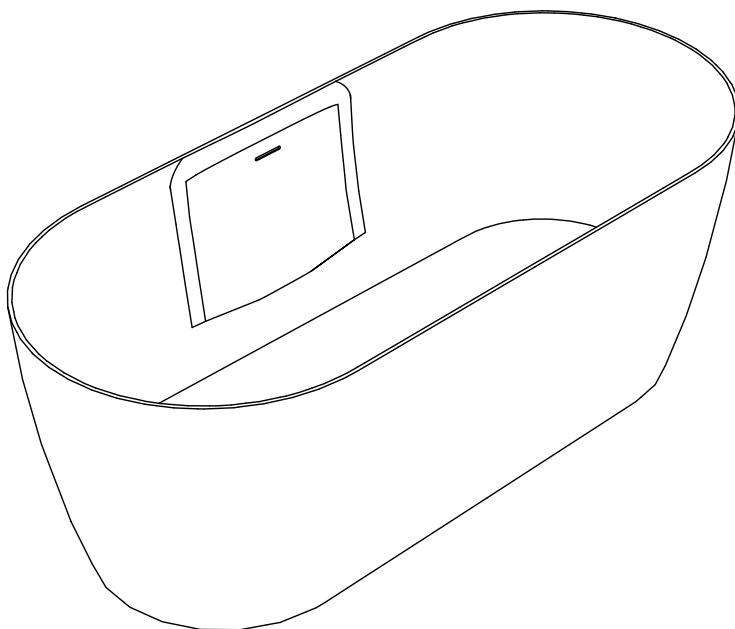

BDB-SOK-860-WS

SOAK FREESTANDING BATHTUB 1600X720X580MM WITH OVERFLOW

A member of **SANIPEXGROUP**
www.sanipexgroup.com

IMPORTANT PLEASE READ

All products manufactured and supplied by BAGNODESIGN are fit for purpose as long as they are Installed, used correctly, cleaned and receive regular maintenance in accordance with these instructions...

Remove all packaging and check the product for damage or missing parts before commencing with the installation.

Any alterations made to this product and its components may infringe product certification, infringe water regulations and invalidate the guarantee. The Installation must comply with all local/national water supply authority regulations/bylaws and building and plumbing regulations, therefore we strongly recommend that your product be installed by a reputable qualified trade's person.

PRODUCT LIFECYCLE

"The product LiveCyclele is the collective stages that a product goes through from its conception and design through to its ultimate disposal."

DISPOSAL GUIDANCE

The best way to ensure your Product has a long life is to follow the Care and Maintenance guides set by the Manufacture after purchase. This document can be found at www.sanipexgroup.com.

The life cycle of the product is not in correlation to the product Guarantee; the standards the products are manufactured or certified to (e.g. CE & WRAS) can exceed past the Guarantee duration. After the life cycle of the product is deemed complete by the end-user please follow the below to dispose of the items correctly...

CLEANING CARE GUIDE

Only use a mild soap and water for cleaning.
Rinse with water to remove the mild soap solution.
We recommend the product is dried using a soft cloth after every use.

Never use any abrasive or strong cleaning products containing, bleaches, acids (hydrochloric, formic, phosphorus, chlorine or acetic), strong detergents, limescale remover, alcohol or dyes etc.

Never use abrasive cleaning pads, wire wool or microfibre cloths.
Never use cleaning equipment that may have been pre-used and contaminated with the above substances.

Never apply the cleaning product directly onto the finished surface.

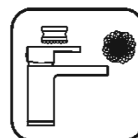


Table of Contents

We recommend that you carefully read this guide to ensure your bathroomware's proper installation and reliability for many years to come.

Installation

Before Installation

Installation Requirements

Installation Notes

Feet Installation

Plumbing Installation

Freestanding Bathtub Installation

Please ensure that your plumbing system is adequate and that you have sufficient space to complete the installation.

We recommend that you employ a suitably qualified professional to complete the installation of your new bathtub. We cannot accept responsibility for poor or incorrect installation. Please keep these instructions in a safe place for future reference.

Installation

• Before Installation

- We recommend that the installation be done by a minimum of 2 people as a safety precaution. Also make sure to adopt the proper posture when lifting the bath or basin.
- Adhere to all local building and plumbing codes.
- The diagrams in this guide are not construction plans. They are visual aids.
- For best results, the floor must be level and the wall must be square with the floor.

Installation

• Installation Requirements

Please read the instructions carefully and follow the specified guidelines so as to avoid any damage to the fixture.

1. The owner/user of the product must keep this information for future reference.
2. Consult local building codes to make sure the installation complies with standards.
3. Remove the unit from its packaging. Before disposing of it, inspect the unit to make sure it is in good shape. Should inspection reveal any damage or defect in the finish, contact your distributor. The warranty does not cover damages or defects in the finish once it has been installed. The Manufacturer's responsibility for shipping damages ceases upon delivery of the product in good order to the carrier. All complaints regarding damage due to transport must be made.
4. Place the unit in the bathroom before you start working. Conserve all nuts and bolts.
5. To protect the unit during installation, we recommend that you lay a piece of cardboard on the bottom.
6. If the unit is covered with polyethylene protective film, do not remove until installation is complete to grant maximum protection. However, remove the film where any two surfaces will be in permanent contact.
7. Verify that all dimensions on the plan are the same as the ones of the unit.

• Installation Notes

IMPORTANT! Install this product according to the installation guide. Spout must provide a minimum of 60mm reach for adequate clearance into bath. Our products must be installed by certified professional only and according to our installation guide as well as federal, provincial/state and local building codes and regulations.

• Feet Installation

1. Turn bath upside down on a clean carpet or blanket.
2. Place feet on points A as indicated on Figure.2
*The front and back sets are not the same.
3. Place the feet on the bottom of the bath and seal with silicone adhesive.
4. Leave to dry for 24hrs.
5. Turn the bath upright and using a spirit level check that bath does not wobble and stands sturdy over the drain waste line.

• Plumbing Installation

6. Plumber inserts plug into waste hole of bath.
7. Install drain supplied with Pop Up drain kit onto waste installed in Step 1.
8. Set up drain waste kit, apply plumbers' putty to drain waste basket, screw in Pop Up drain kit.

Tools

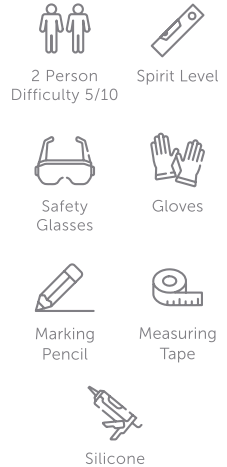


fig. 1


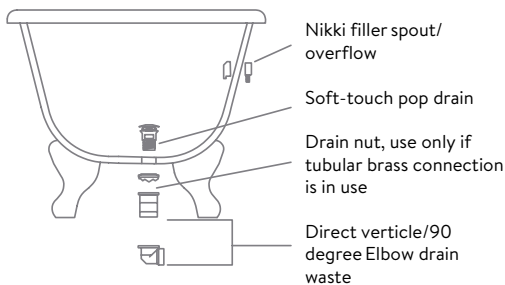


fig. 2



- The tubs weight may vary. We recommend that the installation be done by 2 people, as a security precaution.

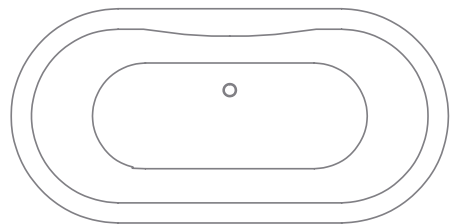

- Also, make sure to adopt a good posture when lifting the tub.
- The diagrams in this guide are not construction plans; they are visual aids.

• Freestanding Bathtub Installation

1. Ensure that the drain pipe in the floor is thoroughly cleaned before the bath is placed into position and that the waste hole is positioned correctly.
2. Before the bath is fixed to the floor ensure that the bath waste and the drainage pipe line up.
3. Make sure all the surfaces are dry and stable before installing the bathtub. This will ensure durable adhesion.
4. Mark an area with tape on the floor where the bathtub is going to stand with the template provided, the floor can now be properly prepared.
5. Position the bathtub and connect the waste, use a spirit level to ensure that the bathtub is level. Fill the bathtub with water, let the water run through the waste and check for leaks.
6. Apply sealant or silicone around the base of the bathtub to ensure that the bath does not shift.

Tools



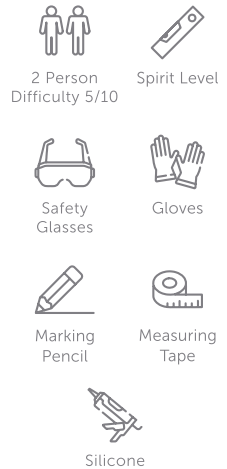


fig. 1

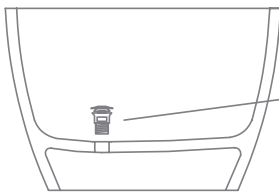

Soft-touch
pop drain
(not-included)

fig. 2

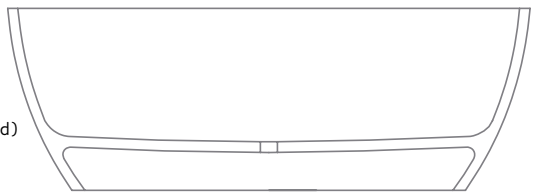

- The tubs weight may vary. We recommend that the installation be done by 2 people, as a security precaution.



- Also, make sure to adopt a good posture when lifting the tub.
- The diagrams in this guide are not construction plans; they are visual aids.

