


# BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

---

## Installation Guide

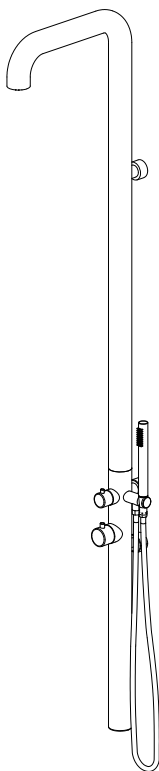


**BDD-BCH-505-XX**

BEACH HOUSE WALL MOUNTED OUTDOOR SHOWER COLUMN 1790 MM


A member of **SANIPEXGROUP**  
[www.sanipexgroup.com](http://www.sanipexgroup.com)

1

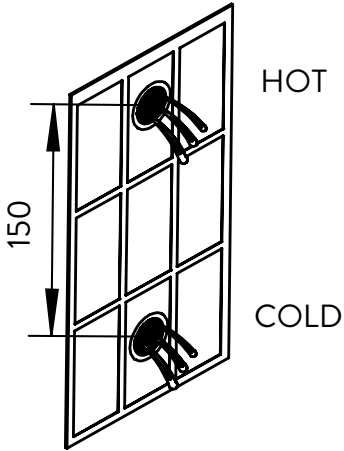


Make sure cold & hot water pipes installed at 1050mm height. Flush the pipes before installation. Make sure the middle distance btw the two pipes are 150mm, and allow 5mm adjustment.

2

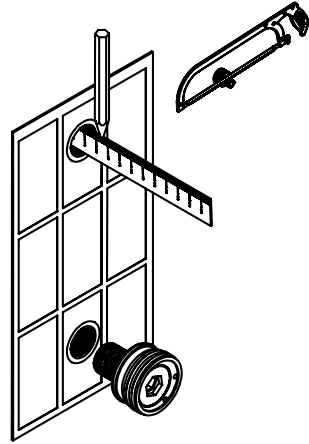


Measure the depth of the inner thread of cold & hot water pipes and mark it. This is to have NO gap left btw the wall and brass connector. Cut the extra length of the outer thread of the brass connector at marked length.

3

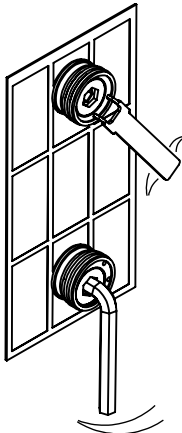





Fit the two brass connectors to the stainless fixing plate with two holes. Then tighten the two brass connectors to the cold & hot water pipes.

4

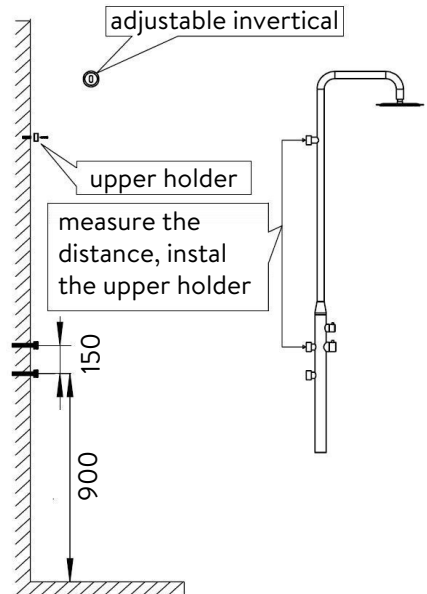

5

insert upper parts to bottom part,  
match back lines on to pipes together  
to be one rectangular, and lock screw  
in back pipes.

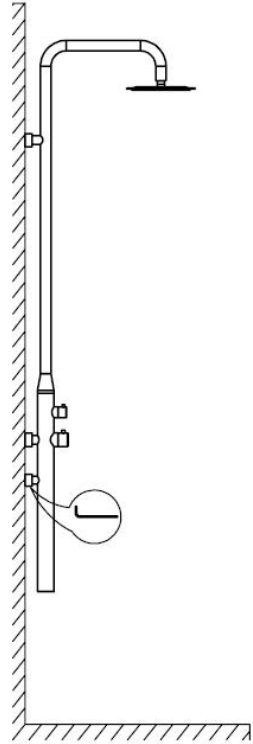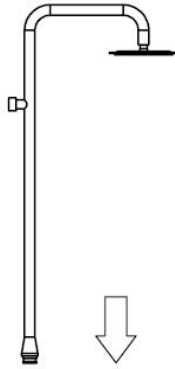

insert upper part to upper holder, lower parts to the two  
brass connectors, then tighten the screws. Connect the  
seperate shower head if have, and instal handshower and  
hose to hose inlet, then all installations are done.

# BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

A member of **SANIPEXGROUP**  
[www.sanipexgroup.com](http://www.sanipexgroup.com)