


# BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

---

## General Installation Guide

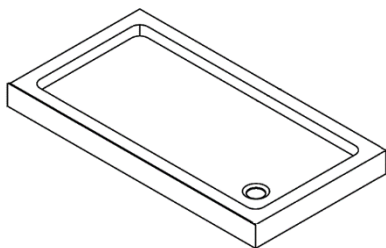

## SHOWER TRAY

A member of  SANIPEXGROUP

Please leave these instructions with the customer



## IMPORTANT PLEASE READ

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and invalidate the guarantee.

The Installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing Regulations.

We strongly recommend that your product be installed by a reputable qualified trade's person.

### **General Installation:**

**Please note this product can require 2 or more persons to lift and manoeuvre into position.**

To the installer: Please read and follow this instruction carefully, as the guarantee is only valid if the product is installed as directed.

Don't rush, read the instructions first and run through them before you begin. Keep fittings together to avoid loss. Do not over tighten screws or bolts.

If the unit is covered with polyethylene protective film, do not remove until installation is complete to grant maximum protection. However, remove film where any two surfaces will be in permanent contact.

Verify that all dimensions on the plan are the same as the ones of the product.

Please leave this installation manual with the end user once the product has been installed.

**STEAM CABINS:** Please note when installing this product in conjunction with a steam unit ensure that the outlet is at a minimum height of 300mm from the top of the tray.

### **Product Aftercare:**

We recommend cleaning with a soft damp cloth and mild soap solution.


Do not use cream cleaners or cleaners containing bleach.

Do not scrub or scour.

Do not use abrasive cleaning agents.

Do not use solvent based cleaners.


## TOOLS REQUIRED (Not supplied)

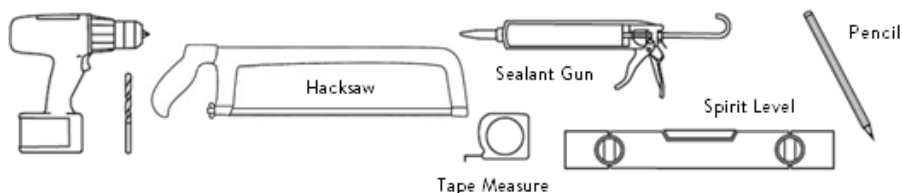


### Drill and drill bits

Required when securing the panel clips to the floor. Use an appropriate size bit to match the floor fixing chosen (floor screws and fixings may not be supplied).

### Direct to floor installation

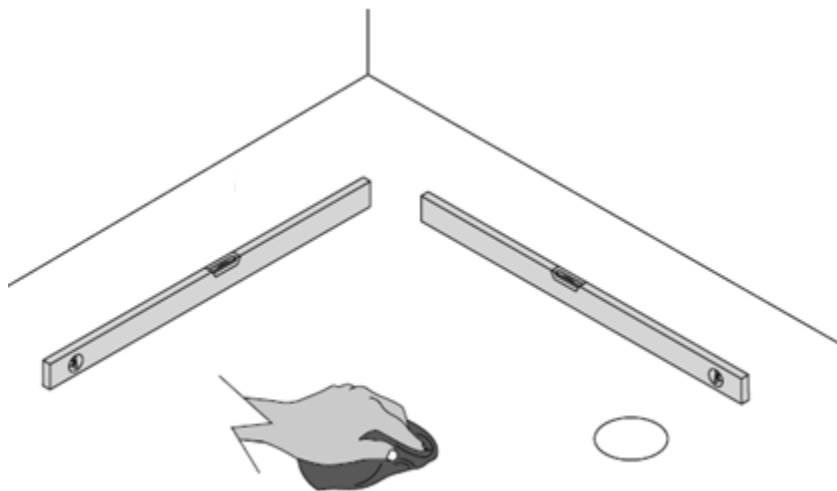


Ensure that the location of the shower tray is firm, level and clean. And mark the waste outlet.

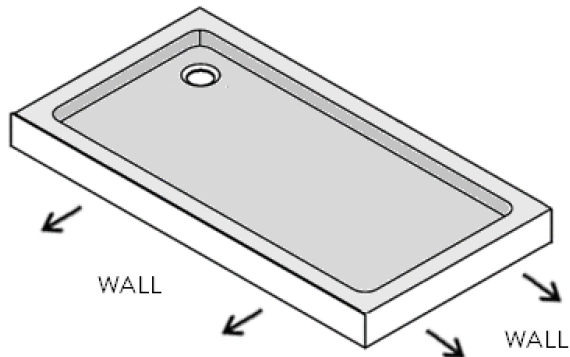


Remove the protective coating only from the immediate area's surrounding the waste and those sides of the tray which will be against a wall, Install the waste in the shower tray.

**Wooden floors:** Prepare a rigid base of 10mm marine ply wood, incorporating a suitable recess or cut-out for the waste and fix to floor ensuring that the finished base is level and free of debris.

**Concrete floors:** Ensure that the area level and that adequate access has been made to recess the waste into the floor and that connection can be made after tray installation.

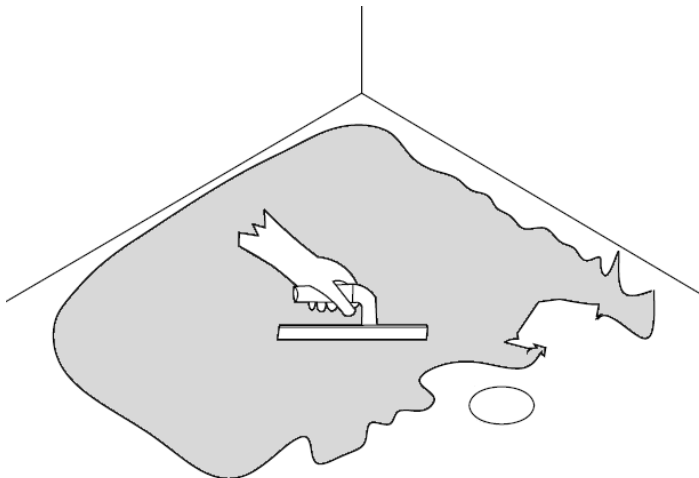


Cover the surface with a 15mm depth of weak cement mix (sand/cement ratio 5:1) or cement based floor tile adhesive.

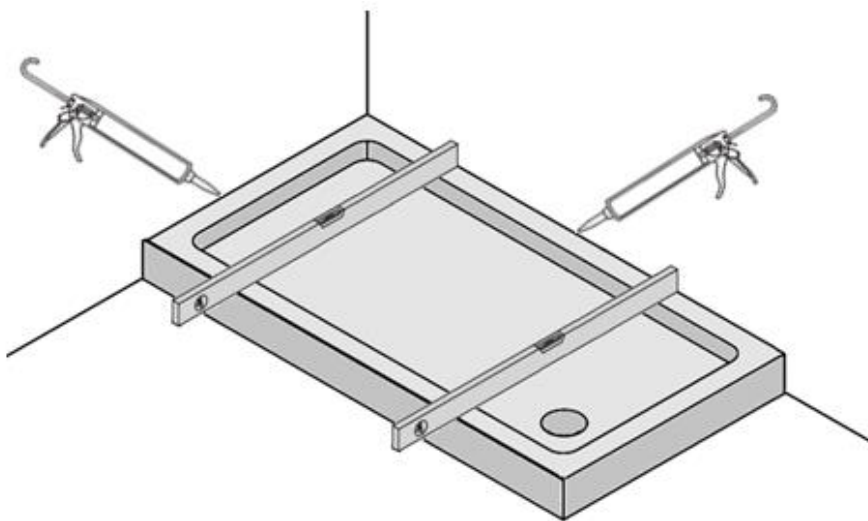


Place the shower tray with the fitted waste onto the cement bed and apply gentle pressure with the base of the hand to force the tray into position then finally level the tray and allow to set.

Seal the joints between tray and wall with an anti-fungi silicone sealant and allow to set, cover the tray with a soft dust sheet to protect whilst tiling.

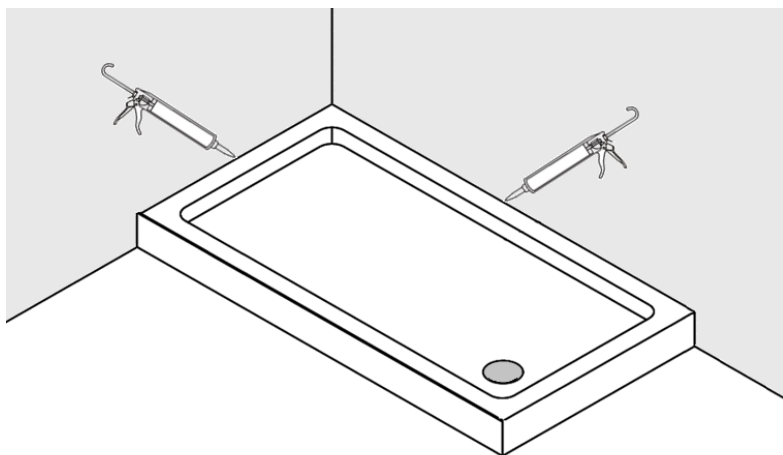


When the shower area is tiled, remove the remainder of the protective film, connect the waste pipe and check for leakage. Seal the tile-tray joints with an anti-fungi silicone sealant and allow to set.


## Raised off the floor installation

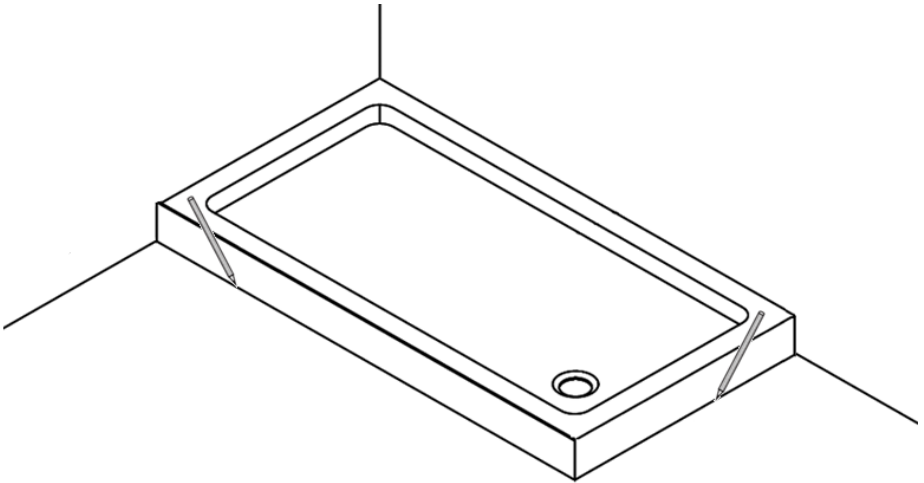


Lay the tray in position on the prepared floor and scribe a pencil line around the outside edge to mark the position of the tray. This will also form the guide for the floor clips.

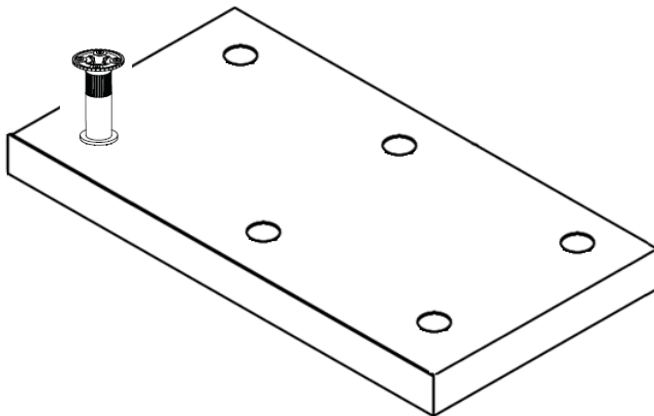

Turn the tray over, note the raised circles in the base of the tray these are the feet location points and the feet must be located into these points ONLY, these points since they have been strategically placed to eradicate any flexing within the shower tray.

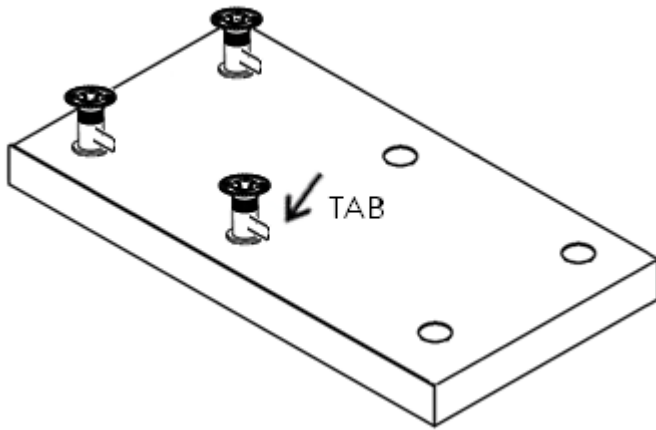


Wipe clean the raised circles and allow to dry, apply the self-adhesive cylindrical pads around the bayonet fitting. Insert into location points on underside of tray. Ensuring the panel fixing tabs are at 90° to the tray.

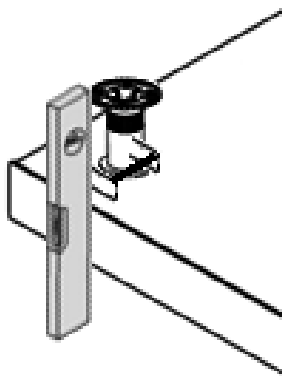


Once the panel clips have been fixed into position the assembly should comply. Fit the panel fixing rods using a level. Ensure the face of the panel holder is lined up with the outside edge of the tray as shown above.




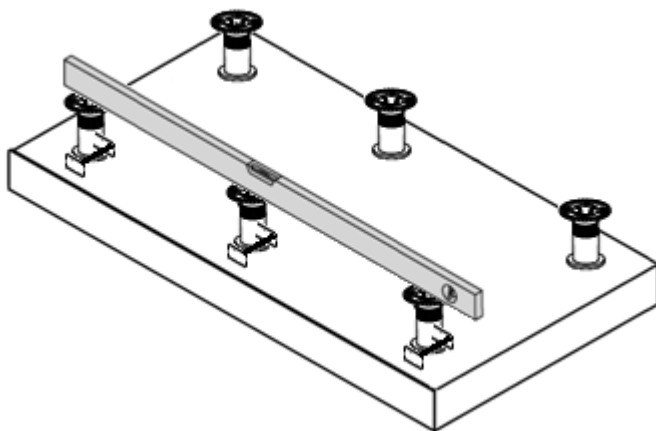


When all feet have been fitted, level them up so that the base of the foot measures 95mm from the underside edge of the outside wall of the tray.

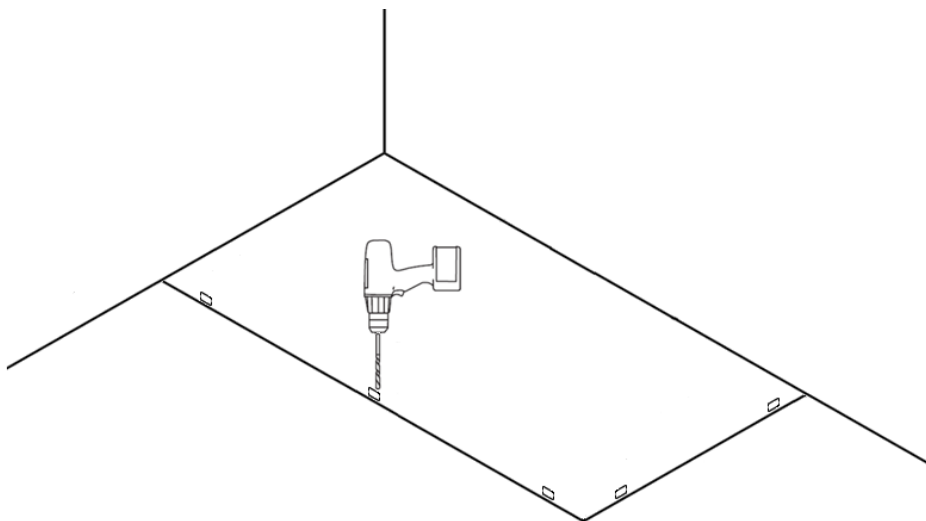


Screw down the floor fixing clips so that the edge of the clip is in line with the pencil line made in part 1. Use all the clips provided and spread them equi-distant along both open sides of the tray.

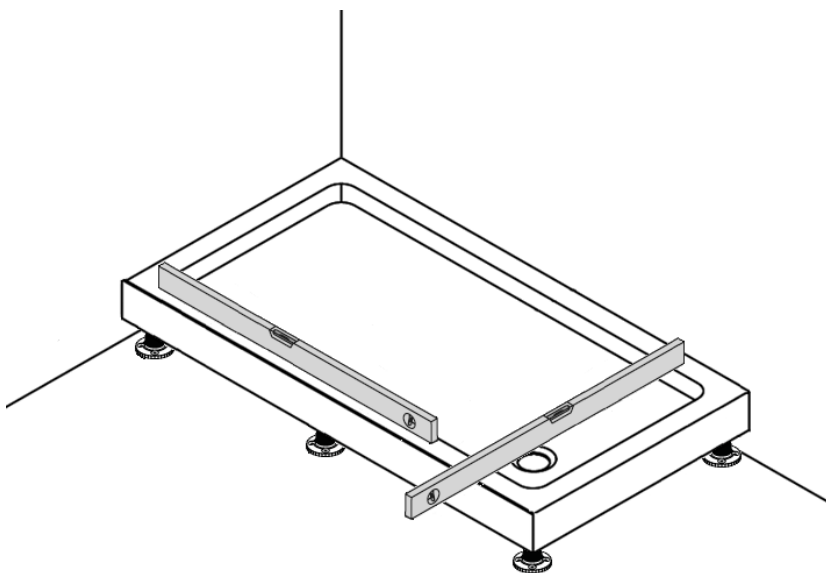

Turn the tray over and level both ways. When level fix the inaccessible legs with silicone sealer or a no-nails type of adhesive. Do not fix the central leg at this point. Screw the accessible legs to the floor then adjust the central leg so that it forms a stabilizing point. Connect the waste trap to the waste outlet pipe and test.

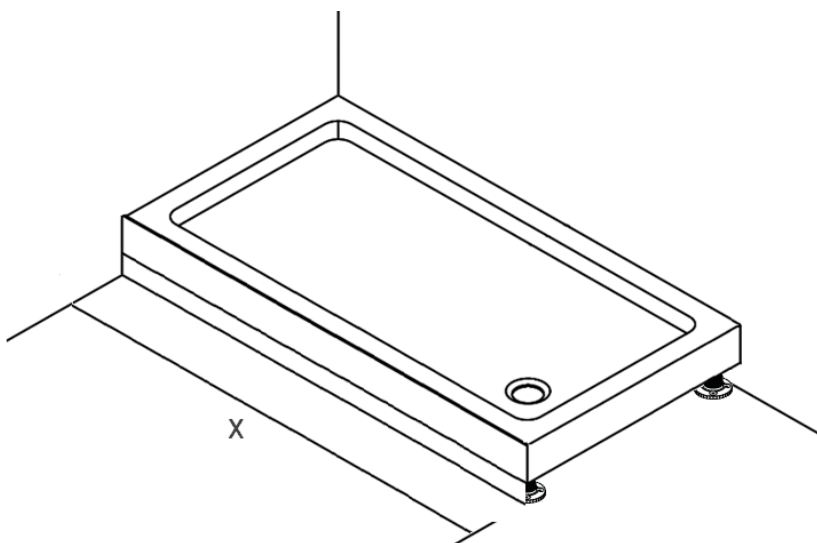


Mark the length of the panel (X) required for both edges and cut with junior or standard hacksaw. Please note on square and rectangle trays one length of panel has a return rebated end, ensure that this end is included in the length required. **Do not cut-off.**

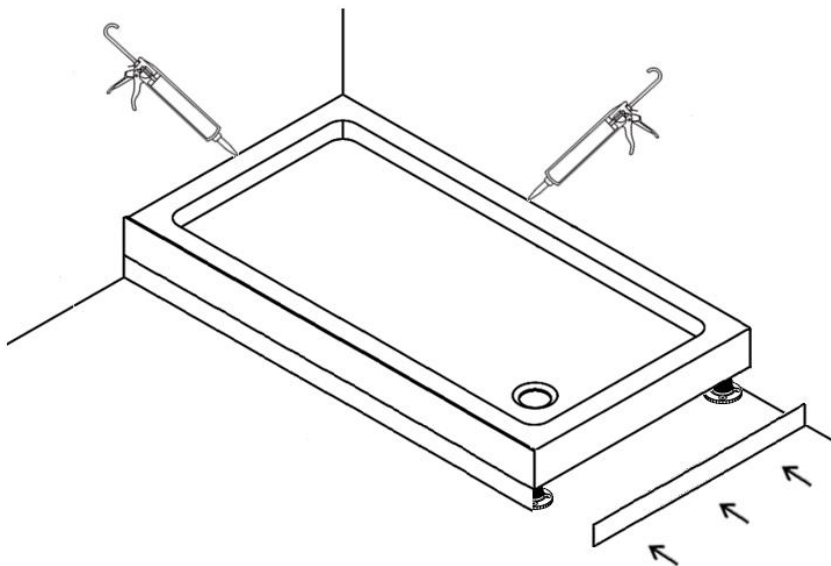

Fix the doubled sided adhesive pads provided to the face of the panel holders.

Fix the panels starting with the end panel or in case of squares the panel with the rebated end by pushing firmly under the floor clips, then on to the adhesive pads and fix the front panel.

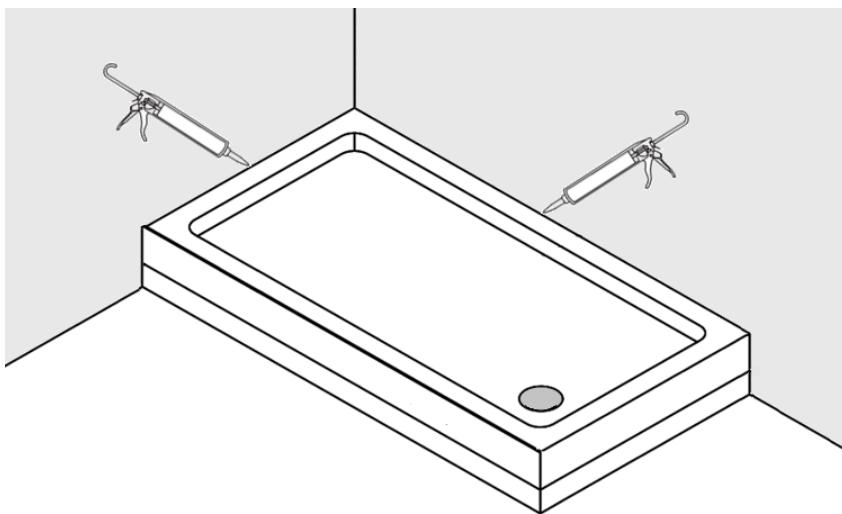

When the shower area is tiled, remove the remainder of the protective film. Seal the tile-tray joints with an anti-fungi silicone sealant and allow to set.

# BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

---

---

---

---

---

---

---

---

---

---

---

---

Oakwell Way, Birstall  
Leeds, England WF9 17LU

A member of  SANIPEXGROUP