


BAGNODESIGN



EXPERTLY CRAFTED BATHROOMS

General Installation Guide

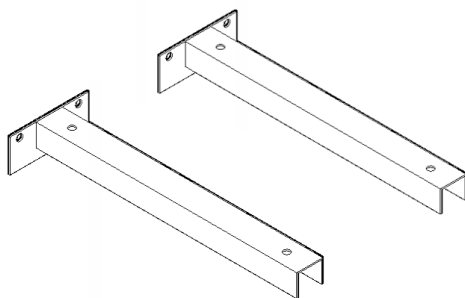


HARLEM COUNTERTOP SUPPORT


TOOLS REQUIRED (Not supplied)

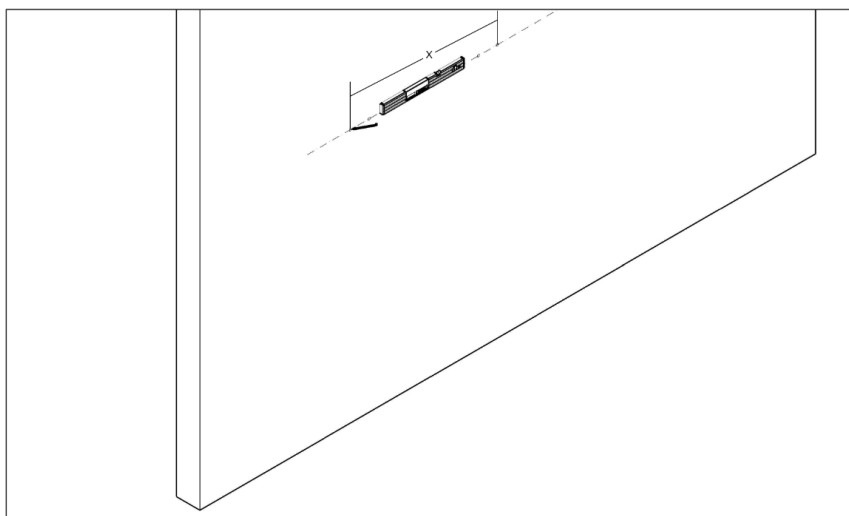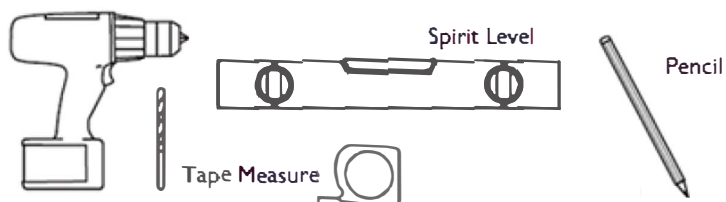

Once you decided on a suitable position for your Countertop, mark out the external distance on to the wall (X). Line the wall brackets up to the inside of the markings and mark out the drilling positions on the wall.

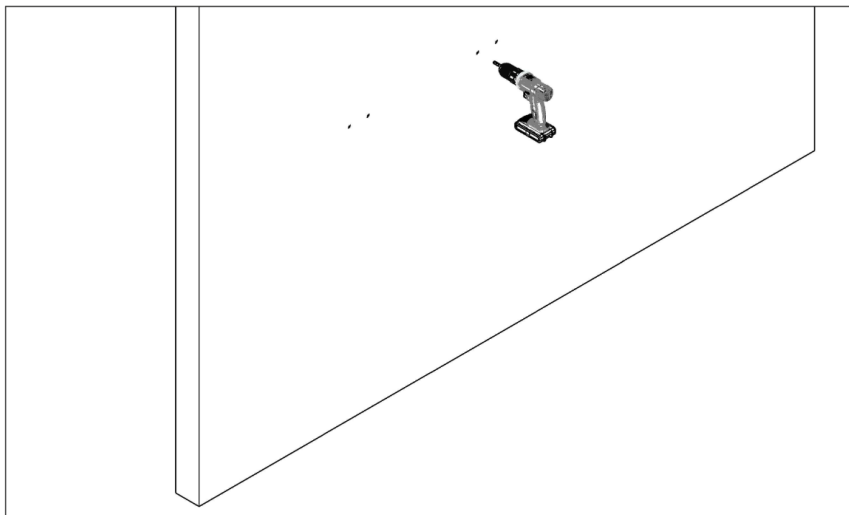

Drill the holes carefully on the marking points.

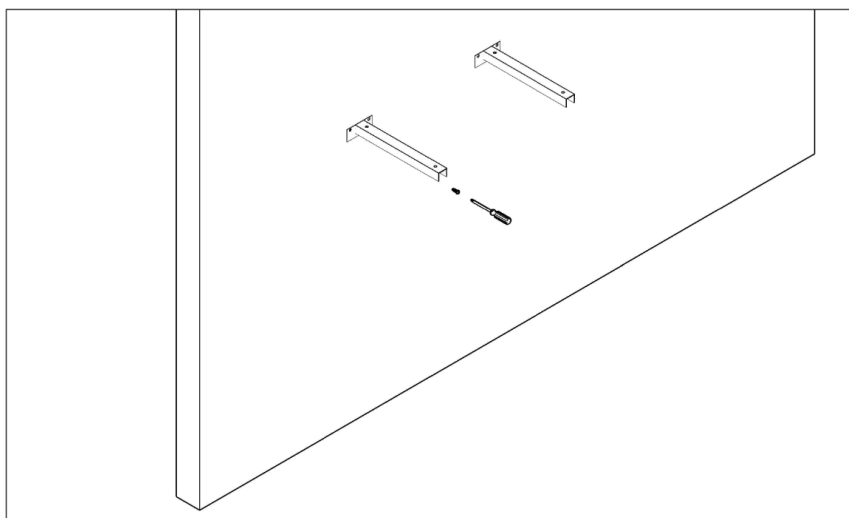

Attach the brackets on the wall using suitable fixings (Not supplied). Making sure the brackets are level and the distance between the outer edges of the brackets are the same as the measure (X) in the previous stage.

INSTALLATION COMPLETE!!!

BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

Oakwell Way, Birstall
Leeds, England WF9 17LU

A member of  SANIPEXGROUP