


BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

Installation Guide

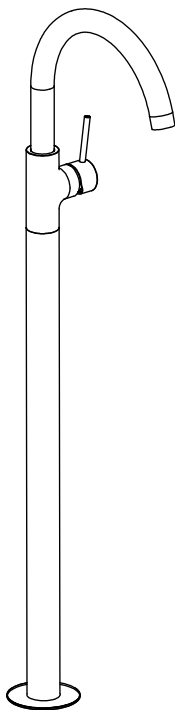

BDM-MLI-406-XX

M-LINE DIFFUSION FLOOR MOUNTED BASIN MIXER

A member of **SANIPEXGROUP**
www.sanipexgroup.com

IMPORTANT PLEASE READ

All products manufactured and supplied by AQUAECO are fit for purpose as long as they are installed, used correctly, cleaned and receive regular maintenance in accordance with these instructions...

Remove all packaging and check the product for damage or missing parts before commencing with the installation.

Any alterations made to this product and its components may infringe product certification, infringe water regulations and invalidate the guarantee. The Installation must comply with all local/national water supply authority regulations/bylaws and building and plumbing regulations, therefore we strongly recommend that your product be installed by a reputable qualified trade's person.

PRODUCT LIFECYCLE

"The product LiveCyclele is the collective stages that a product goes through from its conception and design through to its ultimate disposal."

DISPOSAL GUIDANCE

The best way to ensure your Product has a long life is to follow the Care and Maintenance guides set by the Manufacture after purchase. This document can be found at www.sanipexgroup.com.

The life cycle of the product is not in correlation to the product Guarantee; the standards the products are manufactured or certified to (e.g. CE & WRAS) can exceed past the Guarantee duration. After the life cycle of the product is deemed complete by the end-user please follow the below to dispose of the items correctly...

Mixers (Taps):

If the mixers are no longer accepted due to mechanical use or aesthetic style, these can be disposed of at a registered Local Authority waste recycling center where the individual components can be sorted.


CLEANING CARE GUIDE

Only use a mild soap and water for cleaning.
Rinse with water to remove the mild soap solution.
We recommend the product is dried using a soft cloth after every use.


Never use any abrasive or strong cleaning products containing, bleaches, acids (hydrochloric, formic, phosphorus, chlorine or acetic), strong detergents, limescale remover, alcohol or dyes etc.

Never use abrasive cleaning pads, wire wool or microfibre cloths.
Never use cleaning equipment that may have been pre-used and contaminated with the above substances.


Never apply the cleaning product directly onto the finished surface.

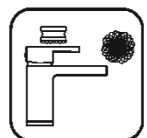


1 Preparation before installation

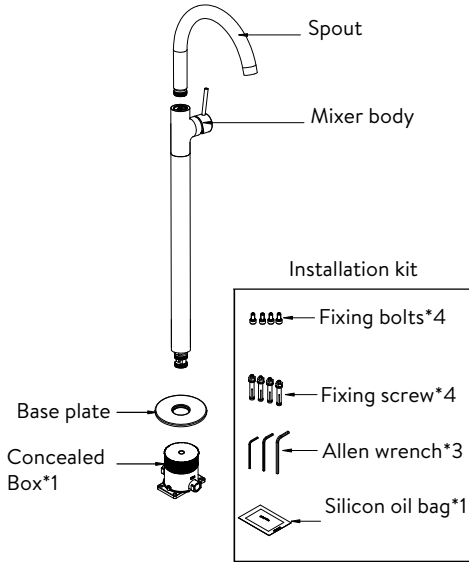


2 Make a slot underground size must over 120 x 130 mm, depth 70-100mm including the upper brick.

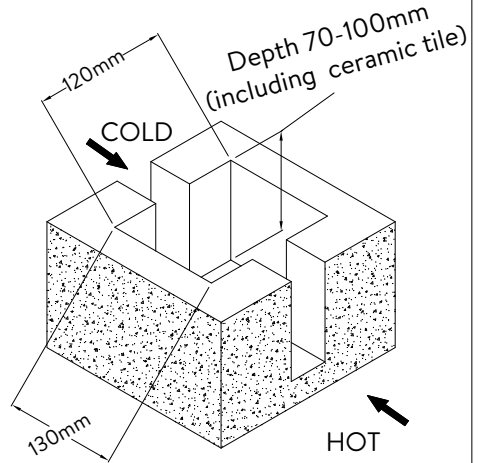

3 Connect the concealed valve with plumbing, open the valve and get the leakage test done properly.

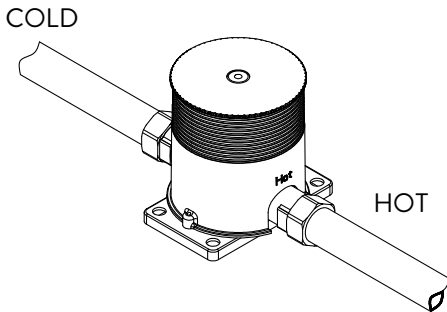


4 Drill installation holes in the bottom ($\varnothing 8\text{mm} \times 4$), then install the fixing bolts into the holes.

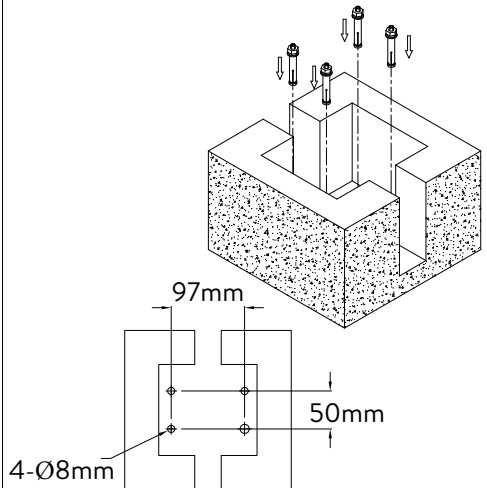


- 5 Put in the concealed box and fasten it with M4 screws, ensure it is in horizontal measuring by the level.


Make sure the bubble is in the middle position of lever to ensure the valve installed in horizontal.

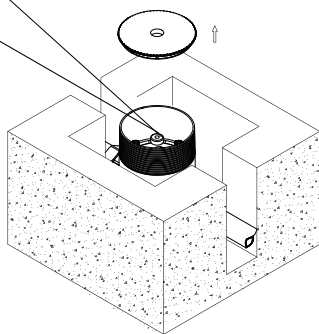


- 6 Decorating with upper bricks.

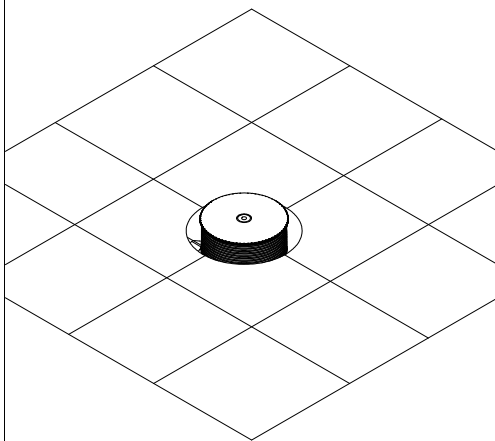

- 7 Take off the upper cover, loosen the fixing bolts M5*4. Then take off the 4 pcs O-rings, bottom flange and testing plug by steps.

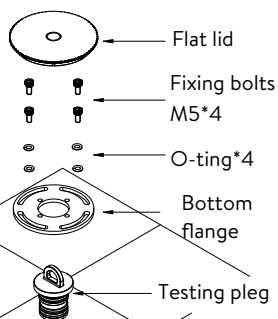


- 8 Cut the plastic socket to ensure it is in the same horizontal level as the brick face.

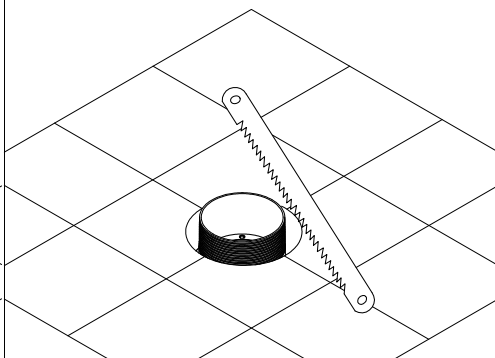


9

Apply some silicon oil onto the bottom of the spout, install the spout with the mixer body, fasten the spout. Put the base plate through the middle hole of the mixer body, then using fixing bolts to install the plate with the bottom flange.

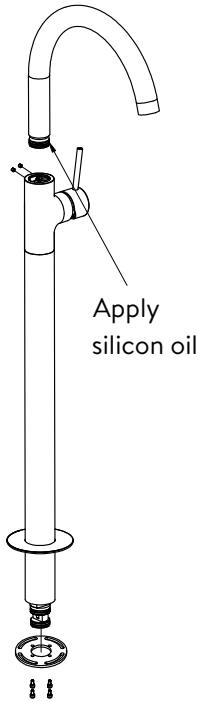


10

Install the upper mixer body kit with the valve beneath, and fasten it the base plate with fixing bolts O-ring.

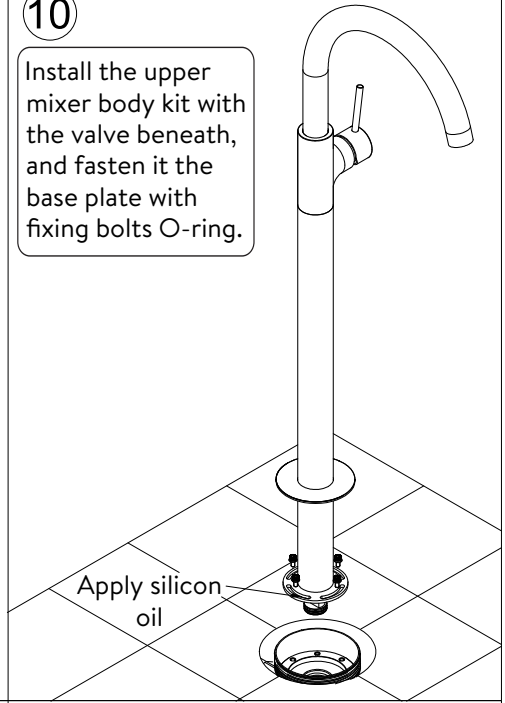

11

Installation Finished

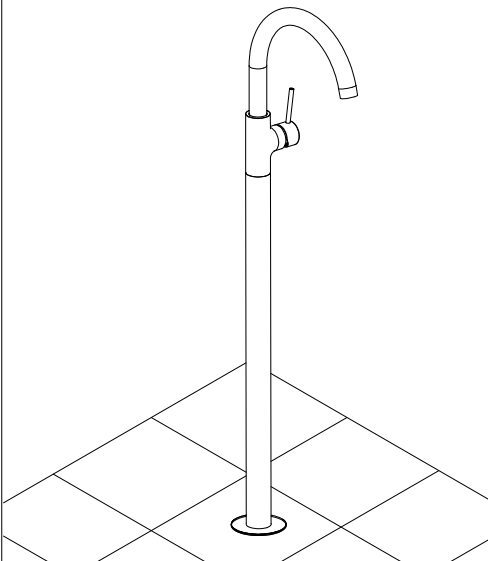

BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS
