

Installation

BAGNODESIGN
EXPERTLY CRAFTED BATHROOMS

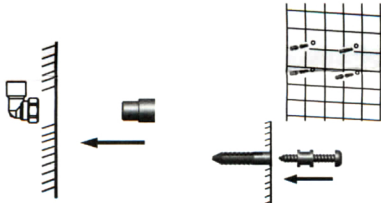


Fig. 1

Fig. 1a

Step 1 - Upon installation ½" Female connection supply pipe to desired wall location (Fig1). Refer to the installation dimension diagram and accordingly drill four holes in the desired fixing wall. (Taking care not to drill into pre-installed pipework). Insert wall plug into the drill hole (Fig 1 a). Using the provided screws secure the locaion lug. (Supplied wall plugs are intended for concrete/block work wall installation onlt).

Step 2 - Using the provided connector ensure that the female connector is located level with any installed wall finishes


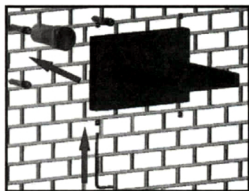


Fig. 2

Step 3 - Using the Allen key insert the four allen key bolts (Fig 2) ready to secure the spout to the locating lugs in the wall. The ½" connector supplied must be securely screwed to the water supply connection ready to receive the push fit connection on the back of the spout. Once connected fix the corner screws to anchor the spout to the wall.

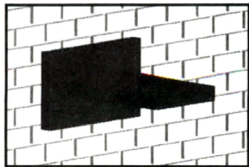

Step 4 - Once installed ensure that the spout is tight and secure to the wall, upon which the water can be switched on ensure there are no leaks. (Prior to install all pipes should be flushed to ensure any debris or contamination is removed from the system).

Product Aftercare:

We recommend cleaning with a soft damp cloth and mild soap solution.

Do not use cream cleaners or cleaners containing bleach.

Do not scrub or scour.

Do not use abrasive cleaning agents.

Do not use solvent based cleaners.

We recommend the product is dried using a soft cloth after every use.