


BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

Installation Guide

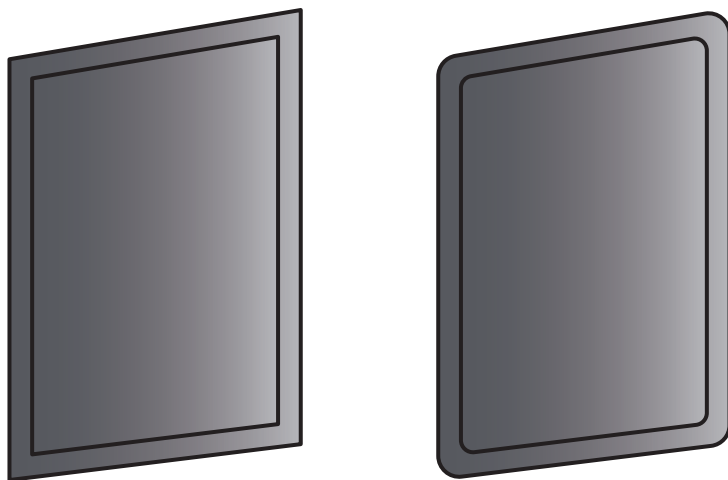

MIRRORS
NON-ILLUMINATED MIRRORS

A member of **SANIPEXGROUP**
www.sanipexgroup.com

IMPORTANT PLEASE READ

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and invalidate the guarantee.

The Installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing Regulations.

We strongly recommend that your product be installed by a reputable qualified trade's person.

General Installation:

To the Installer, please read and follow this instruction carefully, as the guarantee is only valid if the product is installed as directed.

Don't rush, read the instructions first and run through them before you begin. Keep fittings together to avoid loss. Do not over tighten screws or bolts.

If the product is covered with polyethylene protective film, do not remove until installation is complete to grant maximum protection. However, remove film where any two surfaces will be in permanent contact.

Please leave this installation manual with the end user once the product has been installed.

Product Aftercare:


We recommend cleaning with a soft damp cloth and mild soap solution. Do not use cream cleaners or cleaners containing bleach.

Do not scrub or scour.


Do not use abrasive cleaning agents.

Do not use solvent based cleaners.


Parts list

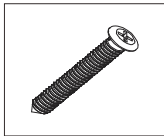

M4 screw

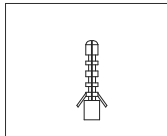


D6 expansion screw

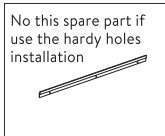


Aluminum hanging bar


Installation tools (as shown below)

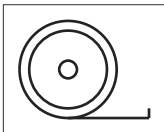


Flexible rule

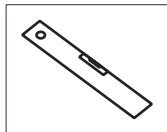


Leveling instrument

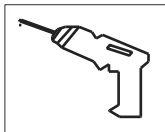

Churn drill

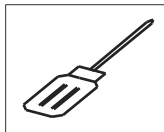

Screwdriver

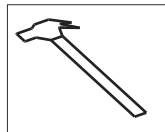

Hammer

A/Hardy Holes Installation Manual (Instruction for bathroom mirror)

<p>a(landscape installation method)</p> <p>b(portrait installation method)</p> <p>Back of the mirror</p> <p>Please choose portrait or landscape installation method first</p>	<p>To use the measure tape to measure the distance between the two holes.</p>
<p>Horizontal the leveling instrument Mark the distance between two holes on the wall with a pen</p>	<p>To use the drill to have the holes</p>
<p>(Apply to the solid wall) Put the expansion plug into the wall hole, put the screws into the plugs. To use the screwdriver to make the screw tightly.</p>	<p>Hang up the mirror, shake left and right to see if it is stable.</p>

