
BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

General Installation Guide

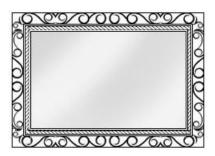

MIRRORS
standard / non-illuminated mirrors

IMPORTANT PLEASE READ

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and invalidate the guarantee.

The Installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing Regulations.

We strongly recommend that your product be installed by a reputable qualified trade's person.

General Installation:

To the Installer, please read and follow this instruction carefully, as the guarantee is only valid if the product is installed as directed.

Don't rush, read the instructions first and run through them before you begin. Keep fittings together to avoid loss. Do not over tighten screws or bolts.

If the product is covered with polyethylene protective film, do not remove until installation is complete to grant maximum protection. However, remove film where any two surfaces will be in permanent contact.

Please leave this installation manual with the end user once the product has been installed.

Product Aftercare:


We recommend cleaning with a soft damp cloth and mild soap solution. Do not use cream cleaners or cleaners containing bleach.

Do not scrub or scour.

Do not use abrasive cleaning agents.


Do not use solvent based cleaners.

TOOLS REQUIRED (Not supplied)

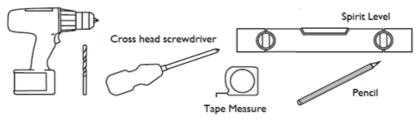


Drill and drill bits


Required when securing the mirror to a wall. Use an appropriate size bit to match the wall fixing chosen (wall screws and fixings may not be supplied).

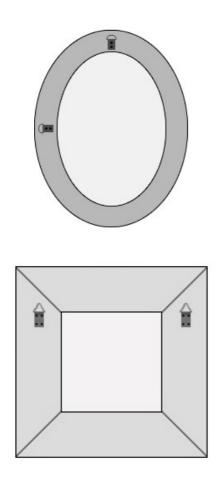

On the reverse side of the mirror check how many fixing points are required to hang the mirror, also check the correct orientation.

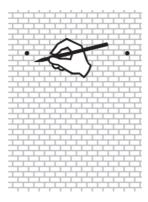


Measure the distance between the brackets on the rear-side of the mirror, Calculate this distance into the final position of where the mirror will be hung, and mark the 2 points on the wall.

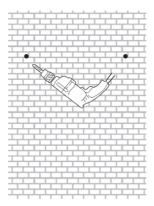


Drill the two marks to the depth of plug that will be used.



Insert the plugs into the wall, if slightly tight, tap in with a hammer.

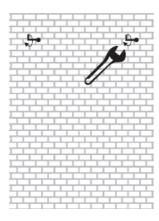

Screw the screws into the plugs, take a measurement from the back-edge of the mirror to the bracket, this will ensure that the screw is protruding from the wall at the correct measurement for the bracket to catch.

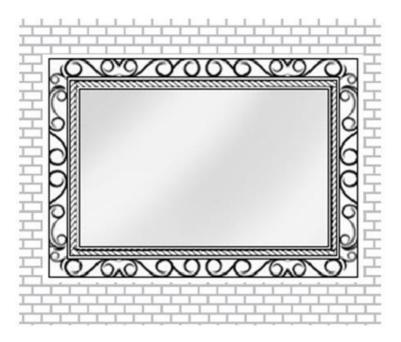

Hook the mirror over the mounting brackets and push down to secure, Installation is now complete!!!

BAGNODESIGN

EXPERILY CRAFTED BATHROOMS

Oakwell Way, Birstall Leeds, England WF9 I7LU

A member of SANIPEXGROUP