


BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

Installation Guide

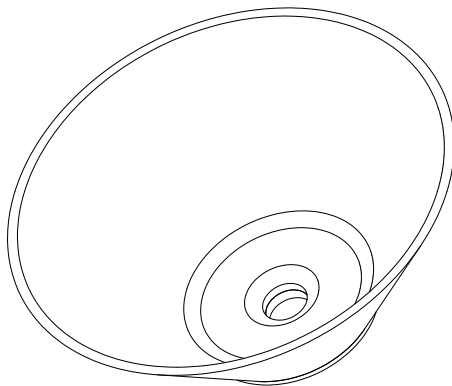

BDS-BIS-701-GR

BRISTOL COUNTERTOP WASH BASIN DIAMETER 450X180 MM

A member of **SANIPEXGROUP**
www.sanipexgroup.com

IMPORTANT PLEASE READ

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and invalidate the guarantee.

The Installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing Regulations.

We strongly recommend that your product be installed by a reputable qualified trade's person.

General Installation:

To the installer: Please read and follow this instruction carefully, as the guarantee is only valid if the product is installed as directed.

The installation of this Basin requires preferred previous installation of suitably constructed countertop. Please ensure that countertop is suitable for the weight allowance of the basin and its components.

Don't rush, read the instructions first and run through them before you begin. Keep fittings together to avoid loss. Do not over tighten screws or bolts.

If the unit is covered with polyethylene protective film, do not remove until installation is complete to grant maximum protection. However, remove film where any two surfaces will be in permanent contact.

Verify that all dimensions on the plan are the same as the ones of the product.

Please leave this installation manual with the end user once the product has been installed.

Product Aftercare:

We recommend cleaning with a soft damp cloth and mild soap solution.

Do not use cream cleaners or cleaners containing bleach.

Do not scrub or scour.


Do not use abrasive cleaning agents.

Do not use solvent based cleaners.

This installation guide is for reference only. In case there is a discrepancy between that of the instructions and that of the actual product, the latter should be taken as standard. The rights of modification are reserved.


COUNTER TOP BASIN/ VESSEL FITTING INSTRUCTIONS

1

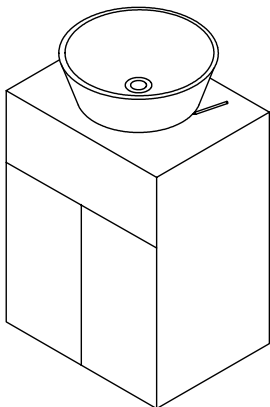


PLACE THE BASIN ON THE UNIT WORK TOP, MARK AROUND THE BASE, POSITION OF THE WASTE AND ANY TAP HOLES IF REQUIRED.

2

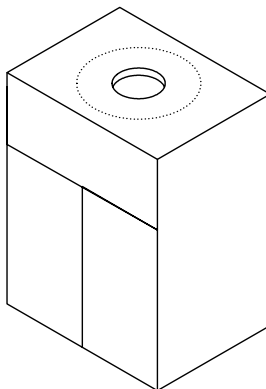


CUT OUT FOR THE WASTE ALLOWING FOR ACCESS (APPROX 120 mm DIA) MAKING SURE THE CUT OUT IS NOT VISIBLE WHEN THE BASIN IS IN PLACE. ALSO CUT OUT FOR ANY TAPS AND CONNECTIONS IF REQUIRED. ENSURE ALL CUT EDGES ARE SEALED AGAINST WATER INGRESS.

3

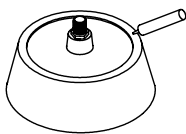

FIT THE WASTE MAKING SURE THAT THERE IS A GOOD SEAL, FIT ANY BRASSWARE AND CONNECTIONS IF REQUIRED AT THIS STAGE. APPLY A BEAD OF SILICONE AROUND THE BASE OF THE BASIN THAT WILL BE IN CONTACT WITH THE WORK TOP.

4

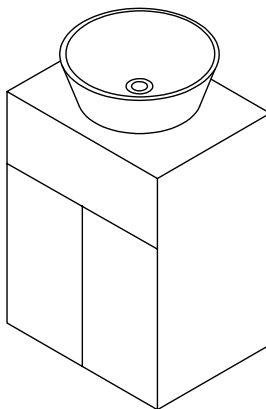

PLACE THE BASIN INTO POSITION ON THE WORK SURFACE AND PRESS DOWN TO MAKE A SEAL. CLEAN OFF ANY EXCESS SEALANT AND FINISH ACCORDINGLY. ALLOW TO SET FOLLOWING THE SEALANT MANUFACTURERS INSTRUCTIONS. WHEN FULLY SET MAKE THE CONNECTIONS FOR ALL THE SERVICES.

