


BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

Installation Guide

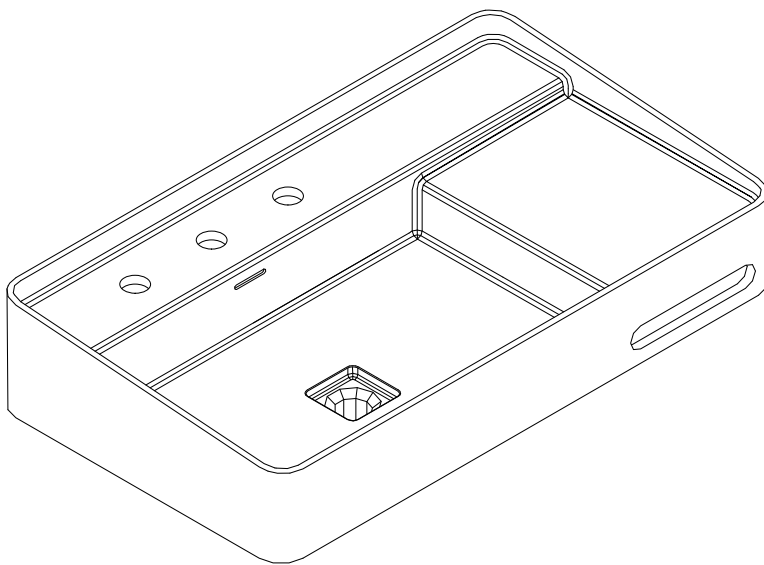

BDS-BIS-WMBASIN
BRISTOL WALL MOUNTED WASH BASIN

A member of **SANIPEXGROUP**
www.sanipexgroup.com

IMPORTANT PLEASE READ

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and invalidate the guarantee.

The Installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing Regulations.

We strongly recommend that your product be installed by a reputable qualified trade's person.

General Installation:

Please note this product can require 2 or more persons to lift and manoeuvre into position.

To the installer: Please read and follow this instruction carefully, as the guarantee is only valid if the product is installed as directed.

Don't rush, read the instructions first and run through them before you begin. Keep fittings together to avoid loss. Do not over tighten screws or bolts.

If the unit is covered with polyethylene protective film, do not remove until installation is complete to grant maximum protection. However, remove film where any two surfaces will be in permanent contact.

Verify that all dimensions on the plan are the same as the ones of the product.

Please leave this installation manual with the end user once the product has been installed.

Product Aftercare:


We recommend cleaning with a soft damp cloth and mild soap solution.

Do not use cream cleaners or cleaners containing bleach.


Do not scrub or scour.

Do not use abrasive cleaning agents.


Do not use solvent based cleaners.

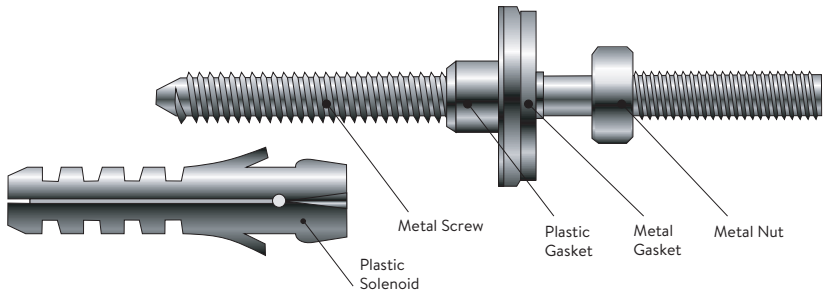


Note: These fixings are suitable for solid walls only. Plasterboard or stud walls may require specialist fixings(not supplied). Caution: care should be taken when drilling walls and floors to avoid any sunken wires or pipes

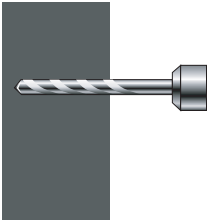


1. Drill two holes in the required position on the wall using a 14mm masonry drill bit, to a depth of 75mm

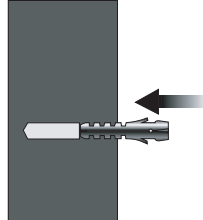


2. Push a wall plug into each hole

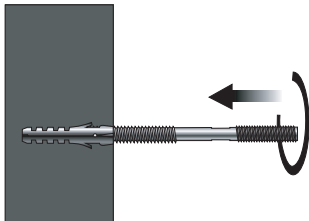

3. Screw a fixing bolt into each fixing plug using a 8 mm spanner until the spanner contacts the wall

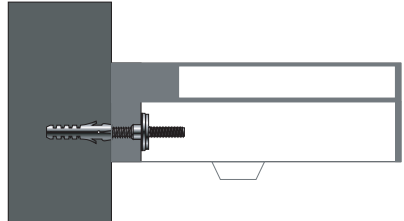

4. Place the basin in position against the wall, locating the fixing bolts through the holes in the rear of the basin. Push a plastic washer, followed by a metal washer, onto each fixing bolt

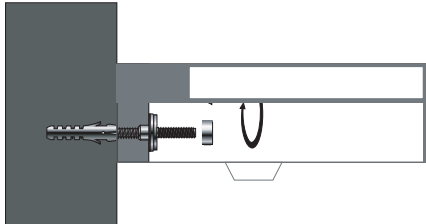

5. Screw a metal nut onto each fixing bolt to secure the basin. Caution: Do not over-tighten, as this may damage the

