


BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

General Installation Guide

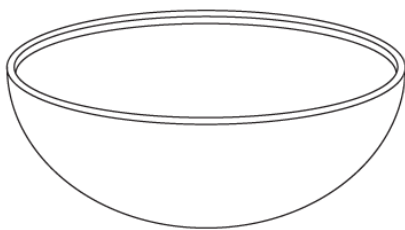

GLASS COUNTERTOP WASH BASIN

NOTE: for illustrative purposes only, a Ø450mm wash basin is shown, please follow the same procedure to install the other products. dependent on model, mounting collar may not be supplied.

A member of  SANIPEXGROUP

IMPORTANT PLEASE READ

Remove all packaging and check the product for missing parts or damage before starting installation.

We strongly recommend that your product be installed by a reputable qualified trade's person.

General Installation:

To the installer: Please read and follow this instruction carefully, as the guarantee is only valid if the product is installed as directed.

The installation of this Basin requires the previous installation of suitably constructed countertop. Please ensure that countertop/cabinet is suitable for the weight allowance of the basin and its components.

The wash basin features polished glass interior and exterior, or polished glass interior and textured painted exterior.

Verify that all dimensions on the plan are the same as the ones of the product.

Product Aftercare:

We recommend cleaning with a soft damp cloth and mild soap solution.

Do not use cream cleaners or cleaners containing bleach.

Do not scrub or scour.

Do not use abrasive cleaning agents.

Do not use solvent based cleaners.


This installation guide is for reference only. In case there is a discrepancy between that of the instructions and that of the actual product, the latter should be taken as standard. The rights of modification are reserved.

TOOLS REQUIRED (Not supplied)




Drill, drill bits & holesaw

Required when drilling a wooden countertop surface, for Marble/Stone countertops please use specialized cutting company.

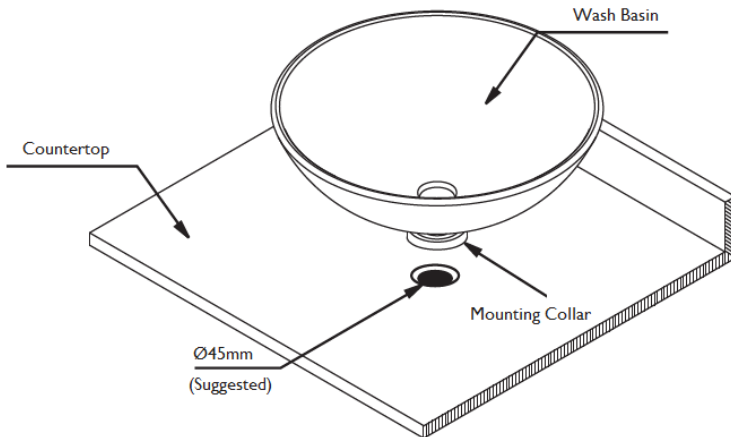

Place the wash basin on the mounting collar and then onto the countertop, take notice of the spout length of the mixer so that the distance to the waste hole is correct. Mark around the inside perimeter of the mounting collar. Drill the waste hole with correctly sized holesaw.

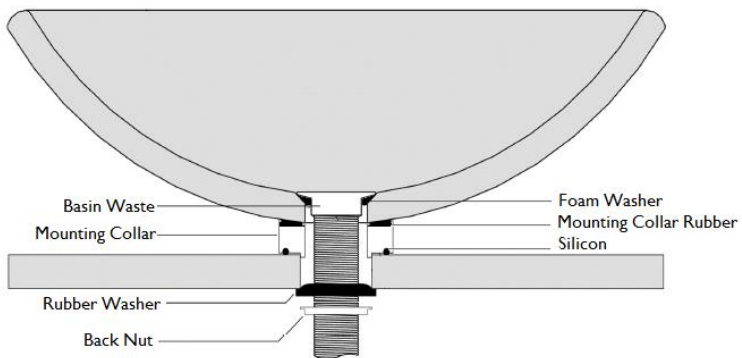

- Place the mounting collar over the drilled waste hole in the countertop.
- Place the mounting collar rubber onto the mounting collar facing upward.
- Position the glass wash basin onto the mounting collar.
- Insert the basin waste into the waste hole and tighten from underneath.

If required, a small bead of silicon can be placed between the collar and countertop

Install the bottle trap onto the basin waste outlet and test.

INSTALLATION COMPLETE!

BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

Oakwell Way, Birstall
Leeds, England WF9 17LU

A member of  SANIPEXGROUP