





Not included / Non incluso / Non Inklus / Nie zawarty / No incluido / Nao incluido

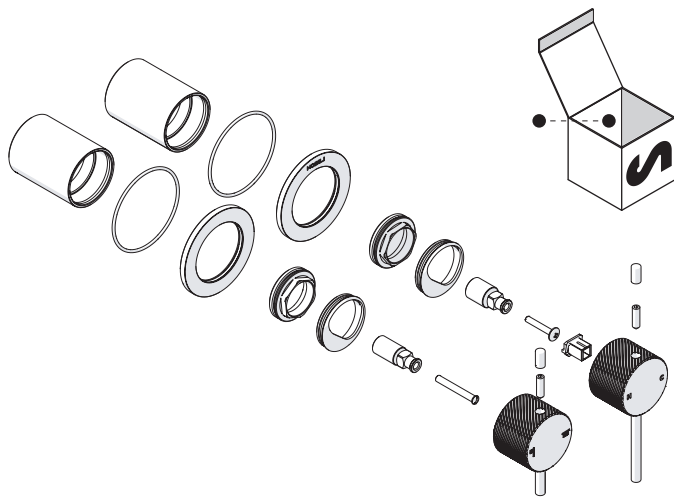


1

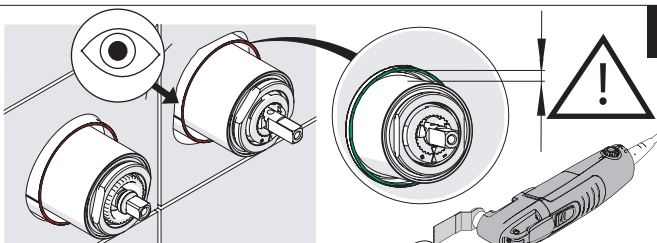

Tagliare protezione 1mm dalla piastrella  
Cut protection 1mm from the tile

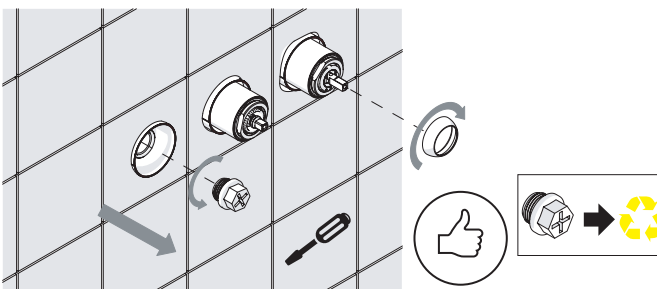

2

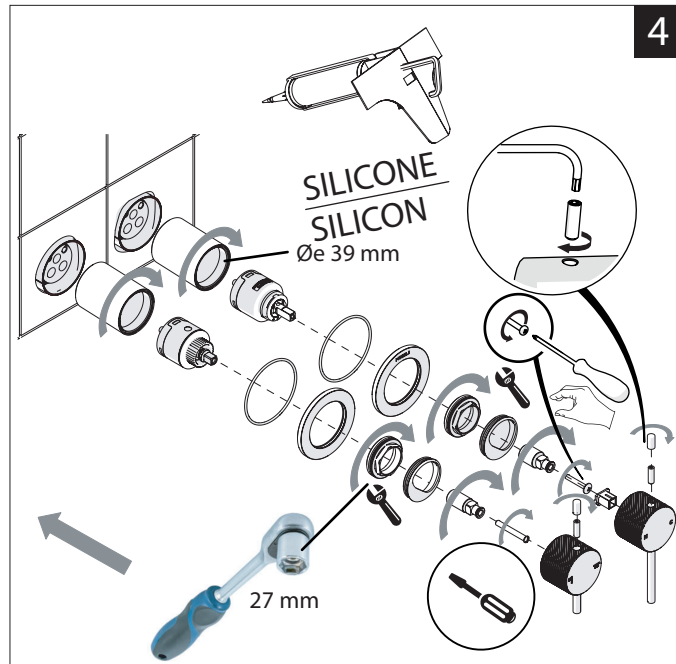

SILICONE  
SILICON  
Øe 39 mm

27 mm



4




REF.  
MANUAL  
WE81200/T

CARTUCCIA DEVIATRICE  
DIVERTER CARTRIDGE

CARTUCCIA  
CARTRIDGE

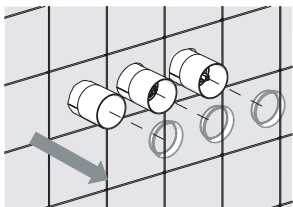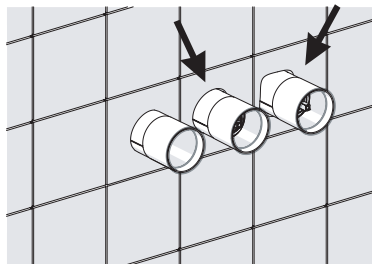

3

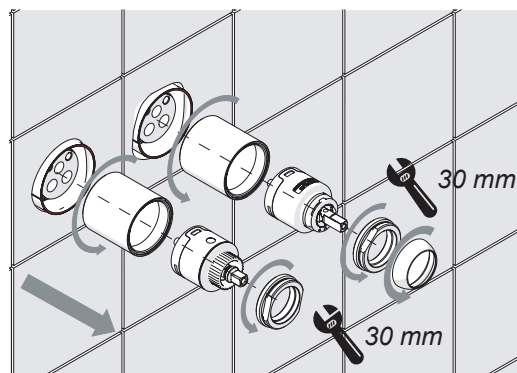


30 mm


30 mm



METTERE COLLA FRENANTE SUL FILETTO  
PUT BRAKING GLUE ON THE THREAD







5

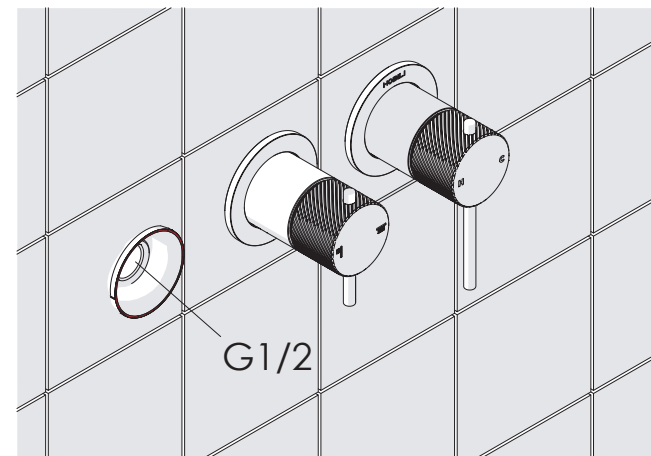

G1/2



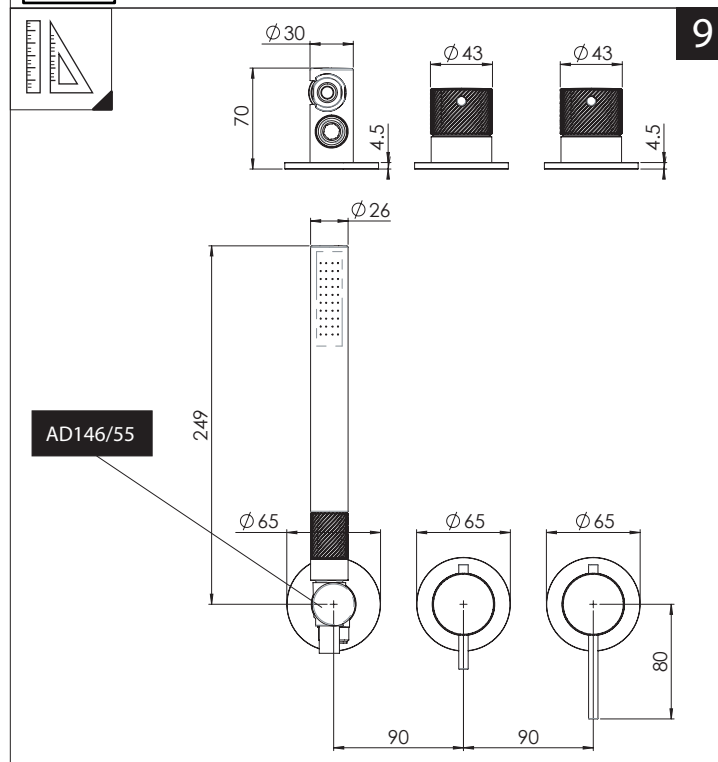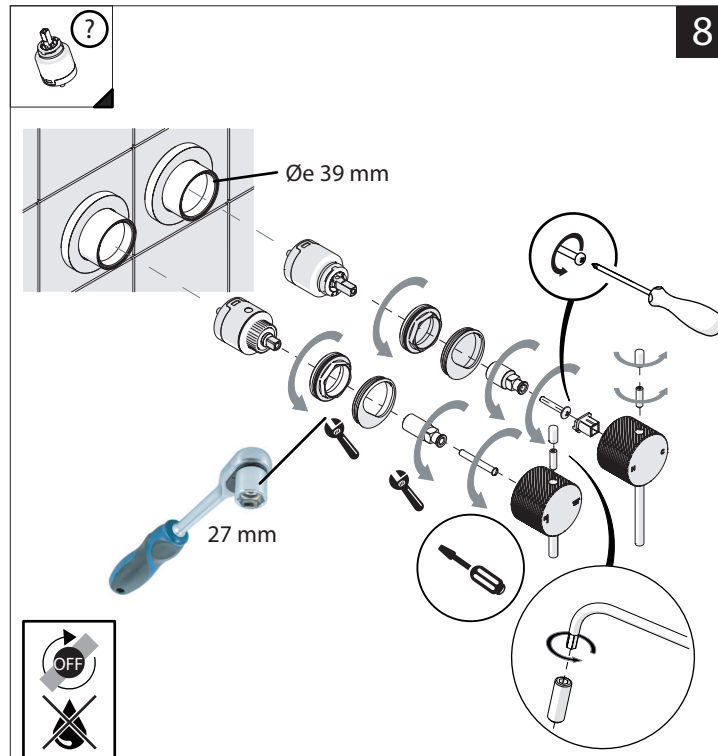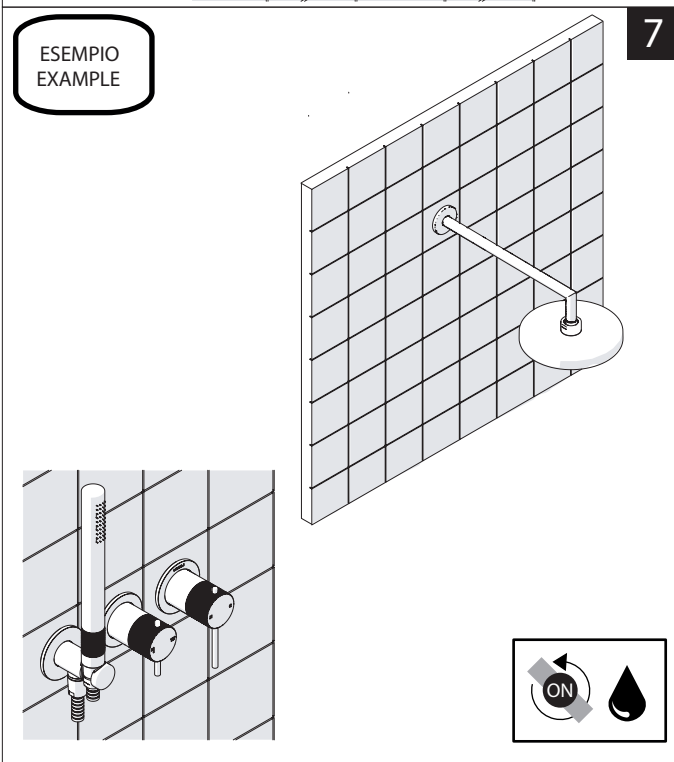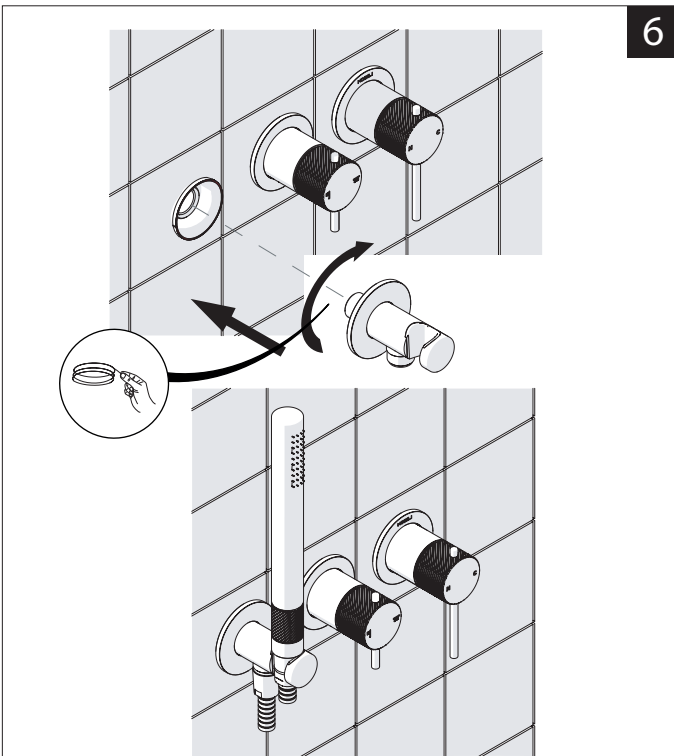

# NOBILI

RESPIRO WE00100/91RS

ISTRUZIONE RIFERITA AL CORPO INCASSO WE81200/T  
INSTRUCTON REFERRING TO BODY *Design Jese Medina-Suarez*

NOTE: IISTRWE00100/91RS#---STD + IISTRWE00110/91RS#---STD  
SONO INSIEME NELLA SCATOLA  
ARE TOGETHER IN THE BOX

www.nobili.it

**PRIMA DI INIZIARE / BEFORE STARTING**

P	bar	0,5 MIN	MAX 10	5	T	°C	MAX 80	65	45
---	-----	---------	--------	---	---	----	--------	----	----

**PULIZIA / CLEANING**

ACQUA WATER	SI CROMO YES CHROME NO VERNICIATO NO PAINTED NO PVD	100% COTONE COTTON	SPUGNA SPONGE	DETERGENTI DETERGENT
PER VERNICIATO - PVD FOR PAINTED ACQUA E SAPONE WATER AND SOAP	ASCIUGARE BENE SEMPRE ALWAYS DRY WELL			

IISTRWE00100/91RS#---STD REV0.11/2025