

RICHMOND


INSTALLATION INSTRUCTION - HINGE

- Butt hinges for interior doors
- Spring hinges for interior doors
- Double action spring hinges for interior doors
- Concealed mortise hinges


The section frame and wing parts contains individual components of door hinges, where only the combination thereof make up a complete door hinge. 2-piece and 3-piece frame and wing parts can be combined into door hinges for steel and for wooden frames. Butt hinges are screwed onto the frame or door panel which have been mortised, or screwed to the door construction.

Installation situation


The installation situation of a door includes the door rebate, the frame material, the type of frame as well as the opening direction of the door. The difference between flush and rebated doors is explained in the following illustrations.

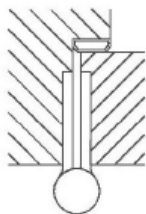

Butt hinge

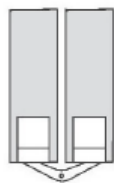


Concealed mortise hinge

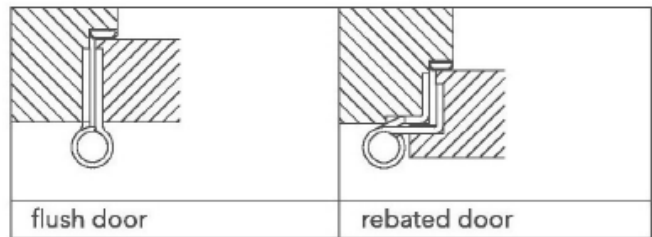


flush door

rebated door


HOLE OPTIONS

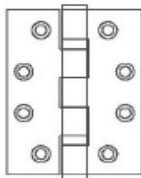


Template

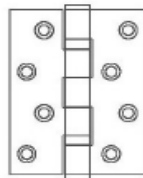

Zig-Zag
(Right)

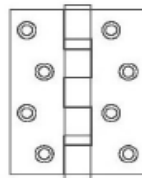

Zig-Zag
(Left)

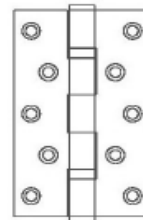

Zig-Zag
(Symmetrical)

STEP BY STEP ILLUSTRATIONS

