

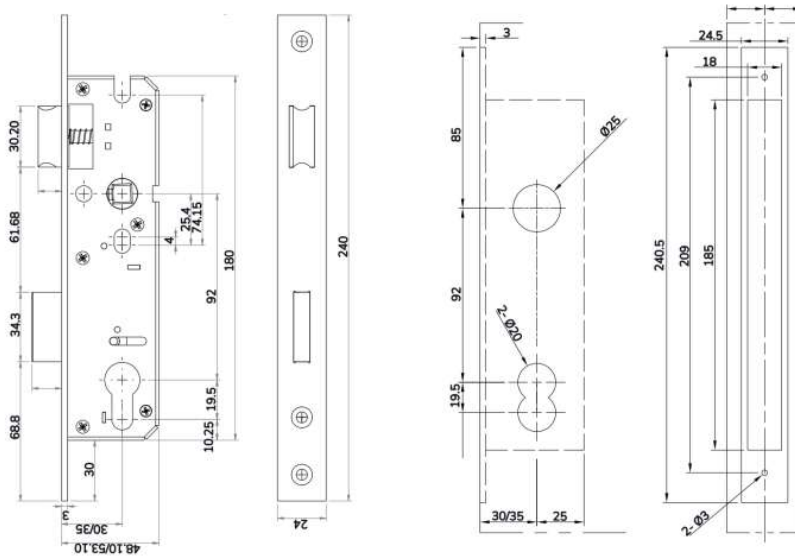


Installation Instructions

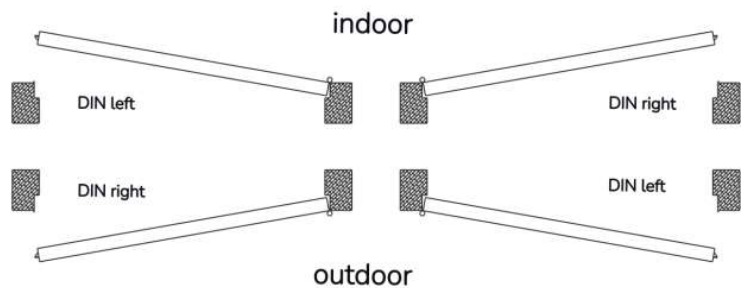

Narrow sashlock

DOOR HANDING

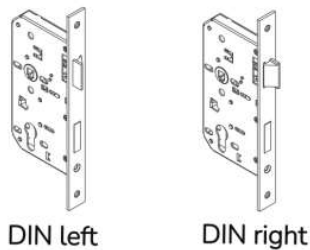


HANDLING CHANGE METHOD

1. Prepare a 2.5 Allen Key
2. Press the latch, use Allen Key to unfasten the screw behind the lock case 5-6 turns until the latch out


IMPORTANT: Do not remove the screw when changing handing

3. Rotate the latch to adjust handing
4. Press the latch, fasten the screw properly
($F > 4\text{N.m}$, the screw must be 100% tighten after change handing)

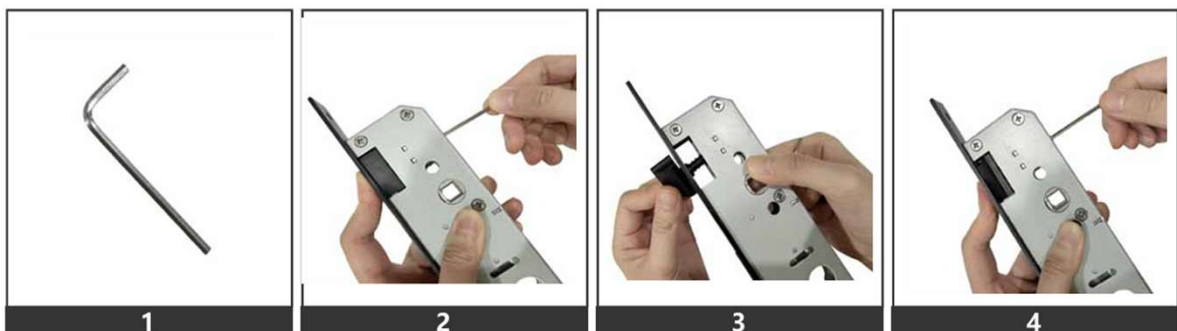


MORTICE LOCK

- ① If required, use a screwdriver at the base of the mortice to redirect latch orientation to suit door opening direction.

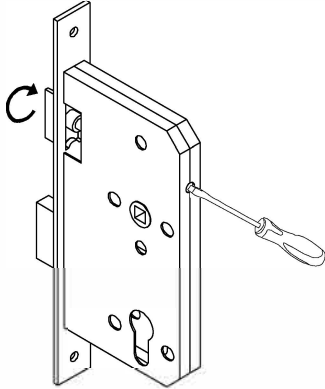


- ② Check in door according to door cutting Guide & fix mortice lock into door using the provided screws.

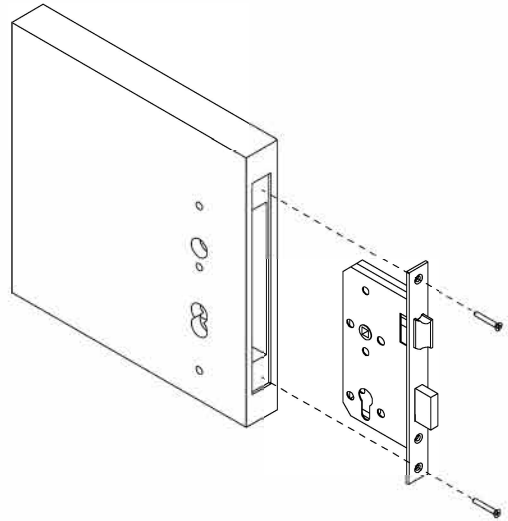


STRIKE PLATE


- ③ Check in jamb according to jamb cutting guide. Ensure strike plate is oriented so the tongue aligns with the door swing direction.

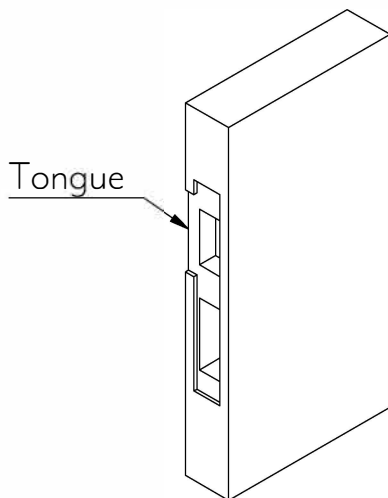

- ④ Screw in dust box and strike plate.

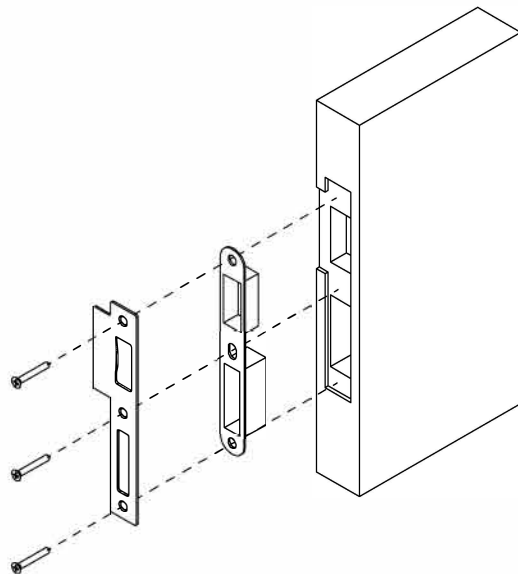

IN THE BOX



1x Mortice Latch



1x Strike Plate



1x Dust box



2x Mortice fixing screw



3x Striking plate fixing screw

MAINTENANCE:

- Regular clean with mild liquid detergent or soap and water.
- DO NOT use cream cleaners or bleach. These substances are abrasive.
- DO NOT use cleaning pads with abrasive surfaces as this may scratch material.