


INSTALLATION INSTRUCTION OF NARROW STILE DEAD LOCK WITH ROLLER CATCH (SQUARE, RADIUS CORNER)

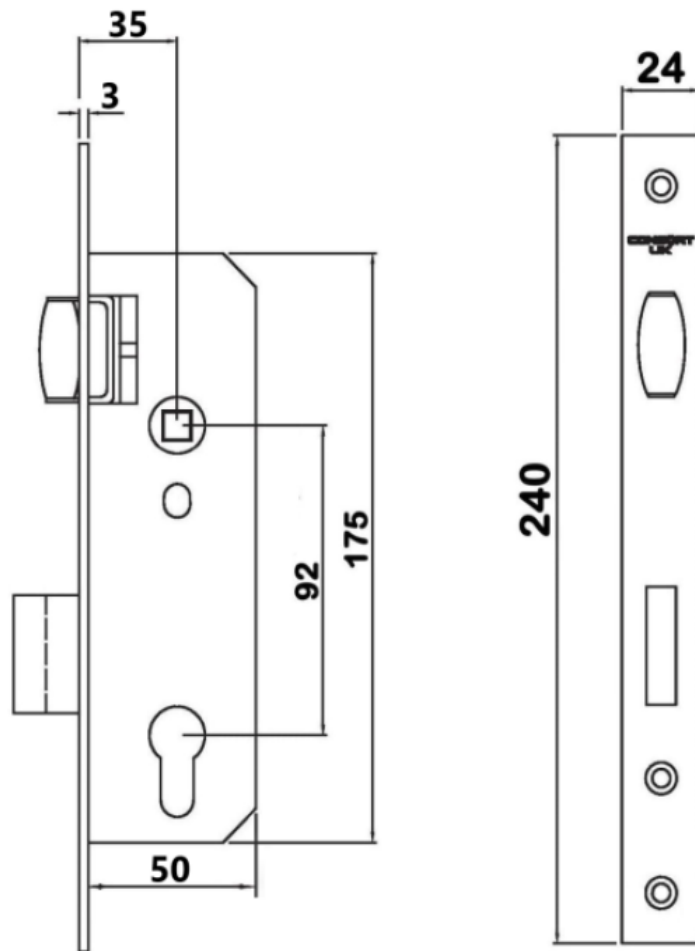


NOTE:

This product must be installed by a licensed trade.


This is a general installation guide – there are many factors that are involved that can alter the installation method.

MORTICE LOCK & EUROCYLINDER


- ① Check in door according to the cutting guide & Fix mortise lock into door using the screws provided

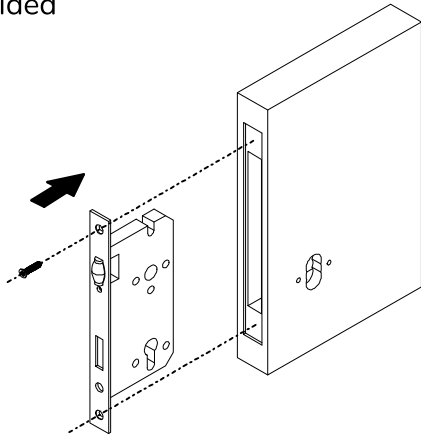

- ② Depending on your door use the snap-off Bolts or the fixings screw to secure the rose To either side of the door. Then push the cover plates over.

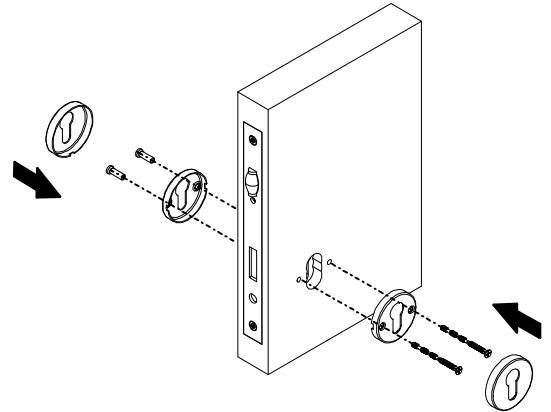


- ③ Insert the Eurocylinder and fix using the screw provided

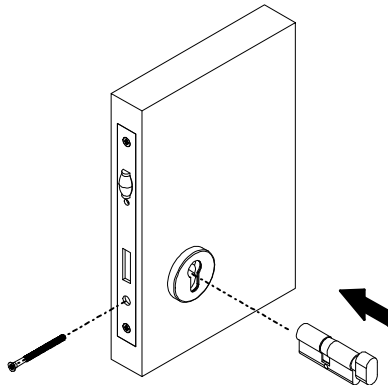


STRIKE PLATE

- ① Check in door according to the cutting guide & Fix mortise lock into door using the screws provided

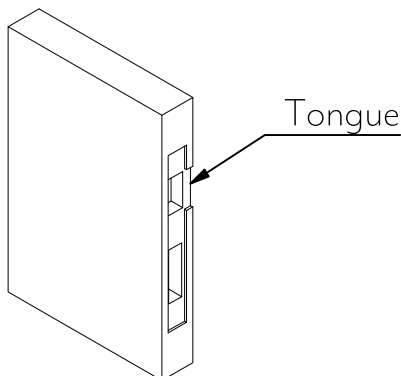

- ② Depending on your door use the snap-off Bolts or the fixings screw to secure the rose To either side of the door. Then push the cover plates over.

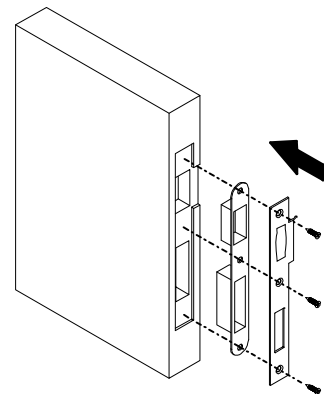

MAINTENANCE:

- Regular clean with mild liquid detergent or soap and water.
- DO NOT use cream cleaners or bleach. These substances are abrasive.
- DO NOT use cleaning pads with abrasive surfaces as this may scratch material.