



VONDOM®


INSTRUCTIONS TO FLOOR FIX / INSTRUCCIONES PARA FIJAR AL SUELO

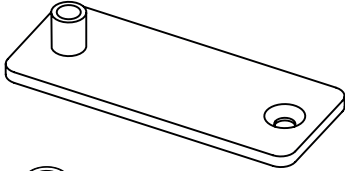

a x5




b x5




c x5



d x5

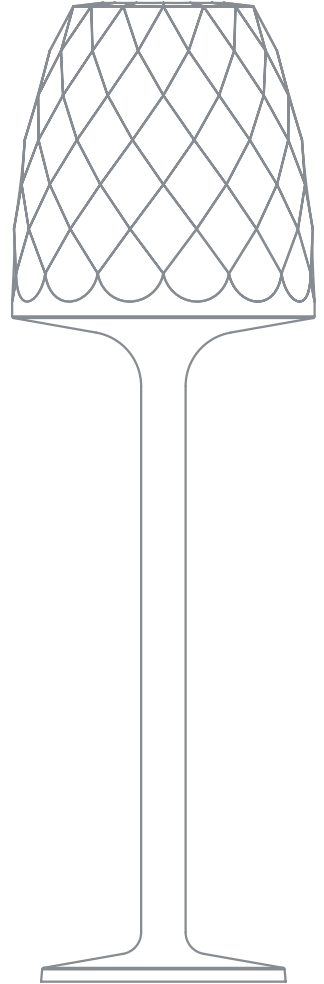

YOU NEED DRILL Ø 8 mm
NECESITA BROCA Ø 8 mm

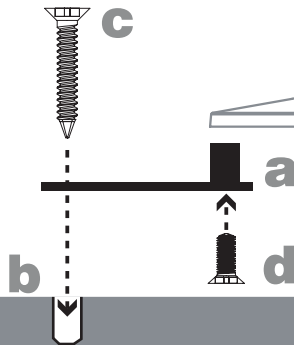

SUELO / FLOOR