


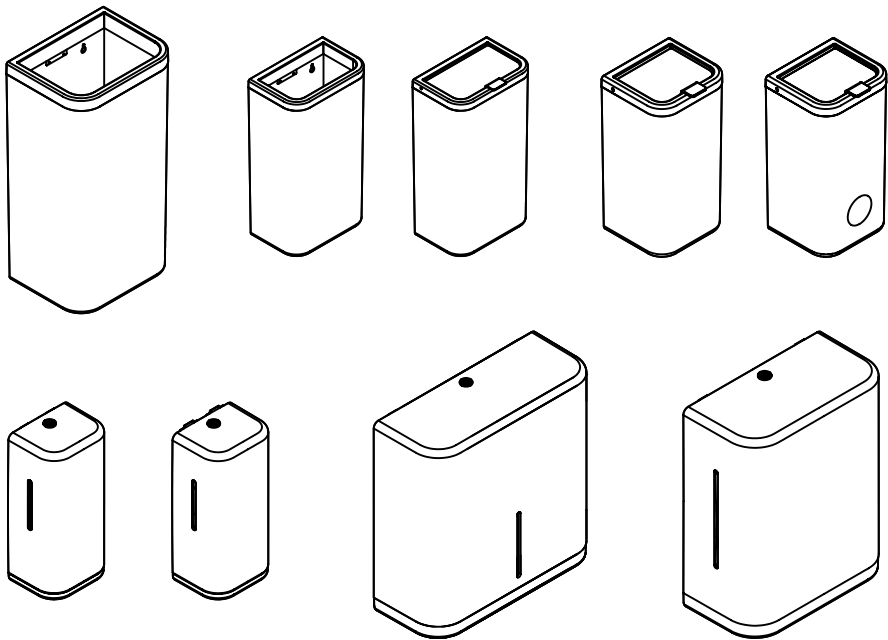



Reinigung und Pflege | Care and cleaning | Nettoyage et entretien
Reiniging en onderhoud | Manutenzione e pulizia | Cuidado y limpieza
Czyszczenie i pielęgnacja | Rengøring og pleje

<https://www.hewi.com/de/service/downloads>

 HEWI support

0044 1634 258200 (UK)
0049 5691 82-0 (international)

User information	4
Product information	8
Mounting/Use	9
Refill	26
Battery	27

Exclusion of liability

HEWI accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper mounting or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full. HEWI accepts no liability whatsoever for damage occurring from incorrect cleaning.


Safety instructions

These instructions are intended for qualified skilled personnel and the user of the installed product. Following installation, the instructions must be made available to the user.


- Follow with the installation instructions and instructions for use.
- In case of questions, problems, uncertainties or if damage occurs, contact the HEWI support service.
- Ensure that the product is installed, maintained and repaired by qualified, skilled personnel only.
- Check the product for damage on acceptance. Report defects immediately.
- Install/use the product only:
 - in accordance with its intended purpose
 - in its original condition without modifications
 - in perfect condition
- Use original spare parts only.
- Use only HEWI fixing materials.
- Ensure that the wall structure in the installation area is even and adequately load-bearing.
- Only use in closed rooms.

Disposal


Disposal of the product and packaging is subject to the relevant national regulations.

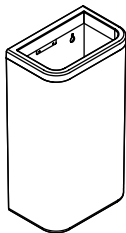


477.05.201...
477.05B201...

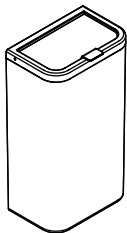

477.05.202...
477.05B202...

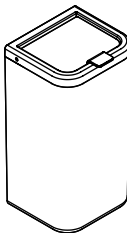


477.05.204...
477.05B204...

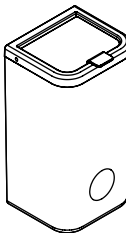


477.05.205...
477.05B205...

10 | HEWI


10 | HEWI

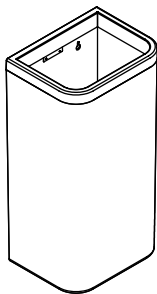

477.05.203...
477.05B203...

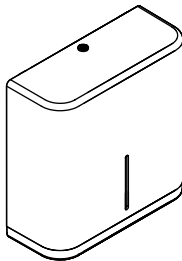

477.21.600...
477.21B600...

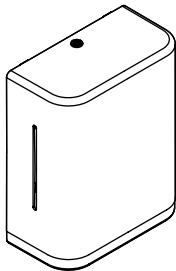


477.06.601...
477.06B601...


10 | HEWI

13 | HEWI

16 | HEWI



477.06.101...
477.06B101...




477.06.102...
477.06B102...
477.06.103...
477.06B103...
477.06.104...
477.06B104...

18 | HEWI


20 | HEWI

***Recommended heights**
adjust heights as required in
schools, daycare facilities etc.

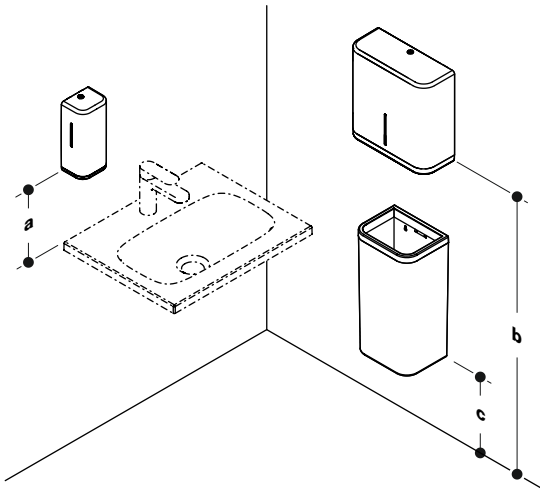

a ≥ 200 mm
b* = 1200-1400 mm
c* ≥ 200 mm





Tools required Outillage

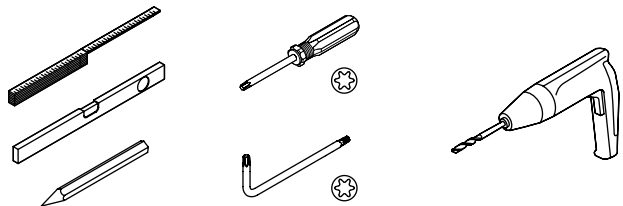





Mounting







477.05.203
477.05B203

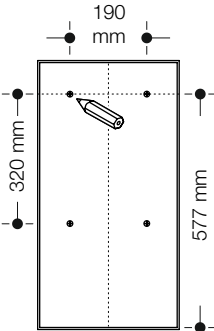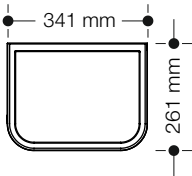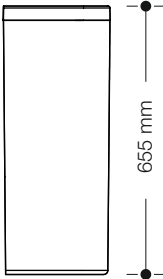


477.05.201
477.05B201

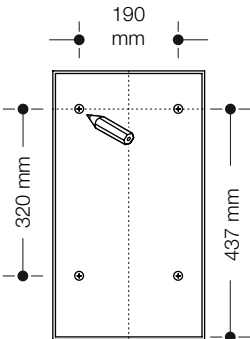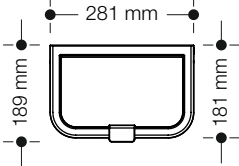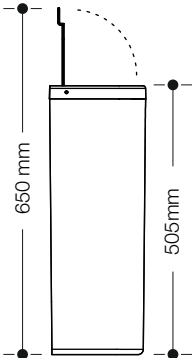




477.05.202
477.05B202

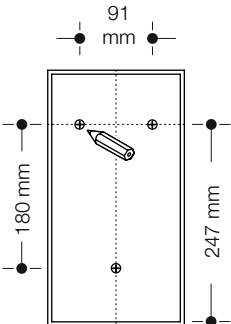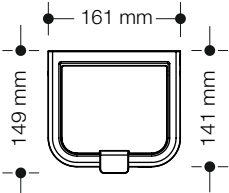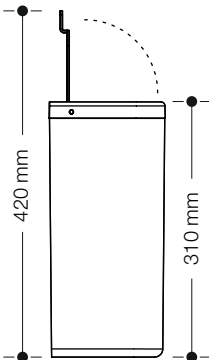


477.05.204
477.05B204




477.05.205
477.05B205

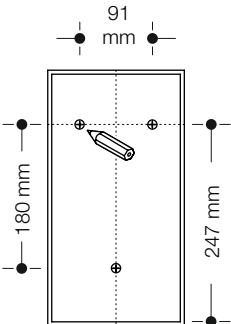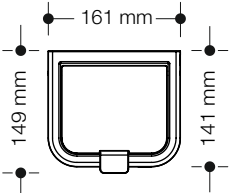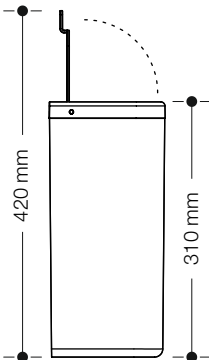

Mounting

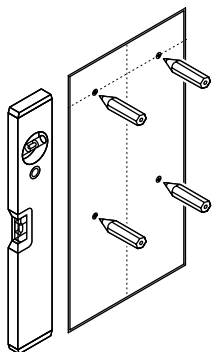


1

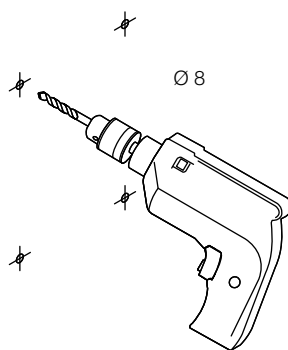

2

477.05...201...
477.05...202...
477.05...203...

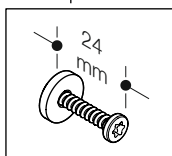


T25


477.05...204...
477.05...205...

T20


3

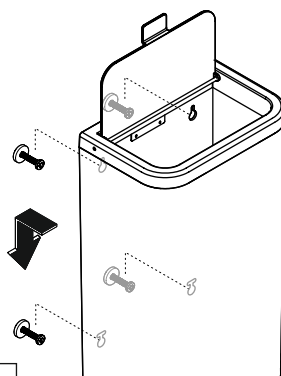

4

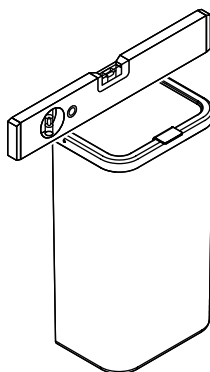


5

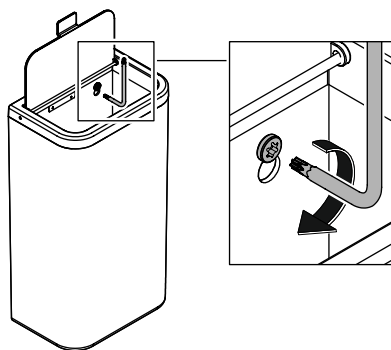

6





Instructions for use

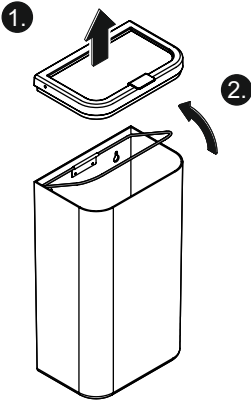

477.05.201...
477.05B201... 25-30 l
477.05.202...
477.05B202...

477.05.203... 60 l
477.05B203...




477.05.204...
477.05B204... 6 l
477.05.205...
477.05B205...

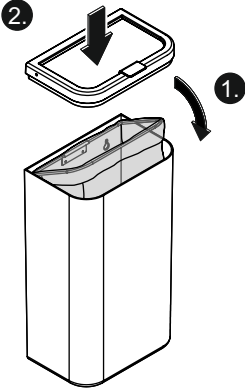

1

2

**only for
477.05...205...**

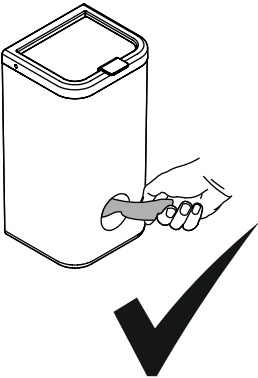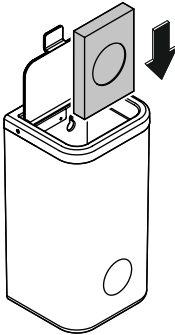
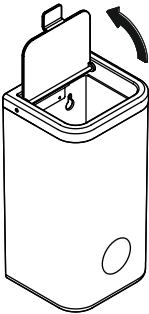





1

2



3

Mounting

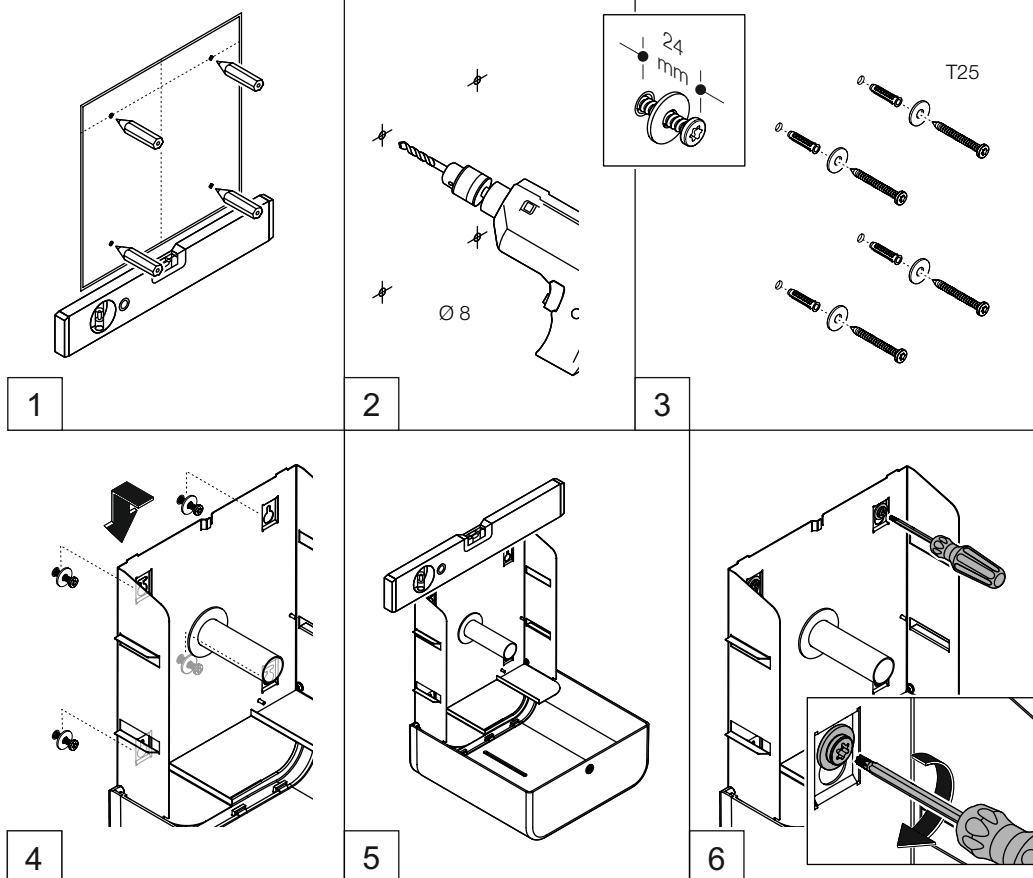
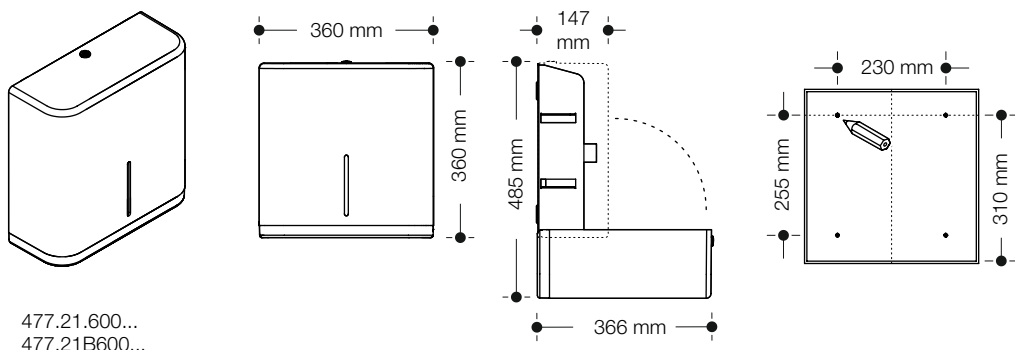


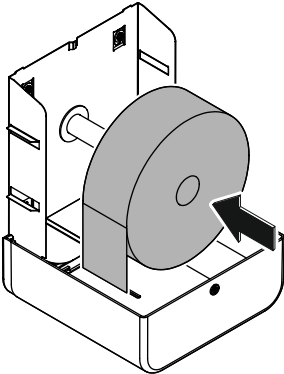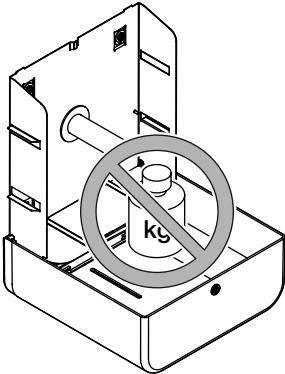


7

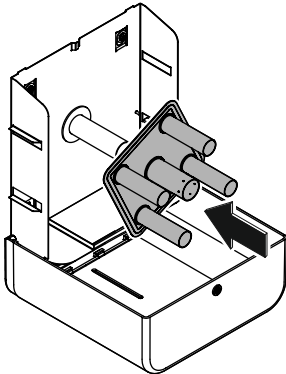

7.1

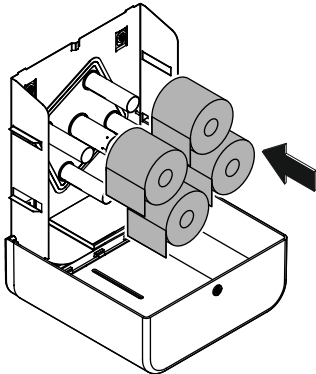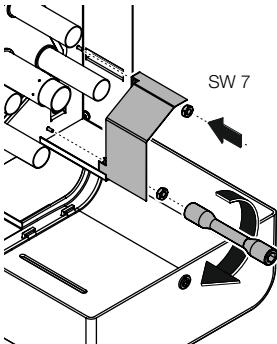


7.3

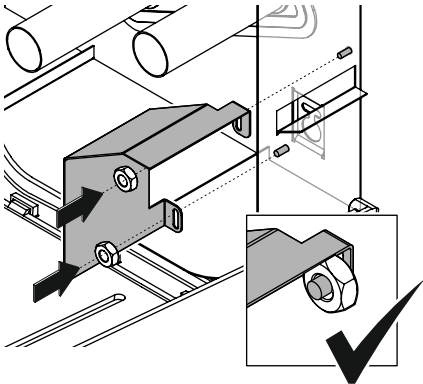

7.2


Mounting

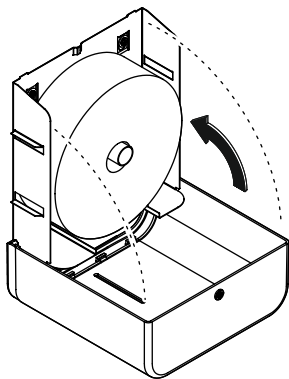

8





9


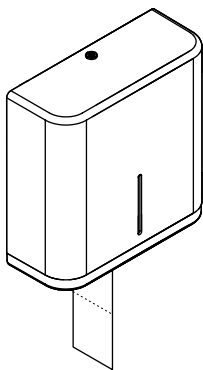


10

Mounting

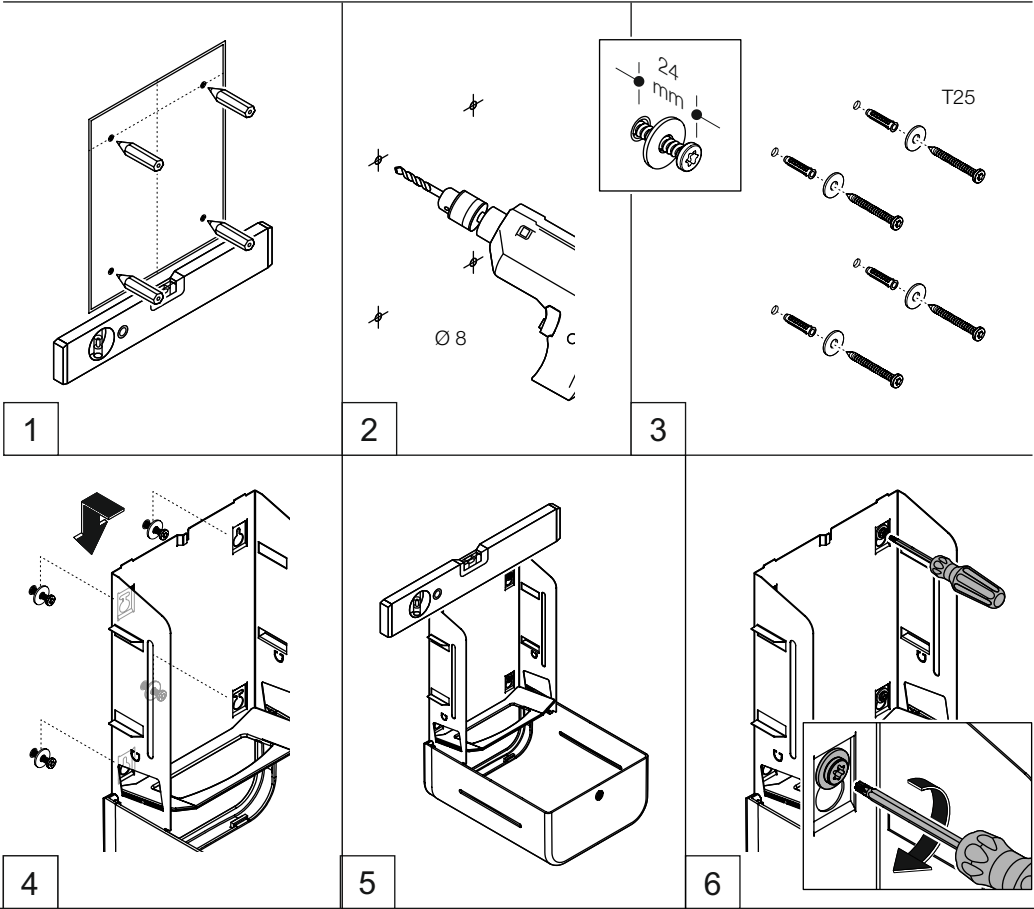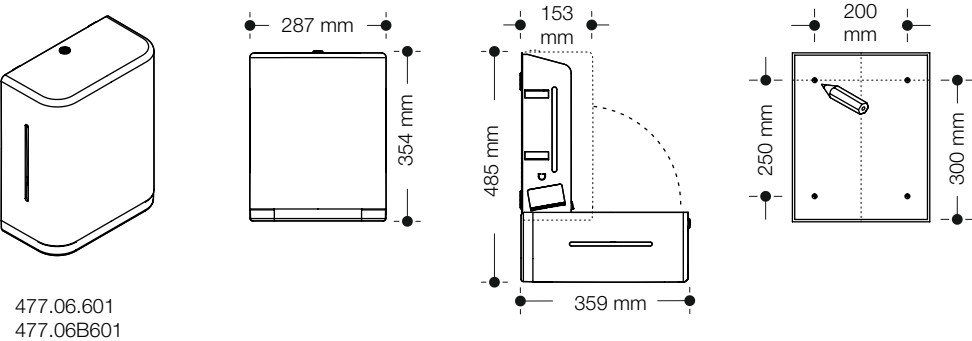


Mounting

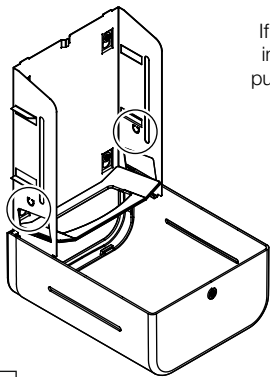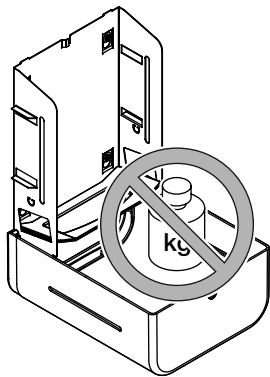


If necessary (depending on type of paper), put up flaps to prevent ripping the paper.




7

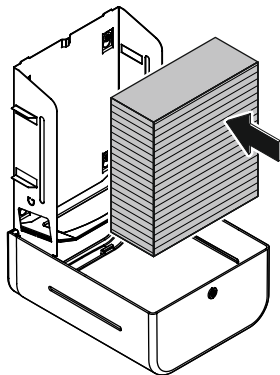


8

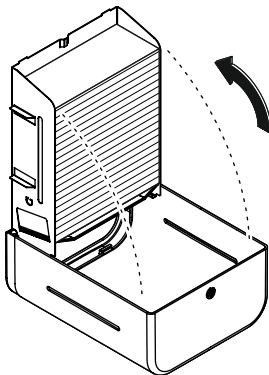

9


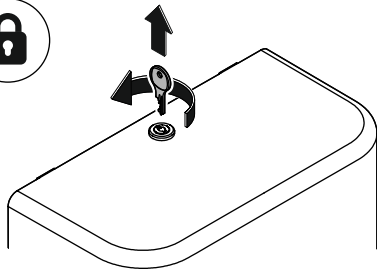


10

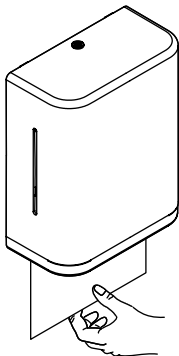


11


Mounting

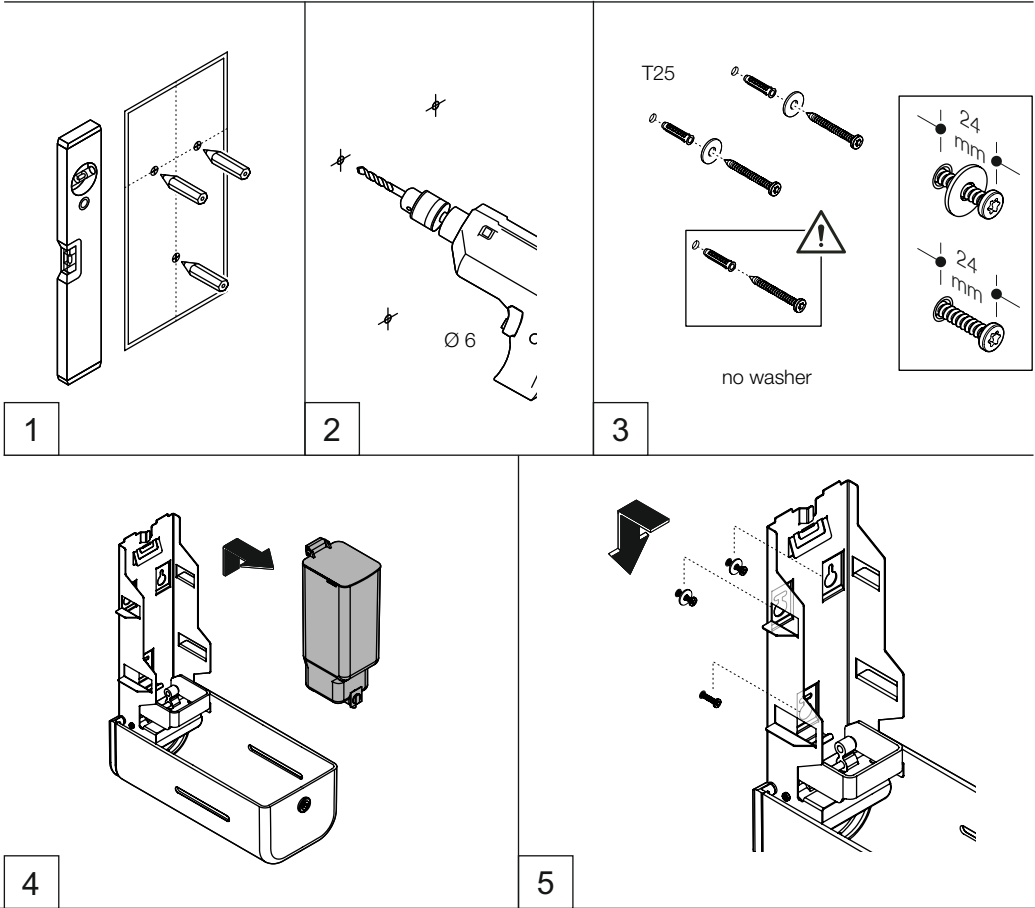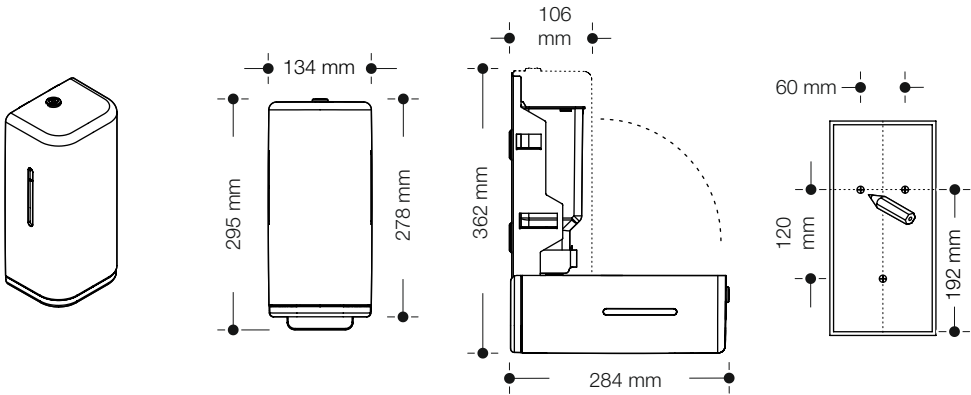



Mounting

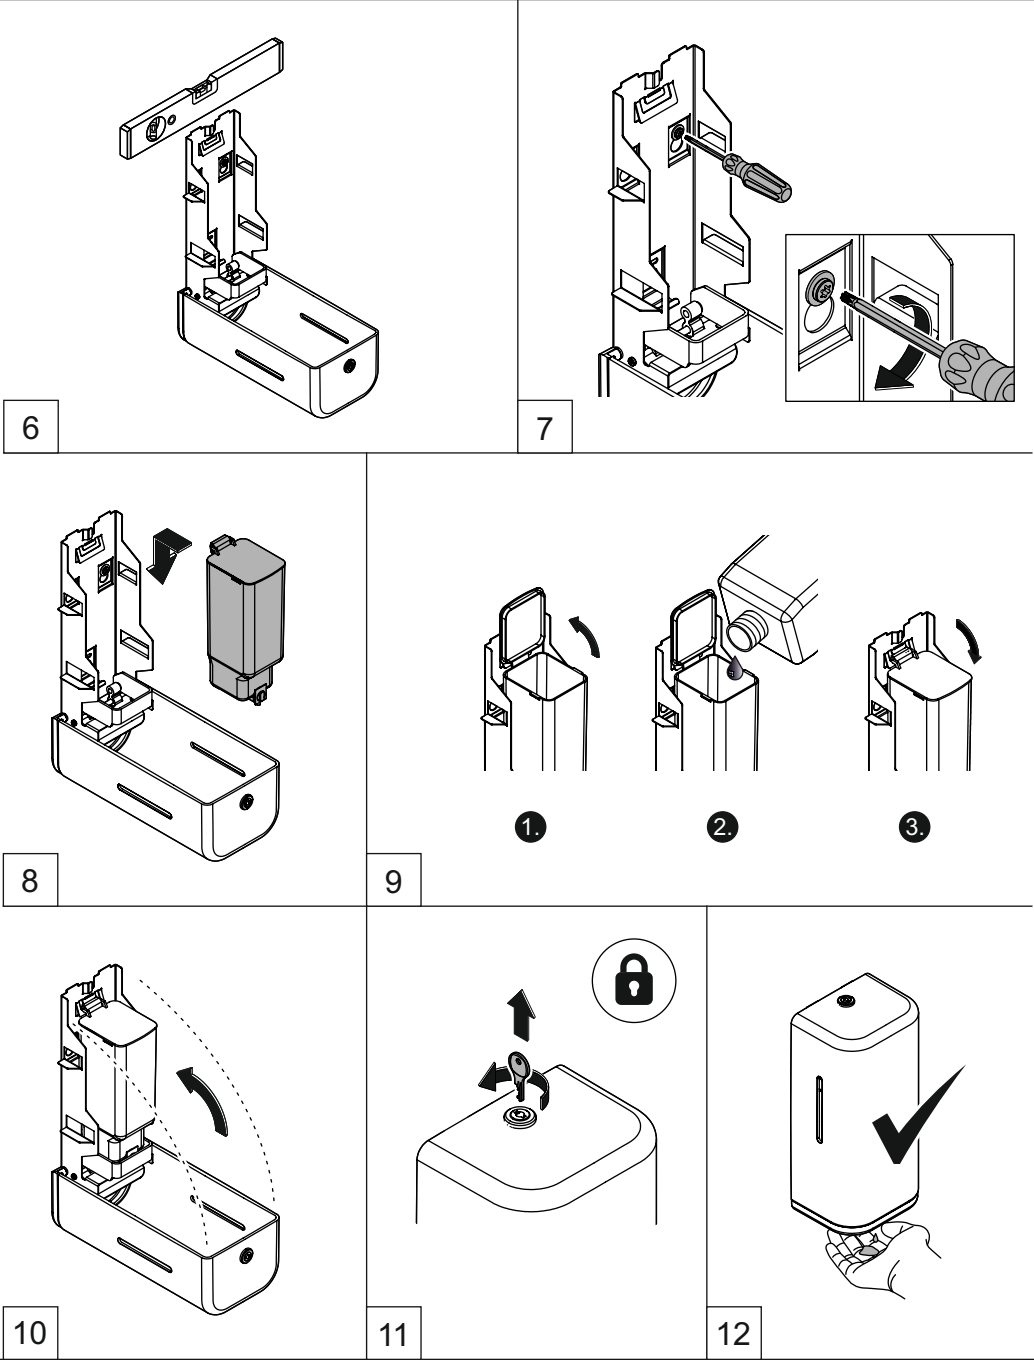

Mounting




477.06.102...
477.06B102...
477.06.103...
477.06B103...
477.06.104...
477.06B104...

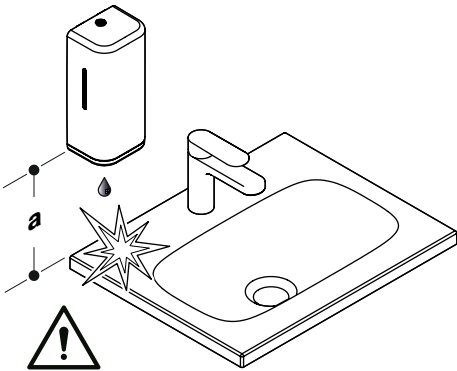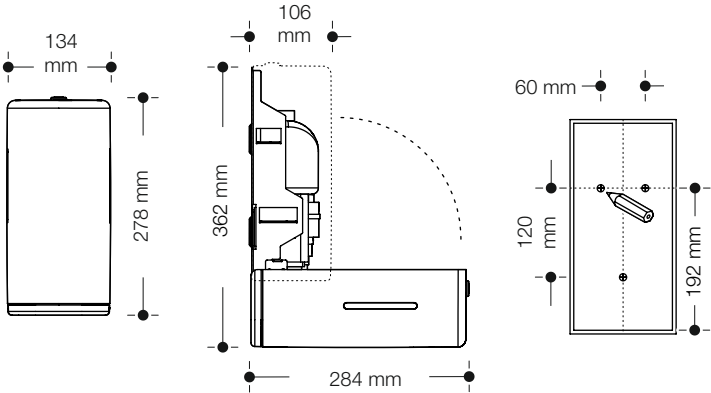


$a \geq 200 \text{ mm}$ ✓

$a < 200 \text{ mm}$


Unintentional activation by
light reflection (e. g. lamp)

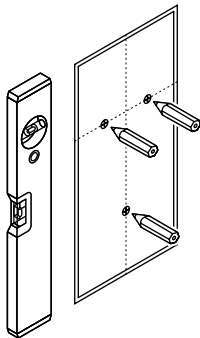


1

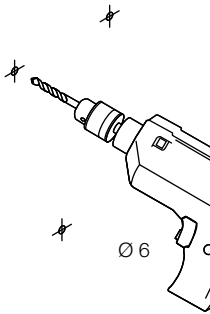


2

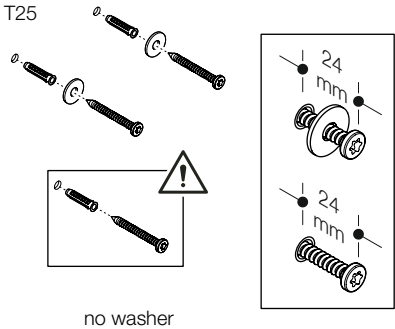


3

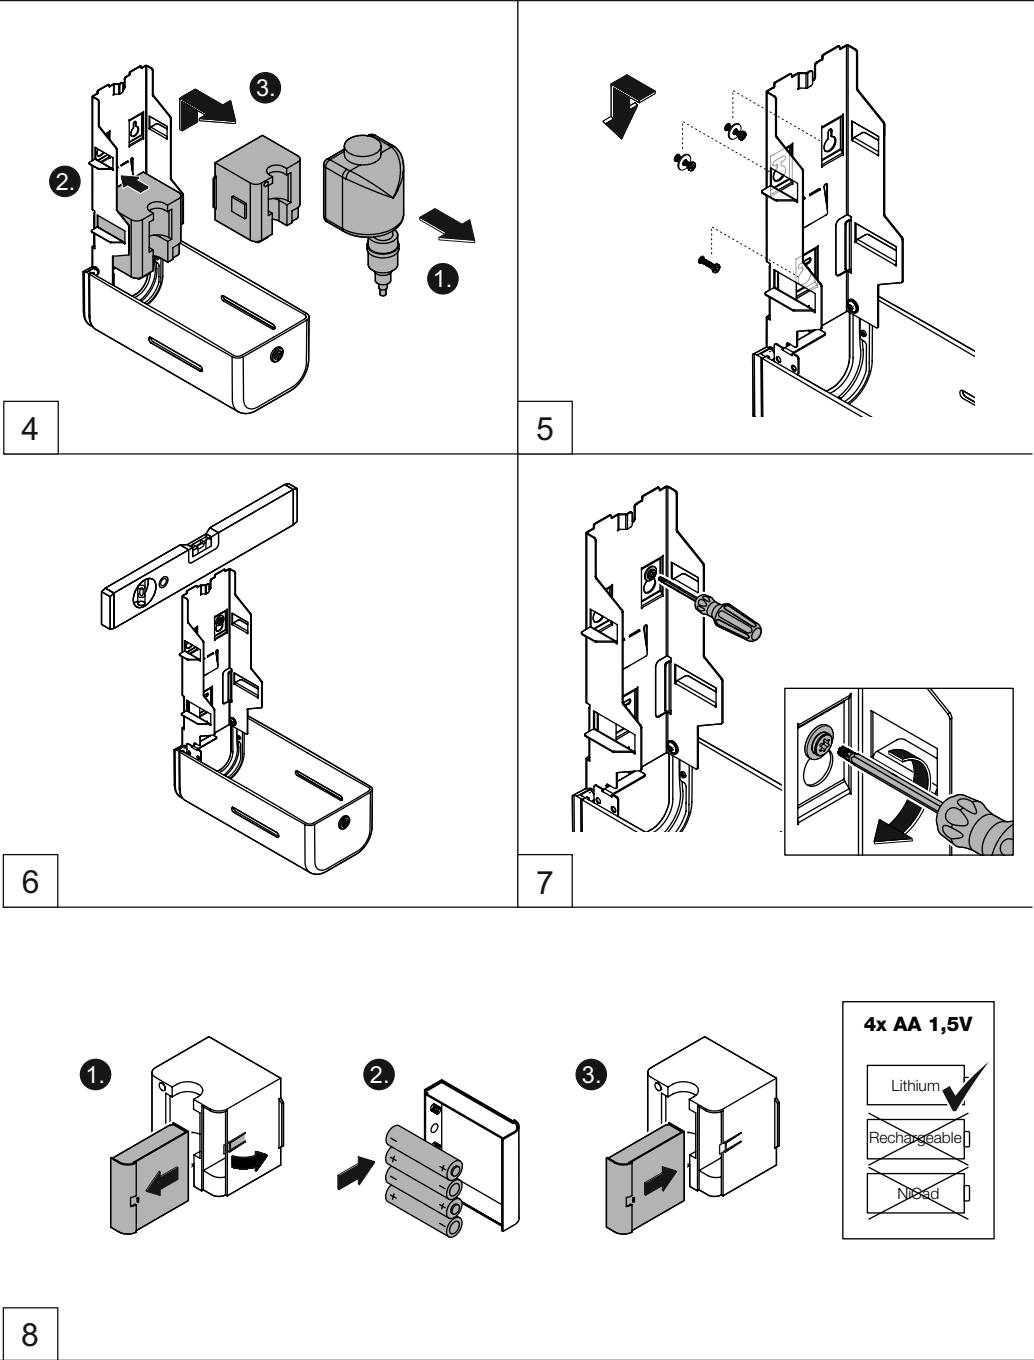


Mounting

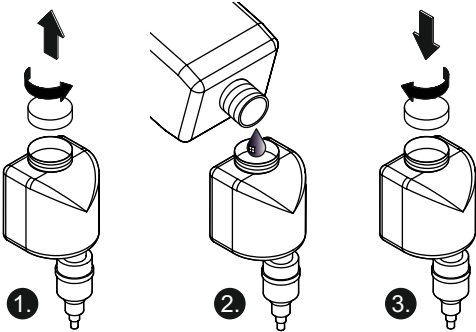


9

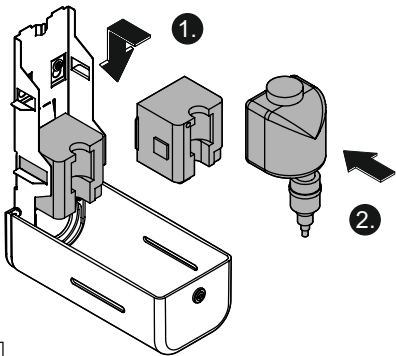



10

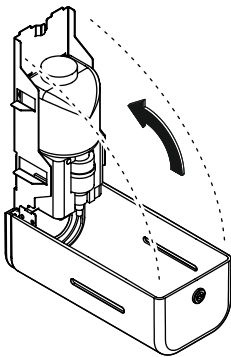

11

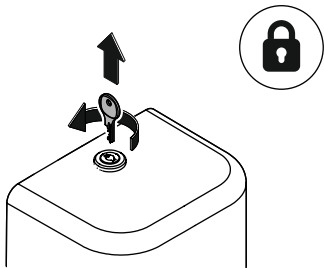

12

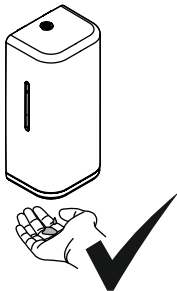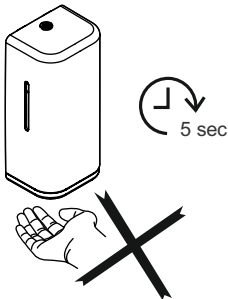


13

477.06.101...
477.06B101...
477.06.102...
477.06B102...
477.06.103...
477.06B103...
477.06.104...
477.06B104...


Only suitable for		Not suitable for
477.06(B)101... : - undiluted liquid soap - viscosity: 1500 - 4000 cps/mPa-s 477.06.102... : - undiluted liquid soap - viscosity: 1 - 3000 cps/mPa-s	477.06.103... : - foaming soap - viscosity: 1- 5 cps/mPa-s 477.06.104... : - all standard disinfectants	liquid soaps containing scouring agents
		liquid soaps that tend to thicken due to their ingredients (e.g. natural oils, alcohol, etc.)
		other cleaning products
• Mixing different sorts of soaps/disinfectants might impair the function. • Do not insert any objects into soap discharge opening. • Disregarding this recommendation could lead to individual parts of the product being damaged.		

477.06...101...

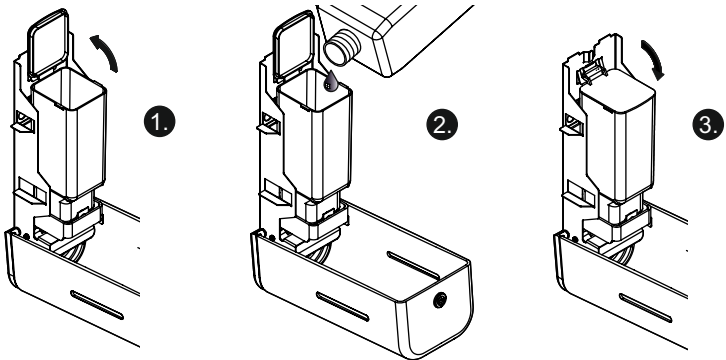


1




477.06...102...
477.06...103...
477.06...104...

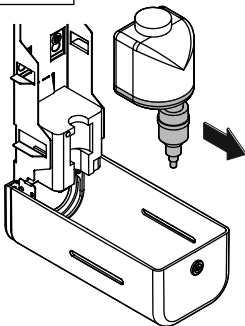

1

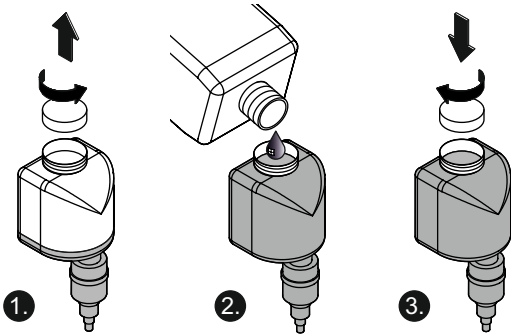


2

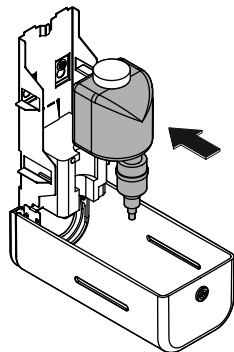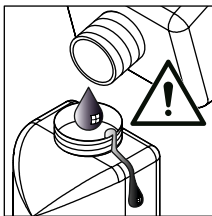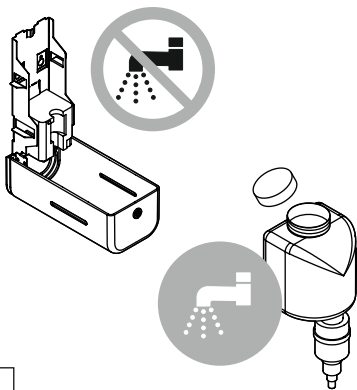


3



only for
477.06...102...
477.06...103...
477.06...104...

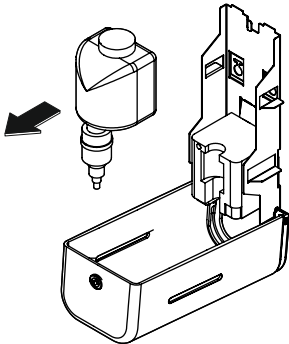

1

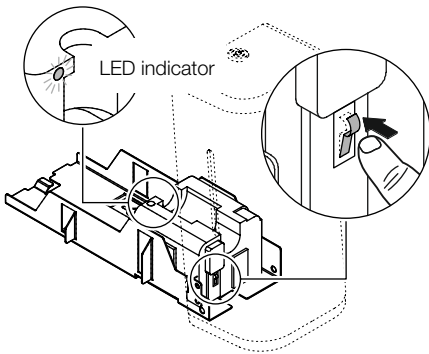


2


Check




Hold

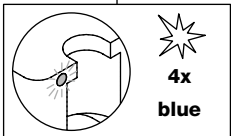

4x
blue

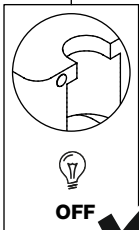


OFF

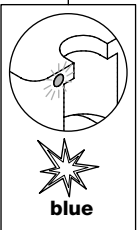

blue

Replace

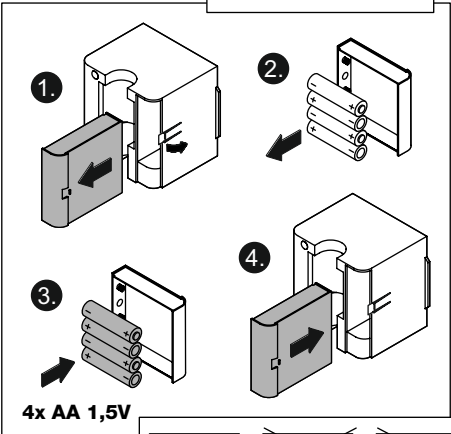

4x AA 1,5V

Lithium

Rechargeable

NiCad

3

HEWI

www.hewi.com



GERMANY

HEWI Heinrich Wilke GmbH

Prof.-Bier-Straße 1-5

D-34442 Bad Arolsen

Phone: +49 5691 82-0

Fax: +49 5691 82-319

international@hewi.de



M477.36M

2023/12